



3	Inter
3-01	Barrel
3-02	Barrel
3-03	Eject
3-04	Eject
3-05	Eject
3-06	Inter
3-08	Screw
3-09	C W
3-10	Screw
5	Mag
5-01	Mag
5-02	Mag
5-03	BB F
5-04	BB C
5-06	Mag
5-07	BB C

1-14	Axis	1	7	Valv
1-15	Screw	8	7-01	Valv
1-16	Screw	1	7-02	Valv
1-17	Recoil Spring	1	7-03	Pier
1-18	BB Stopper Spring	1	7-04	Valv
1-19	Fixing Guide Spring	1	7-05	Valv
1-20	Trigger Spring	1	7-06	Valv

1-01	Frame(L)	1	1-08	Safety Parts	1
1-02	Frame(R)	1	1-09	Safety Spring Seat	1
1-03	Mag. Catch	1	1-10	Trigger	1
1-05	Outer Barrel	1	1-11	Recoil Spring Stopper	1
1-06	Grip	1	1-12	Fixing Guide	1
1-07	Safety	1	1-13	BB Housing	1