





How to set VPL on PLM with Aero50

1. On "I/O Config" menu, click "Event & Control" sub-menu.

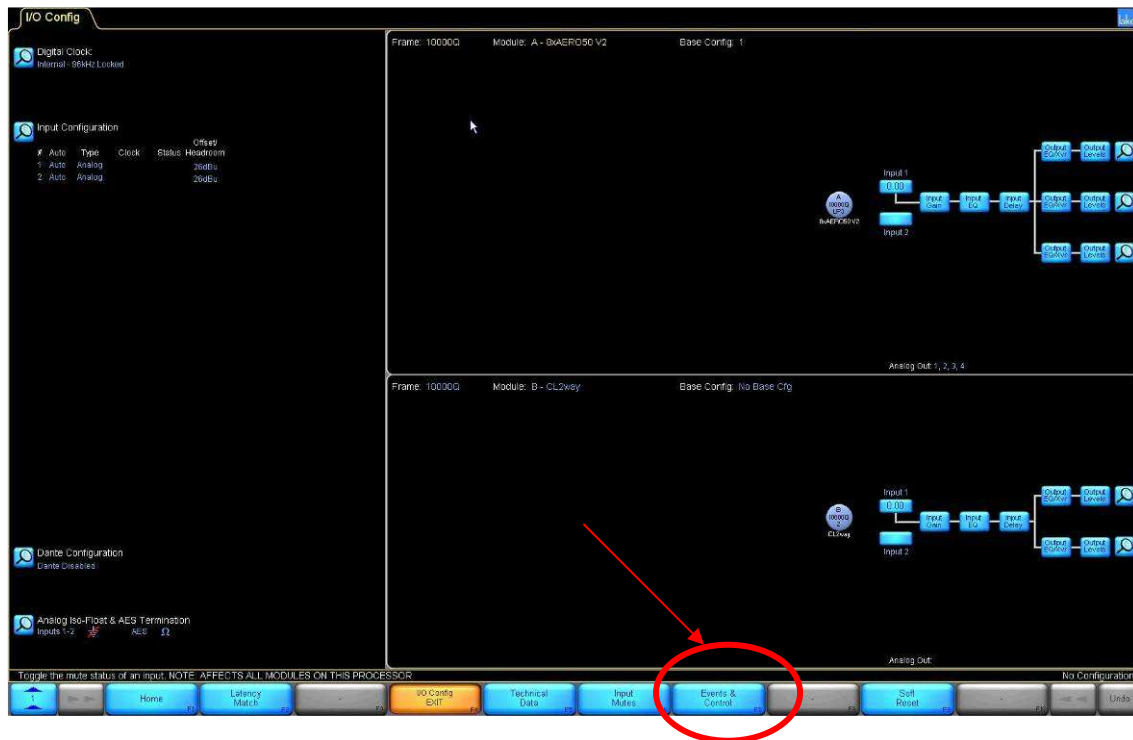

2. Click "Control" option.

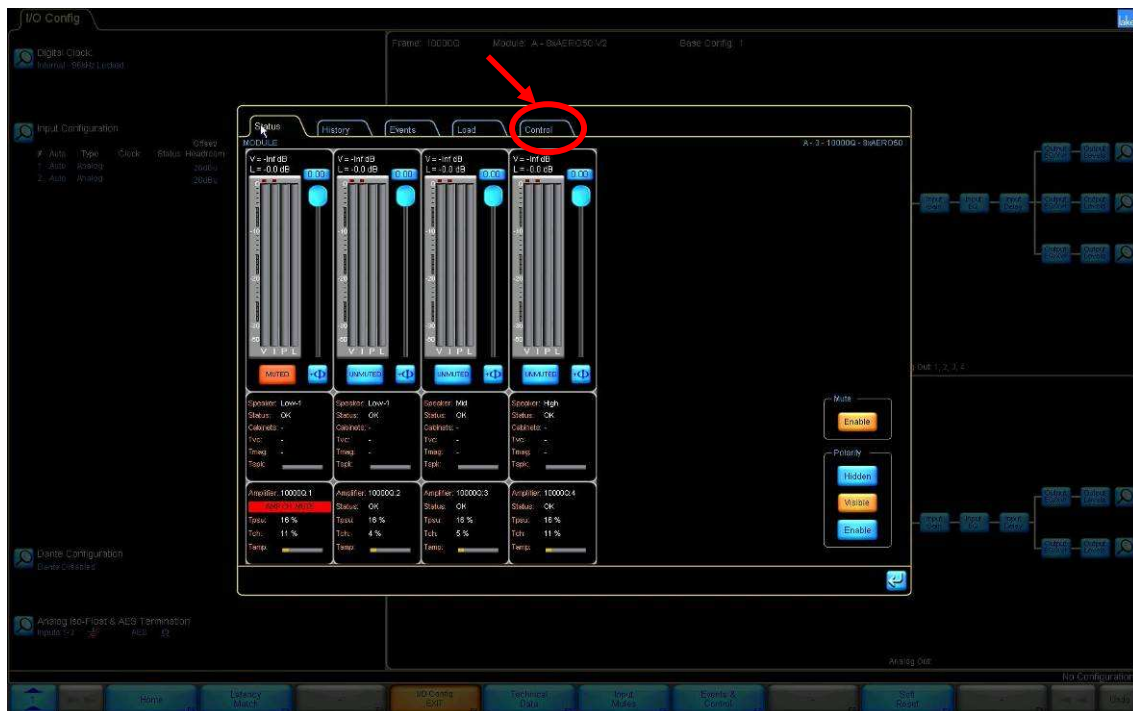



3. Chose or write:

.- Gain → 35 dB.

.- ISVPL threshold (V) → 121V Low, 121V Mid, 101V High.

