

**Safety warnings:**

**⚠** If the ceramic glass breaks or cracks, immediately unplug the stovetop to avoid electric shocks.

**⚠** This appliance is not designed to work with an external timer (not built into the appliance) or a separate remote control system.

**⚠** Do not steam clean this device.

**⚠** The device and its accessible parts may heat up during operation. Avoid touching the heating elements. Children younger than 8 years old must stay away from the stovetop unless they are permanently supervised.

**⚠** This device may solely be used by children 8 years old or older, people with impaired physical, sensory or mental abilities, or those who lack experience and knowledge, **ONLY** when supervised or if they have been given adequate instruction on the use of the device and understand the dangers its use involves. User cleaning and maintenance may not be done by unsupervised children.

**⚠** Children must not play with the device.

**⚠** Precaution. It is dangerous to cook with fat or oil without being present, as these may catch fire. Never try to extinguish a fire with water! in this event disconnect the device and cover the flames with a lid, a plate or a blanket.

**⚠** Do not store any object on the cooking areas

**of the stovetop. Prevent a possible fire hazard.**

**Installation**

**Placement with cutlery drawer**

If you wish to install furniture or a cutlery drawer under the stovetop, a separation board must be fitted between the two. Accidental contact with the hot surface of the device's housing is thus prevented.

The board must be fitted 20 mm beneath the under part of the stovetop.

**Electrical connection**

Electrical connection will be via an all-pole circuit breaker or plug, whenever accessible, in accordance with the current and with a minimum 3 mm distance between contacts. This ensures disconnection in emergencies and allows hot plate cleaning.

The connection must be earthed, in accordance with legislation in force.

Before you connect the hot plate to the mains, check that the voltage and frequency match those specified on the hot plate nameplate, which is attached underneath it, or on the technical data sheet, which you must keep together with this manual throughout the product's service life.

**⚠** Only the TEKA official technical service can handle or repair the appliance, including replacement of the power cable.

Ensure that the inlet cable does not come into contact with the hot plate housing or the oven housing, if it is installed in the same unit.

**📖** Keep the Guarantee Certificate or the technical data sheet together with the instructions manual throughout the product's service life. These contain important technical information.

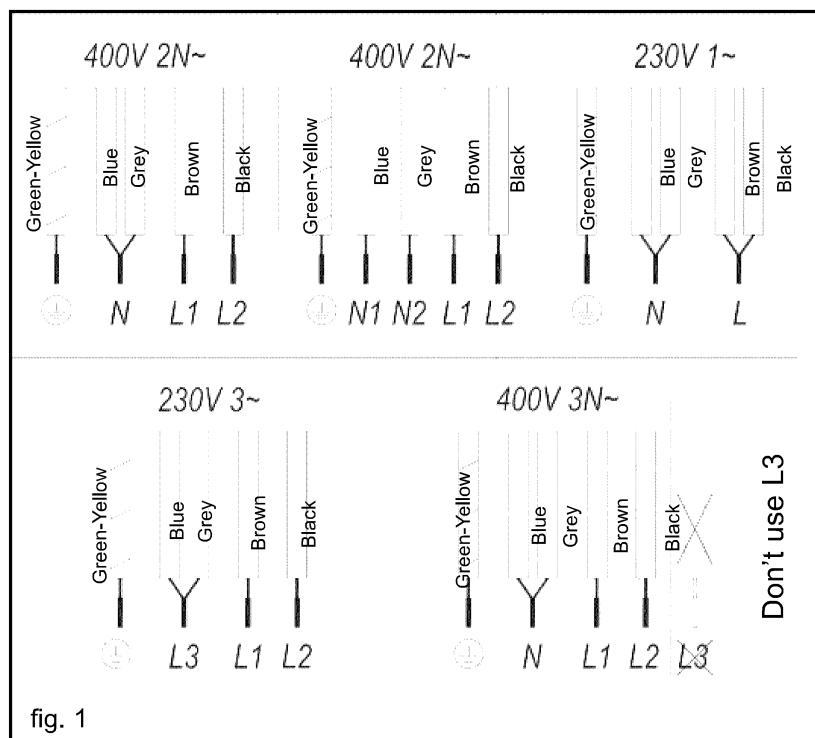


fig. 1

GB

# Use and Maintenance

## Instructions for Using the Touch Control

CONTROLS (figs. 2 and 3)

- ① On touch button.
- ② Off touch button.
- ③ "Increase" power touch button.
- ④ "Decrease" power touch button.
- ⑤ Hot plate display.
- ⑥ Double/triple burner selection button (multiple burner hot plate).
- ⑦ Lock touch button (to lock the other touch buttons, except the on and off buttons).
- ⑧ Hot plate double burner on display.
- ⑨ Lock activated display.
- ⑩ Stop function touch button.
- ⑪ Clock display.
- ⑫ Hot plate display.
- ⑬ "Decrease" time touch button.
- ⑭ "Increase" time touch button.
- ⑮ Timer/clock display.
- ⑯ Power display.
- ⑰ Hot plate burners operating display.
- ⑱ Clock running display.

\* Only visible while running.

The touch buttons activate the controls, and each is linked to a display. You do not need to exert force on the touch button, you only need to touch it with the tip of your fingertip to activate the function.

Each action is verified by a beep.

### SWITCHING THE APPLIANCE ON

1 Press the on touch button ① (1) for at least one second. The touch control will become activated, you will hear a beep and the displays will light up. If any surface is hot, the display will flash *H* and *U* alternately.

If you do not take any action in the next 10 seconds the touch control will switch off automatically.

When the touch control is activated, you can disconnect it at any time by touching the touch button ② (2), even if it has been locked (lock function activated). The touch button ② (2) always has priority to disconnect the touch control.

### ACTIVATING THE HOT PLATES

The hot plates will be deactivated, with their respective power displays (16) to *U*, until a power level is selected. If all of the hot plates are at *U*, you have 10 seconds to activate one of them, otherwise the touch control will switch off automatically.

Use the touch buttons ⊖ and ⊕ (4/3) to select a power level. If you press the touch button ⊕ (3), the hot plate will change to 1 and the hot plate burner display (17) will light up. Keep pressing it to increase the power level. You can lower the power level using the touch button ⊖ (4).

Quick switch-on at maximum power: with the hot plate at *U*, press the touch button ⊖ (4) once. The hot plate will go straight to 9.

If you keep either of these two touch buttons ⊖ or ⊕ (4/3) pressed down, they will repeat the action every half a second, without you needing to press them again.

### SWITCHING THE HOT PLATES OFF

Using the touch button ⊖ (4) lower the power to *U*.

The hot plate will switch off automatically.

Quick switch-off: Regardless of the power level, if you press touch buttons ⊖ and ⊕ (4/3), the hot plate will switch off immediately.

### RESIDUAL HEAT display



The power display will display an *H* when the glass surface reaches a temperature that could cause burning. When this risk disappears, the display switches off (if the appliance is disconnected), or displays a *U* (if the appliance is still connected).

Switch the hot plate off before the cooking time ends to make the most of the residual heat and save on electricity.

**Warning:** If while the *H* is still displayed there is a power cut and the power returns immediately, the residual heat displays will not light up again, even though the cooking surfaces are still hot. Bear this in mind.

### SWITCHING THE APPLIANCE OFF

You can disconnect the hot plate at

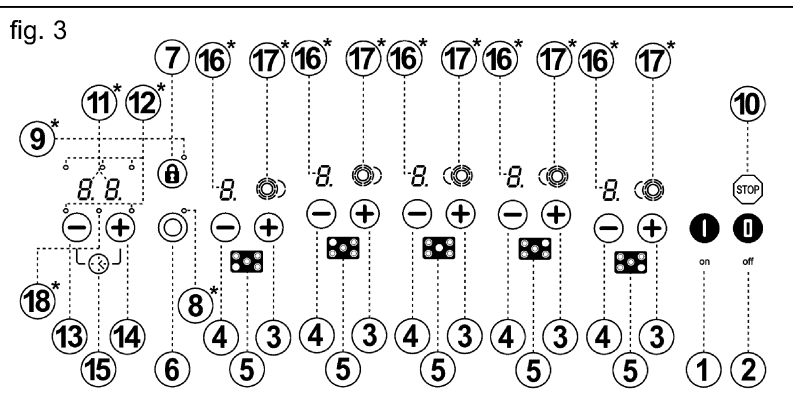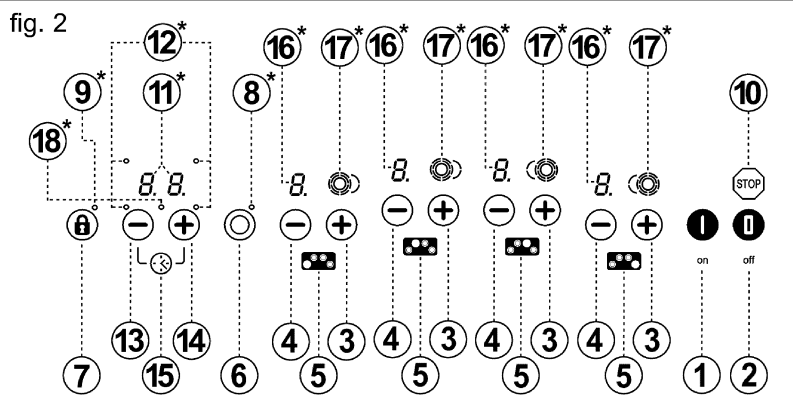

any time by pressing the touch button **⏻** (2). You will hear a noise and the power displays (16) will switch off, except for the *H* residual heat display, if necessary due to the surface temperature.

### Double and Triple Burner Hot Plates

With double and triple burner hot plates you can use the inner ring, or the inner and the outer rings, depending on the size of the pan.

#### CONNECTING / SWITCHING THE DOUBLE BURNER HOT PLATE ON

- 1 Select the desired power (from 1 to 9) by pressing touch button **⊕** or **⊖** (3/4). The hot plate burner display (17) will light up.
- 2 Press the multiple burner hot plate touch button **⊙** (6) and then the touch button **⊕** or **⊖** (3/4) for the chosen hot plate. The hot plate display (17) will show the second ring.

#### DISCONNECTING/SWITCHING THE DOUBLE BURNER HOT PLATE OFF

- 1 Press the multiple burner hot plate touch button **⊙** (6) and then the touch button **⊕** or **⊖** (3/4) for the chosen hot plate. The second ring will disappear from the hot plate burner display (17).

#### CONNECTING / SWITCHING THE TRIPLE BURNER HOT PLATE ON

With triple burner models, if once the second burner has been switched on you press the multiple burner hot plate touch button **⊙** (6) and then the touch button **⊖** or **⊕** (3/4), instead of the second burner switching off, the third one will switch on.

#### DISCONNECTING / SWITCHING THE TRIPLE BURNER HOT PLATE OFF

To disconnect the third burner, press the multiple burner hot plate touch button **⊙** (6) and then the touch button **⊖** or **⊕** (3/4). The third ring will disappear from the hot plate burner display (17).

If you repeat this step the second burner will be disconnected and the

display will switch off (17).

### STOP function

This function allows you to pause the cooking process. If the timer function is activated, it will also go into pause mode.

#### Activating the Stop function

- 1 The pans are on the cooking surfaces, which are on at a specific level.
- 2 Press the Stop touch button **⏻** (10). The power displays (16) will display the letter S-T-O-P successively instead of the selected cooking levels. The function will be paused.

#### Deactivating the Stop function

- 1 Press the Stop touch button **⏻** (10) and then any other, except the off button **⏻** (2). The cooking process will resume with the same power levels and set as previously.

You must press the second touch button within 10 seconds or the function will be deactivated. The appliance will switch off if the cooking process is not resumed after a ten minute pause.

### Function to keep a pan hot

You can use this function to keep food hot in a pan on the cooking surface.

- 1 There is a pan on one of the hot plates with a previously set cooking level.
- 2 Press the touch button **⊖** (4) and keep it pressed down until the cooking level lowers to **U**. This is an intermediate level between **U** and **1**.

To disconnect this function, just press the minus button **⊖** (4) until it reaches **U**. This function will only work for a maximum of 120 minutes, after which the appliance will switch off.

### Safety switch off function

If due to an error one or several hot plates do not switch off, the appliance will be automatically disconnected after a set amount of time (see table 1).

Table 1

Selected power	Maximum operating time (in minutes)
1	520
2	402
3	318
4	260
5	212
6	170
7	139
8	113
9	90

When the "safety switch off" function has been activated, a **U** is displayed if the glass surface temperature is not dangerous for the user or an *H* if there is risk of burning.

To reconnect the appliance, switch it off by pressing the off button **⏻** (2) and then on again.

### Automatic cook start

This function makes cooking easier because you do not have to be present. The touch control pre-programmes the chosen hot plate at the maximum power and lowers it to the desired power (which you have selected) after a given amount of time (see table 2).

Table 2

Selected power	Automatic Cook Start Function (Time in seconds)
1	50
2	90
3	150
4	220
5	320
6	540
7	150
8	240
9	—

#### SWITCHING THE AUTOMATIC COOK START FUNCTION ON

- 1 Set a hot plate to power 9 and then press the touch button **⏻**. The power display will flash 9 and 8 alternately. Lower the touch button to the desired cooking power (for example 6). The display will flash 6 and 8 alternately.

**GB****Example:**

You want to cook at power level 5 and program a quick heat at the beginning.

Choose power level 9. Press the touch button ⊕ again and the power display will flash 9 and 8 alternately. Then press the touch button ⊖ to lower it to power level 5. The system keeps the hot plate at power level 9 (maximum) for 540 seconds, flashing 5 and 8 alternately, and then (after 540 seconds) it automatically lowers to continuous cooking level 5.

**CHANGING THE POWER LEVEL DURING AUTOMATIC COOK START**

- 1 Use the touch button ⊕ (3) to change the power level.

When the power is increased using the touch button ⊕ (3) the time that has passed until then is taken into account

**Example:**

You have chosen power level 7 (50 seconds automatic cook start) and after 20 seconds you change it to 4 (220 seconds). The automatic cook start will be 200 seconds (220 minus 20).

**DISCONNECTING THE AUTOMATIC COOK START FUNCTION**

After at least 10 seconds have passed since the automatic cook start function was activated:

- 1 Press the touch button ⊖ (4). The automatic cook start function will be deactivated.

**Stopwatch function**

This function allows you to set a time, after which a warning sound is heard.

To activate the function:

- 1 With the touch control on and the timer not set for any hot plate, simultaneously press the clock touch buttons ⊖ or ⊕ (13/14).
- 2 The clock display switches on (11), displaying 00, and the pilot light (19) will flash.
- 3 Press the touch buttons ⊖ or ⊕ (13/14) again until you set the desired time. After a few seconds

the decimal point will start to flash, showing that the countdown has begun.

Once the countdown is complete, you will hear a series of beeps, which you can stop by pressing any of the touch buttons.

If at any time during the countdown function all of the hot plates are at power level 0, the touch control will switch off after a few seconds, but the stopwatch will continue to the end of the countdown or until you stop it.

To stop the stopwatch, just set the remaining time to 00. Firstly, to select it, simultaneously press the touch buttons ⊖ and ⊕ (13/14).

**Timer function**

This function makes the cooking process easier because you do not have to be present: the timed hot plate(s) will switch off automatically after the set time has lapsed. There is a separate timer for each hot plate, which allows all of the hot plates to be timed simultaneously.

The function is controlled using the clock (15) increase/decrease time touch buttons ⊖ and ⊕ (13/14).

**Timing ONE hot plate.**

To activate the timer for one hot plate:

- 1 Connect the appliance and activate one or several hot plates at a set power level.
- 2 Simultaneously press the clock touch buttons ⊖ or ⊕ (13/14).
- 3 The display comes on (11), displaying 00. The clock pilot light (19) will flash.
- 4 Press both touch buttons successively until the pilot light for the hot plate that you want to time switches on (12).
- 5 Use the clock ⊖ or ⊕ touch buttons (13/14) to select a cooking time between 1 and 99 minutes. The increase touch button (14) starts at 1, and the decrease button (15) at 30.

The timer will be set for the hot plate. Once the countdown is complete, the timed hot plate will switch off and you will hear a series of beeps, which you

can stop by pressing any of the touch buttons.

**Setting the timer for more than one hot plate.**

Repeat the steps above.

**Changing the programmed time.**

You can change the time afterwards.

- 1 Simultaneously press the clock touch buttons ⊖ or ⊕ (13/14).
- 2 Press both touch buttons successively until the pilot light for the hot plate that you want to time switches on (12).

Now you can read and change the value. If you want to cancel the timer early, use the touch button ⊖ (13) to set it to 00.



**Remember that if during the countdown you switch the touch control off by pressing the off button ❶ (2) the countdown will be cancelled!**

**Locking the hot plate touch buttons**

You can use the lock button ❷ (7) to lock all of the buttons on the touch control panel. This prevents functions from being activated accidentally and children from playing with the controls.

To activate or deactivate the function, keep the touch button ❷ (7) pressed down for around 1 second. When the function is activated, the pilot light (9) lights up.

Remember that when the touch control is on, you can still switch it off using the off button ❶ (2) even if the lock function is activated (pilot light 9 on). When you reconnect the cooker using the touch button ❶ (1), to be able to operate the touch control you must first deactivate the lock function by pressing the touch button ❷ (7) again.

**Child safety**

This function prevents children from connecting the appliance deliberately or accidentally.

The safety function must be activated after the appliance has been connected, following the steps in figure A. Firstly press the on button (step 1). Then simultaneously press the touch

