

# Küppersbusch

FÜR KÜCHEN MIT STIL

---

## **K8 / B6850, BP6850**

### **Control elements**

This manual describes the controls of the K-8 oven.  
Instructions for K-Connect as well as the detailed  
Instructions can be found in separate documents.



Control elements

Legend.....4

Softkeys.....5

Buttons.....6

Selectors.....8

Interaktive and informative Elements.....9

Swipe indicator ..... 10

Scala..... 12

Requests ..... 13

Edit profiles, recipes & notes..... 14

Keyboard..... 15



Swipe up / down



Tap



Swipe right




Swipe left



Information

## Softkeys

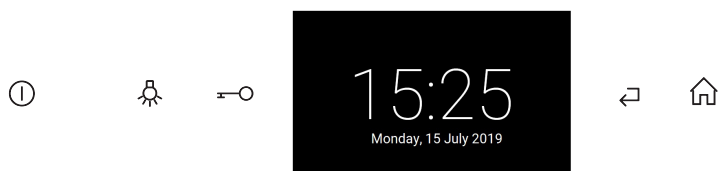**On/Off**

Tap and hold

**Light**

Tap and hold

**Childlock**

Hold

**Back**

Tap


**Homescreen**

Tap

Enabled = lighted

Disabled = not lighted


Buttons

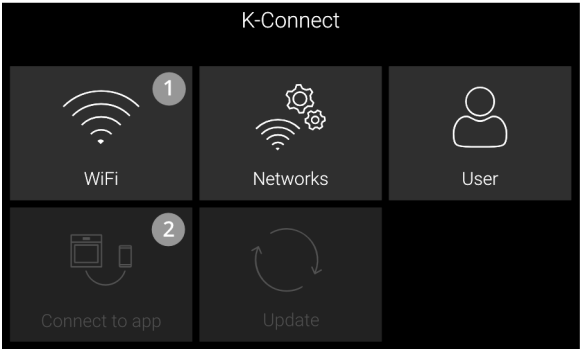


1. **Active**

2. **Inactive**

Functions are present but there is no condition for interaction (missing internet connection)

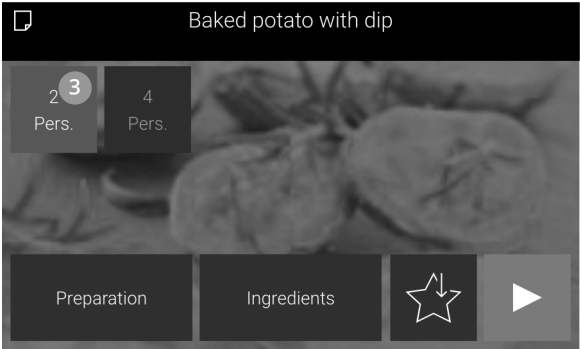


3. **Selected**

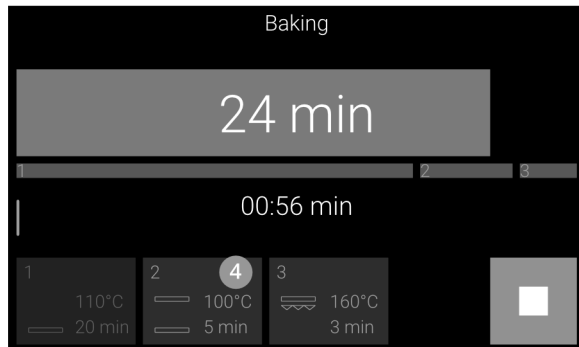


#### 4. Confirm

A previously confirmed setting appears in this state.  
Interaction is possible during this state.

Selectors

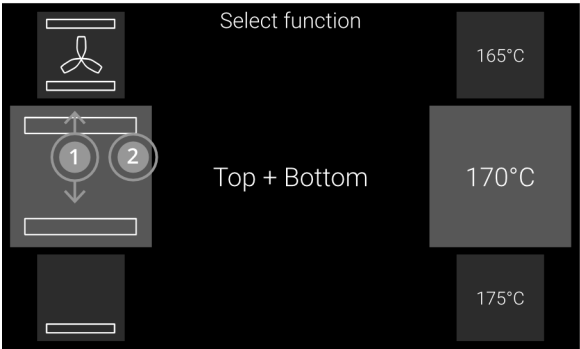

- 1. The function is selected by wiping the roller
- 2. Confirm by tapping the middle tile

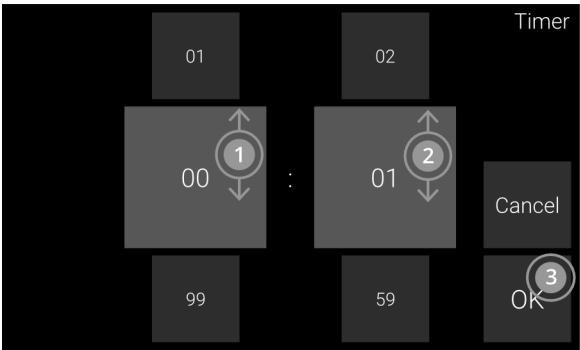

- 1, 2. The time is selected by wiping the rollers
- 3. Confirm by tapping the OK tile



## Interactive and informative Elements

Interactive elements of the headline are positioned on the left side. These allow quick access to functions such as end time, alarm or stopwatch.




1. Interactive elements: end time, timer, alarm, stopwatch, extra time, notes
2. Informative elements: WiFi, roasting thermometer, Turn the food, meat probe, childlock, doorlock, eco mode

Swipe-Indicator



1. Swipe left / tap the tile to show more functions

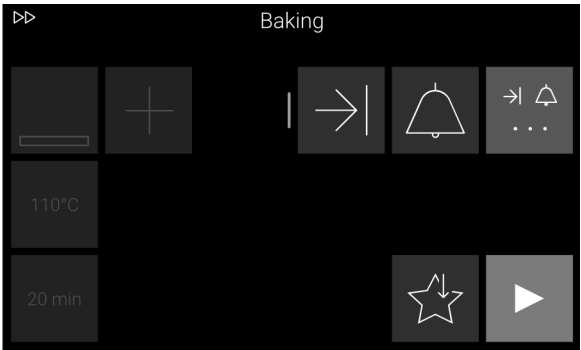




1. Swipe right to move from active back mode to settings



1. Back to the active baking mode


Scala

Settings of the cooking level, the brightness, the contrast and the brightness

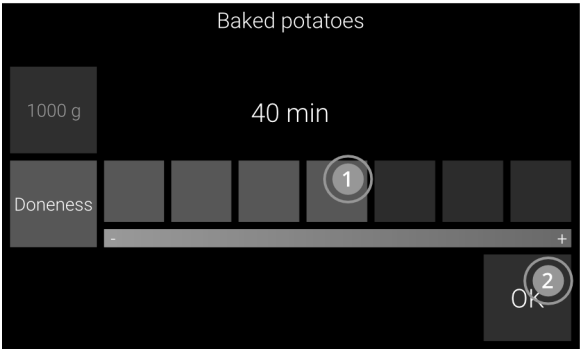

- 1. Touch Tile to select a cooking level
- 2. Confirmation of the selection.


## Requests & Queries

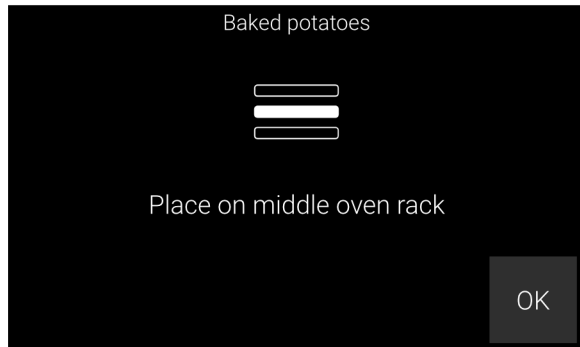


1. Follow the instruction
2. The action is confirmed as soon as the door is opened




Edit profiles, recipes & notes

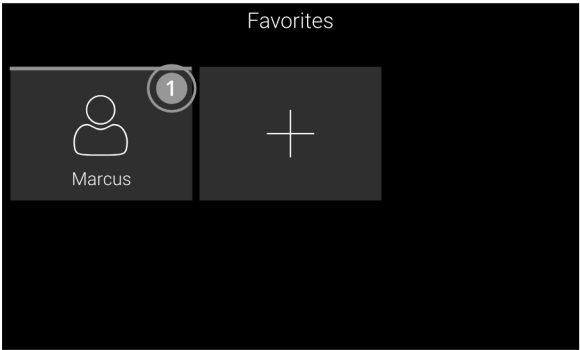

1. Press 3 sec.

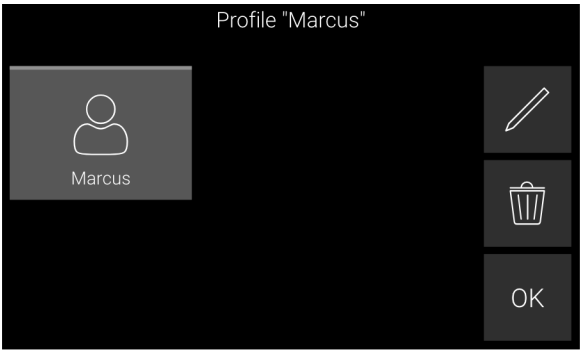

## Keyboard

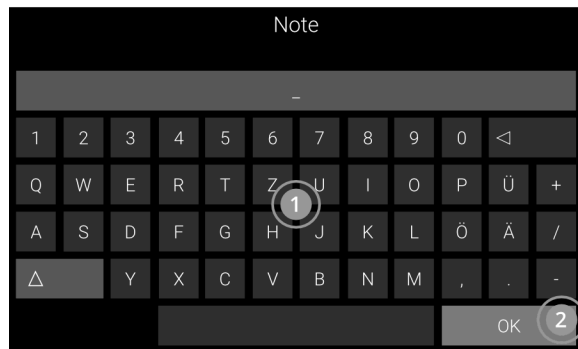

1. Enter note / name
2. Confirm

## IMPRINT

---

**Küppersbusch Hausgeräte GmbH**

Küppersbuschstraße 2

D-45883 Gelsenkirchen

Telefon: +49 209 401-0

Telefax: +49 209 401-303

E-Mail: [info@kueppersbusch.de](mailto:info@kueppersbusch.de)