

Küppersbusch

FÜR KÜCHEN MIT STIL

K8 / B6850, BP6850

K-Connect

This guide uses the K-Connect function of the K-8 oven.
Instructions for the operating concept as well as the detailed
Instructions can be found in separate documents.



K-CONNECT

WiFi setup4

Connecting to the app.....8

Update..... 14

Overview 15

 
WiFi Setup

When „Eco Mode“ is active, the „K-Connect“ function is not available. To use the function, „Eco Mode“ should be turned off: Settings > Eco Mode > Off


Also, the date and time must be set (First setting or Settings > Date and time) to the correct values. Otherwise, the connection to the server won't work.



1. Select „K-Connect“

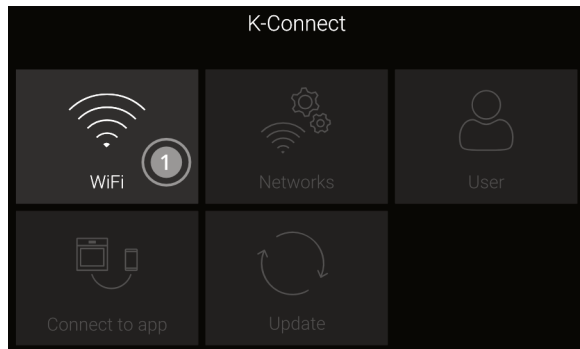

 
1. Select the WiFi function

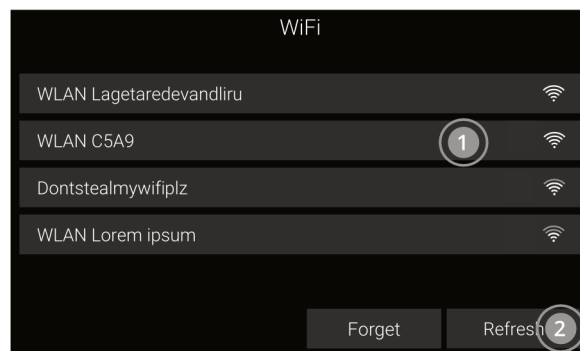


1. Selection of the network

2. Update network search

 WiFi Setup

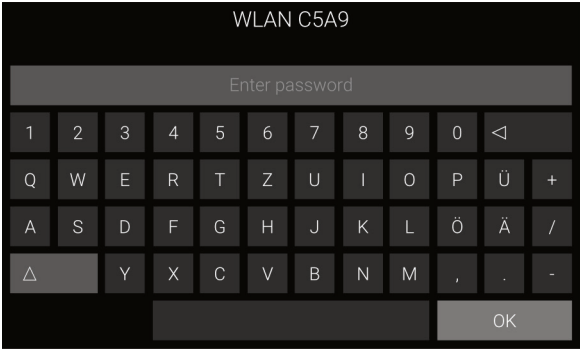


Enter the Password

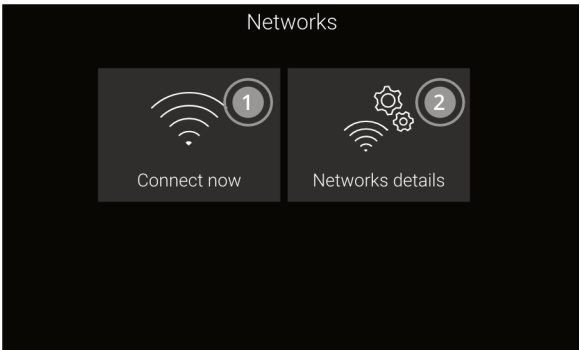 


- 1. Connect to the network
- 2. Networks details

 If user selects a network, introduces its password and presses on "Connect now", the connection process will start. The oven will automatically show the main menu.

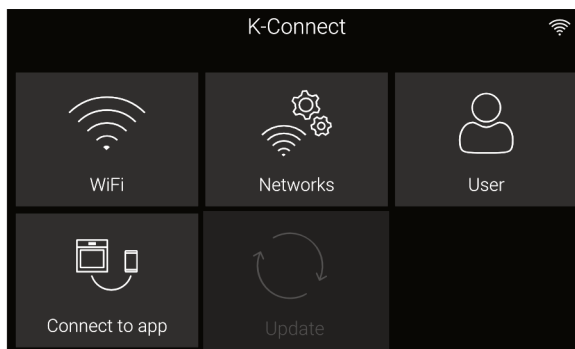

The connection is successful

 If the password has been entered incorrectly, it must be entered again. To reenter the password: Networks > Network details > Password

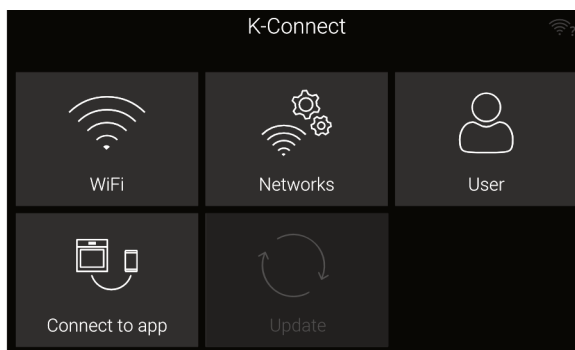

Connection to the server is not correct:


- System' date and/or time are incorrect
- Network's incorrect password
- External server problem


Connect to the app


The app is available for Android devices and can be downloaded from Google Play Store.


Get started

Let's start creating your account

 name*

 email*

 password*



 
 
Choose your Country

SPAIN


By signing up, you agree to the [Terms & Conditions](#) and [Privacy Policy](#)

Sign Up


User creation by introducing name, mail and password

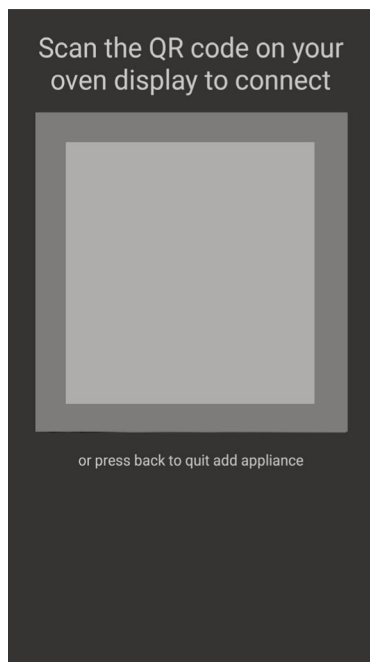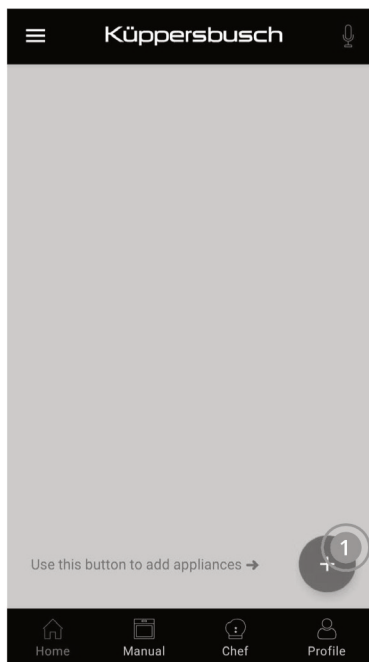

 1. Add appliance

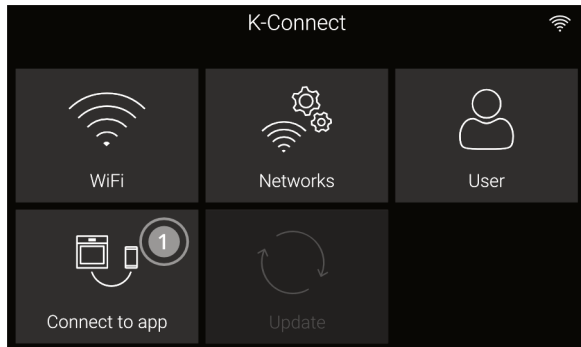Connect to the app

 1. Select „Connect to app“

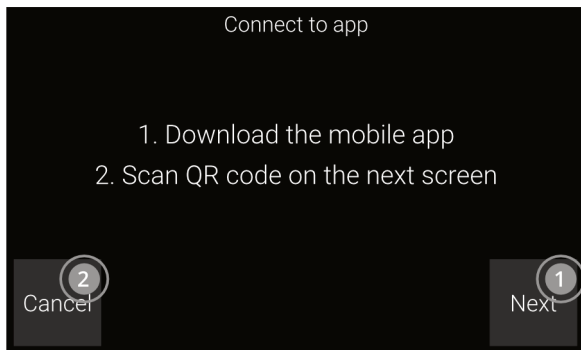


1. To the next step

2. Cancel




 Scan QR code with the app

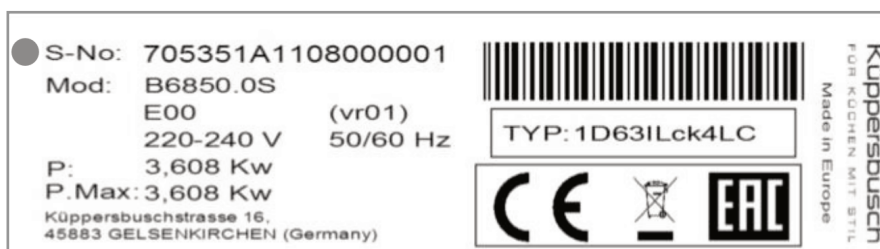


When the APP recognizes the code, introduce a name for the oven and its serial number (the serial number of the oven can be found on the label in the right side of the cavity's edge).

 
Connect to the app

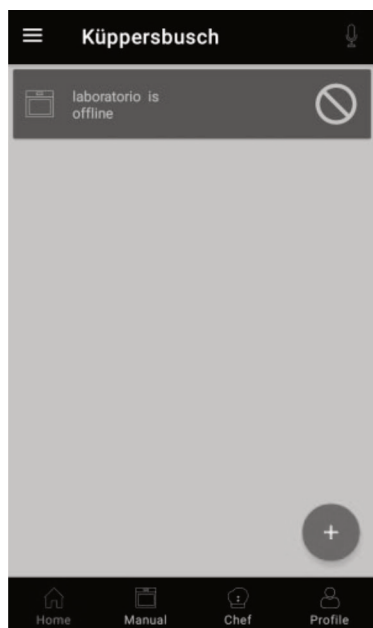

 
Once the serial number is correctly introduced, the oven will return automatically to the main menu screen and the APP will show the home tab showing the list of linked ovens

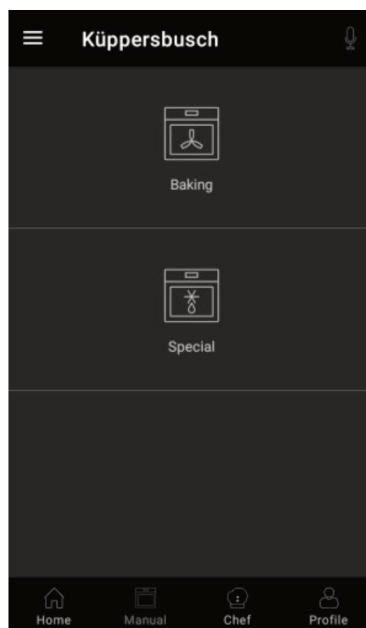

 On the APP, though the oven's card in the home tab (shortcuts to every available cooking functions and current state of the oven) or using the Manual and Chef tabs, cookings can be sent cookings to the oven.

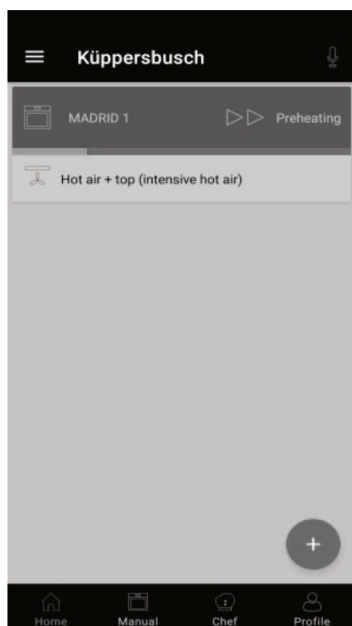

 
Once the cooking is sent via APP, the cooking process will start in the oven. On the HOME tab of the app, the current state of the oven will be realtime updated. To get further information of the cooking process, press on the card of the cooking.

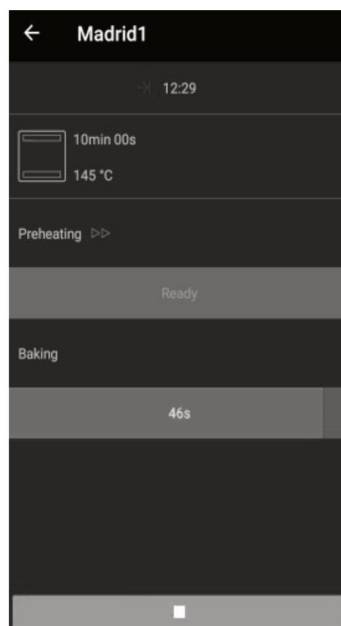


On the cooking screen, if the Stop button is pressed, the cooking can be stop via APP.

Update

 Once the oven is connected, it will automatically check if the oven's SW version is updated. In case it has an older version, the update icon will appear next to the Wi-Fi symbol and a message will appear on the screen.

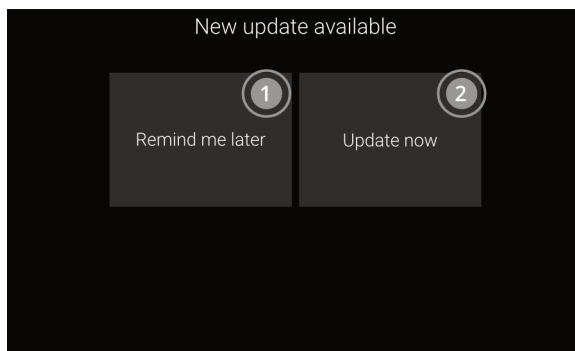


 1. Update later
2. Update now

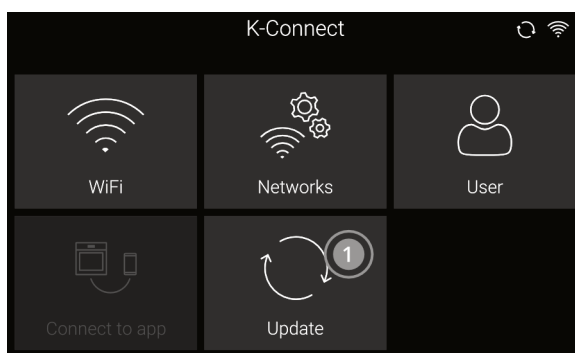

1. Update the oven

 Overview

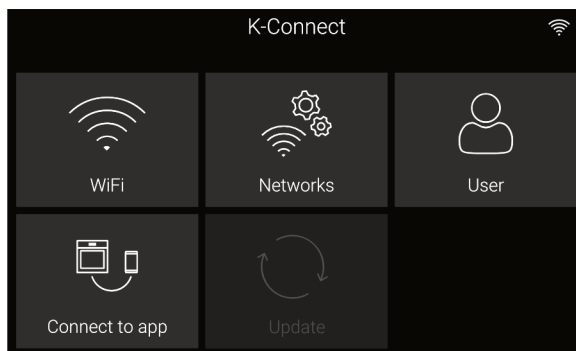

WiFi

WiFi connection on / off

Networks

Network selection / -search

User

Shows the last user that has used the remote operation via app

Connect to the app

Link oven to the app

Update

Software update

IMPRINT

Küppersbusch Hausgeräte GmbH

Küppersbuschstraße 2

D-45883 Gelsenkirchen

Telefon: +49 209 401-0

Telefax: +49 209 401-303

E-Mail: info@kueppersbusch.de