

Küppersbusch

FÜR KÜCHEN MIT STIL

B6850.0S **BP6850.0S**

Detailed Guide

This manual describes the functions of the K8 built-in oven. Operating instructions, including for the K-Connect, can be found in separate documents.

EXPLANATION OF SYMBOLS & CONTROLS4

INITIAL START-UP5

OVEN.....7

CHEF.....15

FAVOURITES21

CLOCK.....23

SETTINGS26

SYMBOLS.....34

EXPLANATION OF SYMBOLS & CONTROLS 4**INITIAL START-UP**

Selecting the language	5
Setting the date and time	5
Setting the unit of weight.....	6
Setting the unit of temperature	6

OVEN**Backing**

Setting cooking functions and temperature.....	7
Setting the cooking time	8
Starting, preheating	8
Modifying settings during cooking	9
Extending the cooking time	10
Programming further cooking processes	11
Setting the cooking stop time.....	12

Special functions

Setting the mode and temperature.....	13
Setting the cooking time	14
Starting.....	14

CHEF**Auto programmes**

Selecting the programme	15
Setting the cooking level	16
Starting the cooking process	16
Programming multiple cooking processes	17

Recipes

Selecting the recipe	18
Settings.....	19
Preparation and ingredients	19
Create a note	20
Edit a note.....	20

FAVOURITES

Saving	21
Creating a new profile	21
Editing a profile	22

 
CLOCK

Timer	23
Stopwatch	24
Alarm clock	25




SETTINGS


Language.....	26
Date and time.....	26
Display.....	27
Sounds.....	30
Units	30
Demo mode.....	31
Eco mode	31
Favourites	32
Factory settings	33

Symbols	34
----------------------	----




Softkeys

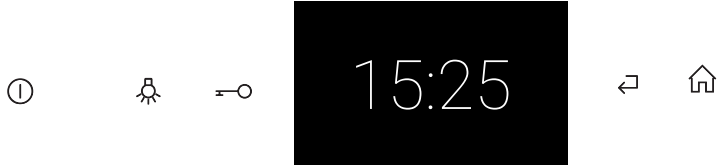   

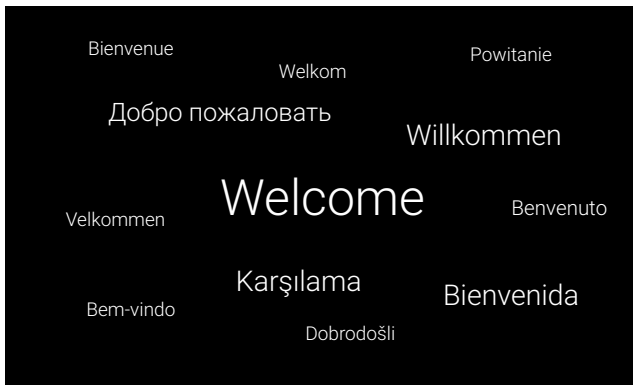 

 In order to operate the oven, the language, date, and time, as well as the units of temperature and weight must be set.

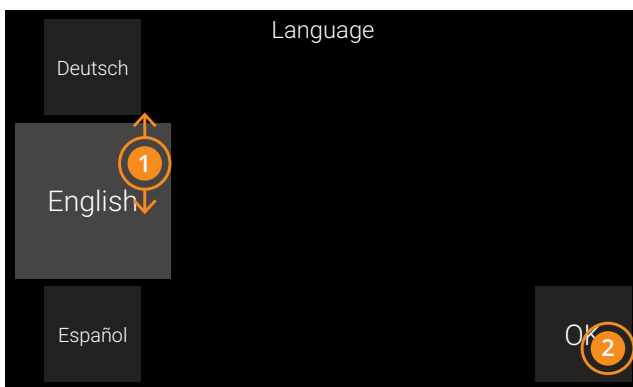

Selecting the Language

 
After you have switched on the oven, you must first select the language.

1. Select the language
2. Confirm the selection




Setting the Date

1. Select the year
2. Select the month
3. Select the day
4. Confirm the selection

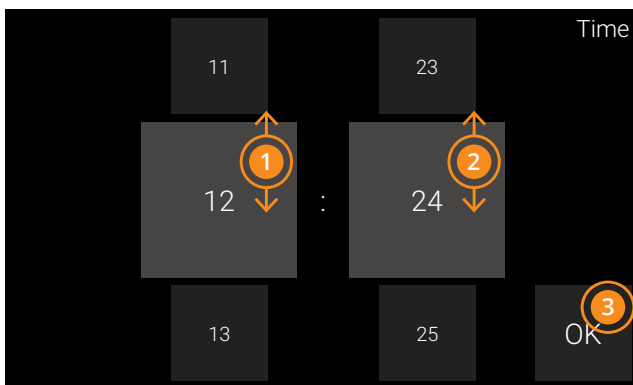


Setting the Clock

 1. Select the hour
2. Select the minute
3. Confirm the selection

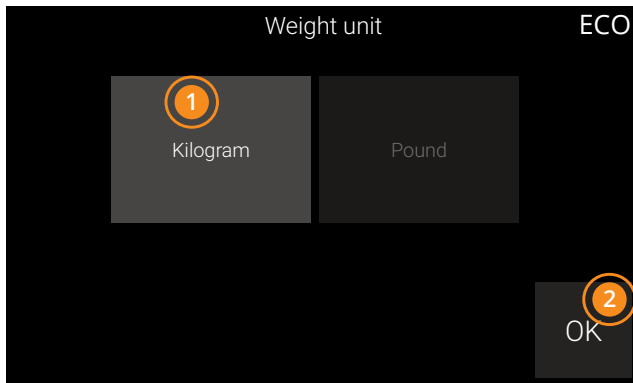


Setting the Unit of Weight

 1. Select the unit of weight
2. Confirm the selection

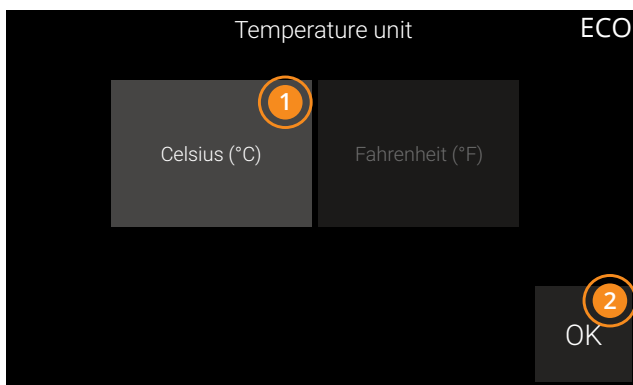

Setting the Unit of Temperature

 
1. Select the unit of temperature
2. Confirm the selection

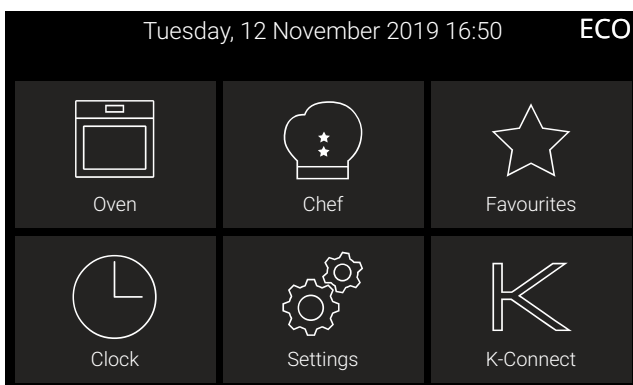


- A. After setting the units, the initial start-up is complete. The Home display will appear.


i Information

  If after a few seconds no cooking mode or automatic programme has been selected, the oven will switch off again and display the current date and time.

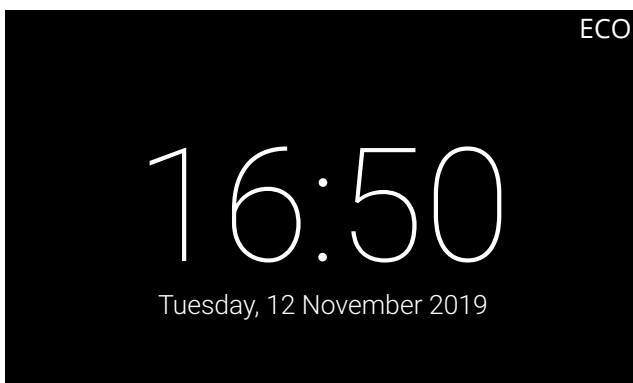


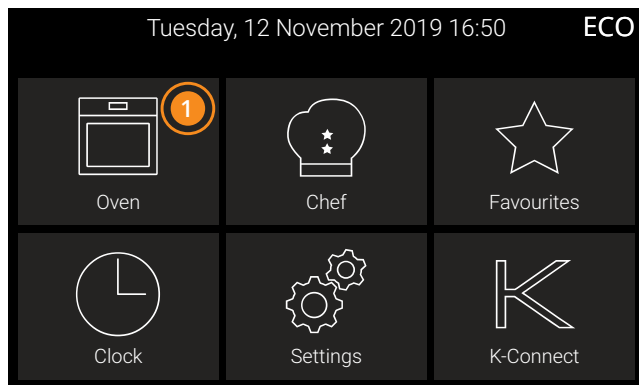

 1. Select the "Oven" function

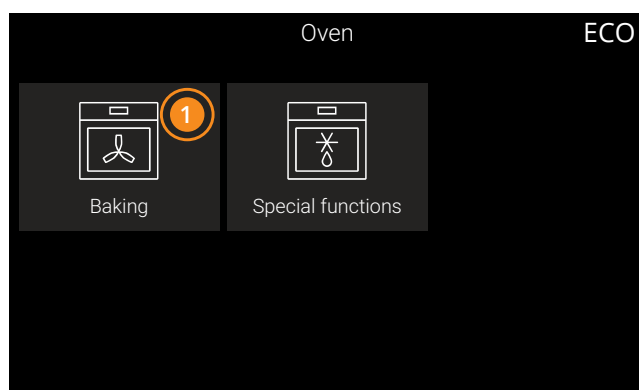


 1. Select the "Baking" mode

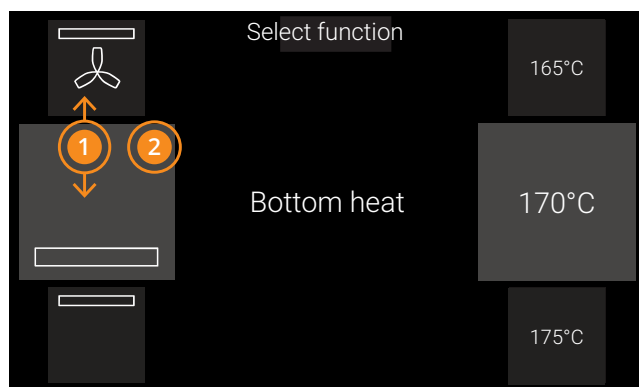

Selecting the Oven Function

 1. Select the cooking mode
2. Confirm the selection

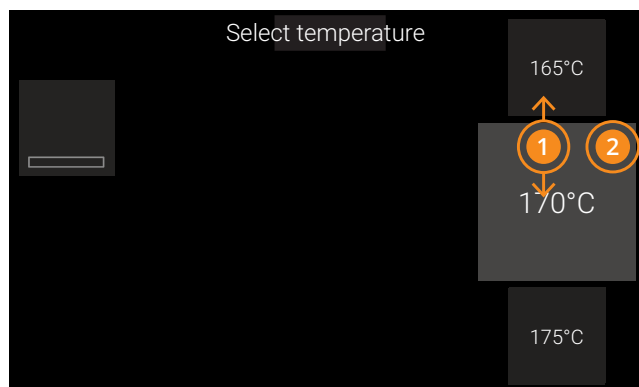

Selecting the Oven Temperature

1. Select the oven temperature
2. Confirm the selection

An overview of the settings will appear.

Information

An oven temperature is preset for all modes. Depending on the mode, the oven temperature can be set between 30°C (no temperature setting) and 300°C.

 


Overview of the Settings

Overview of the settings and other functions

i Information

The cooking process can be started without setting the cooking time. If you wish to schedule a further cooking process, the initial cooking time must first be set.

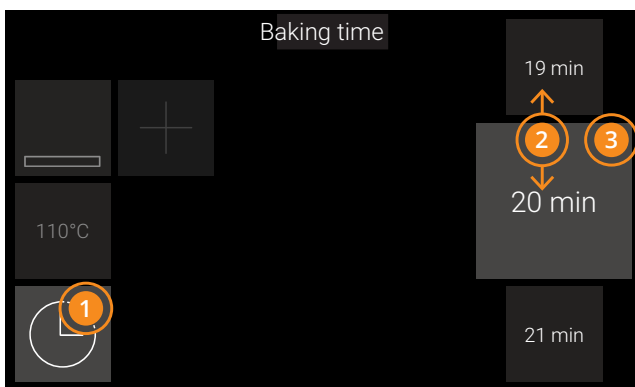

Setting the Cooking time

1. Select the cooking time mode
2. Select the cooking time
3. Confirm the selection



Starting

 
1. Start the cooking process



Preheating

The oven begins by preheating. During pre-heating, the display shows a progress bar and the current oven temperature. As soon as the oven reaches the set temperature, the cooking process begins.

1. To start cooking immediately, you can cancel the preheating process.

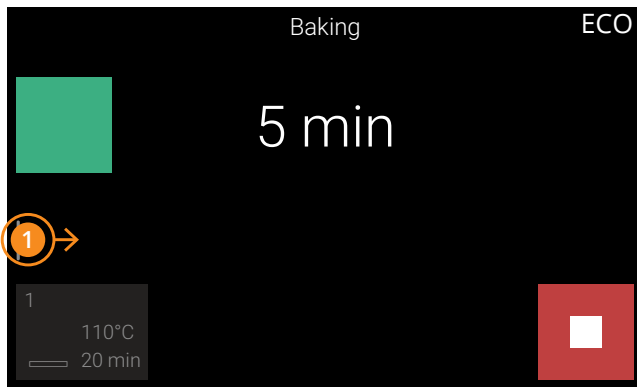

Adjusting Settings During the Cooking Process

1. Swipe right to access the settings overview.

i Information

 
It is only possible to adjust the cooking mode, oven temperature, or cooking duration when a cooking mode is active. Cooking processes that have already been completed cannot be adjusted.



- A. Confirm the adjusted settings and return to the cooking process.
- B. Return to the cooking process (without adopting the adjusted settings).




The cooking process will continue with the adjusted settings.

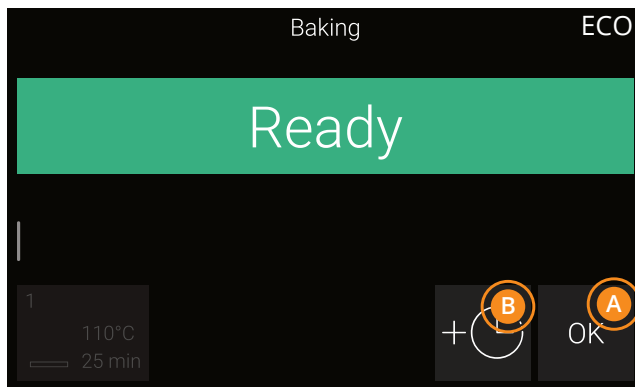


Extending the Cooking Time

 
- A. The cooking process is completed. Confirming will return you to the Home display.
- B. Alternatively, you can extend the cooking time.

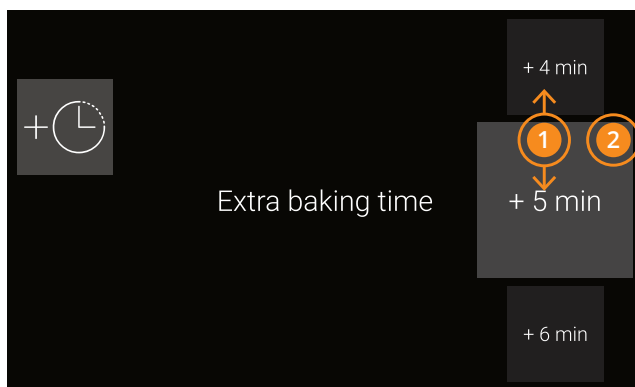

 1. Select the additional cooking time
2. Confirm the selection

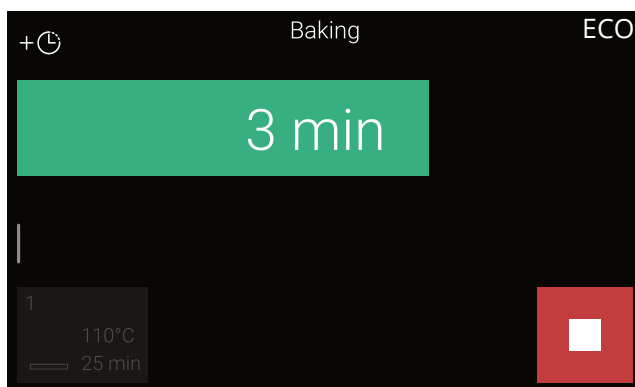

 
The "Extend cooking time" icon in the status bar indicates that additional cooking time has been applied. The cooking process can be stopped at any time.

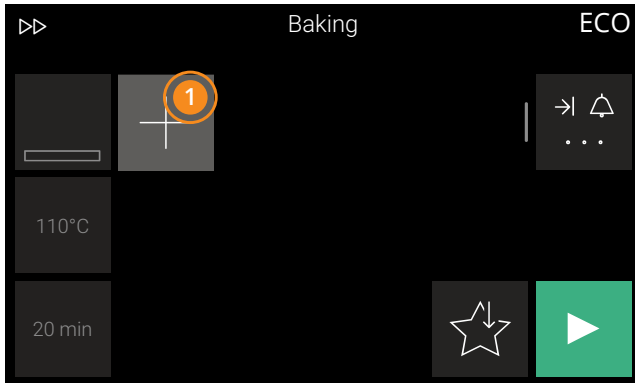

Adding Further Cooking Processes

1. Add and programme further cooking processes

 i Information
 If you want to use an additional cooking process, you must first set the cooking time of the previous one. Up to three cooking processes can be programmed.

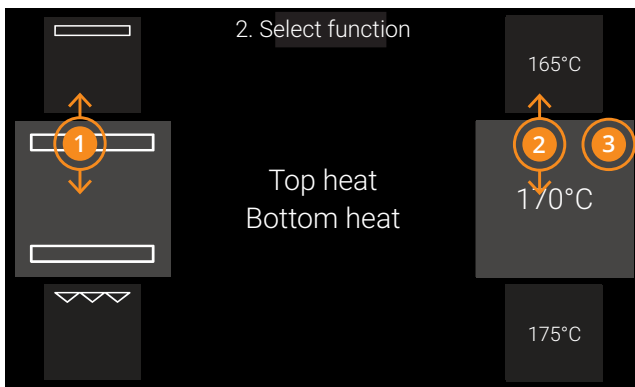


Programming a Second Cooking Process


1. Select the cooking mode
2. Select the oven temperature
3. Confirm the selection



 1. Delete the cooking process

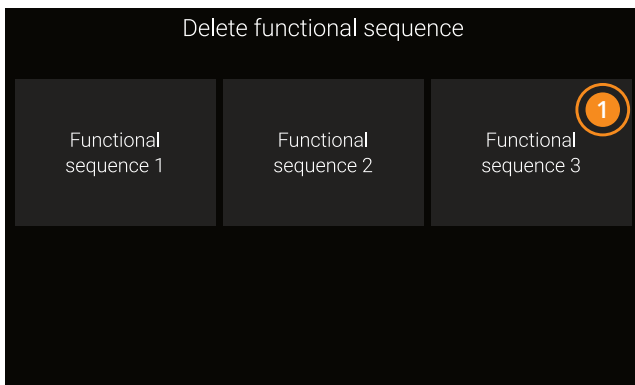

 1. Delete the cooking process by pressing the appropriate button.

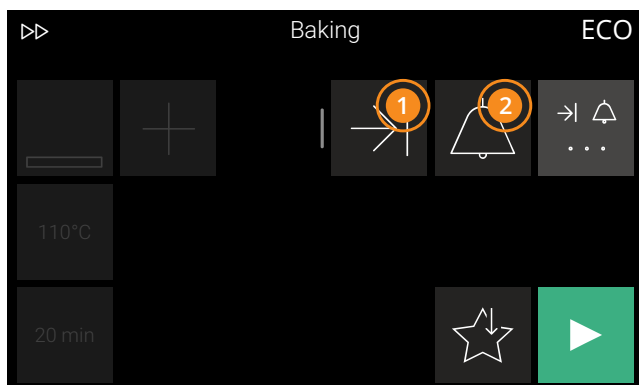


Setting the Cooking Time

1. Activate the stop time
2. Activate the alarm

i Information

 
The "alarm" function is described in the "Clock" chapter.

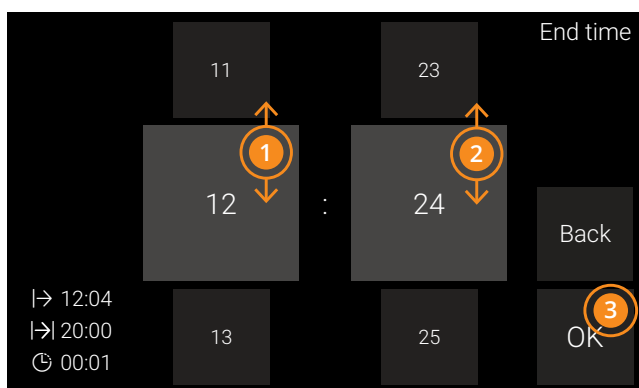


1. Select the hour
2. Select the minute
3. Confirm the selection



 
1. Confirm the settings

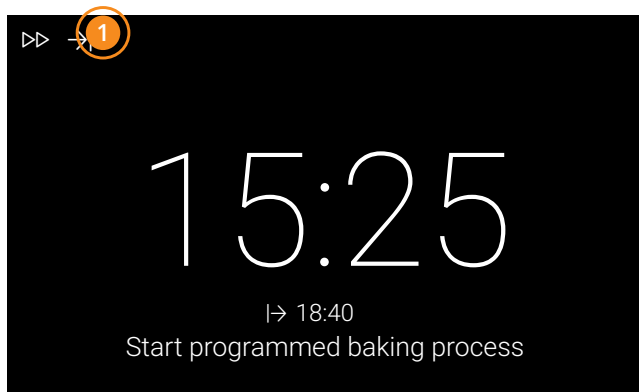

 
1. Adjust the stop time

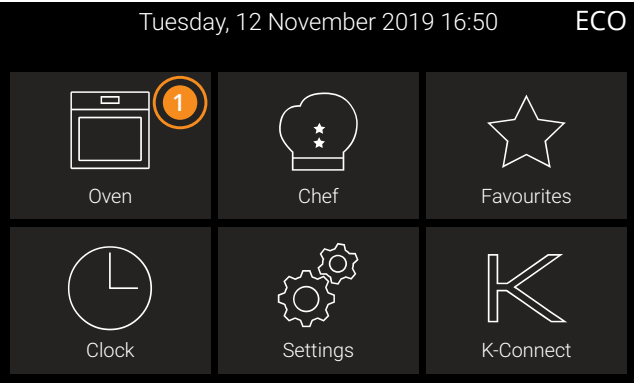

 
1. Select "Oven"

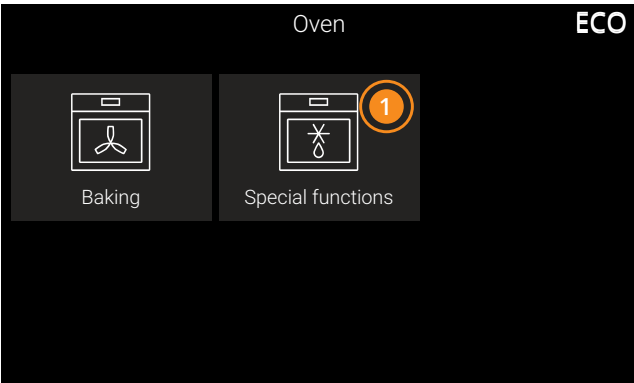

 
1. Select "Special Functions"

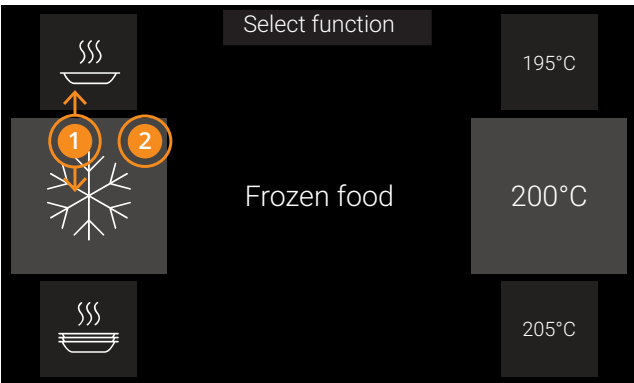

 1. Select the cooking mode
2. Confirm the cooking mode

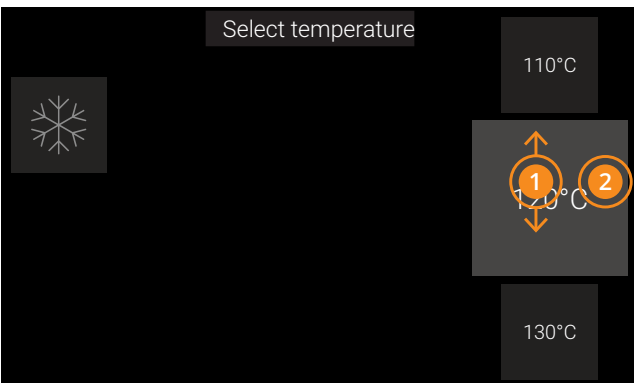

 1. Select the temperature
2. Confirm the temperature

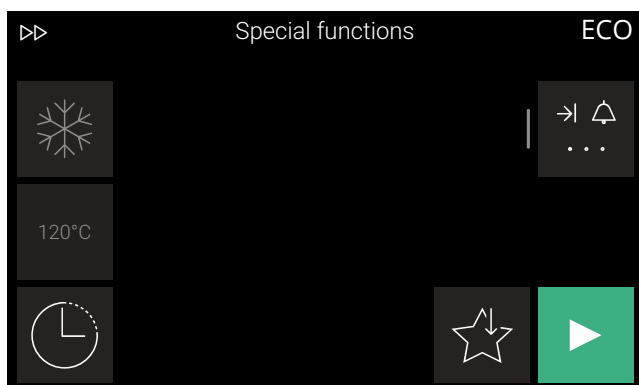


Overview of settings and further functions




Setting the Cooking Time

 
1. Select the cooking time function
2. Select the cooking time
3. Confirm the setting

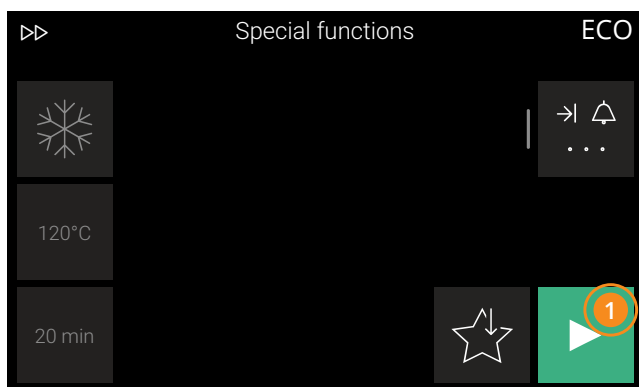

Starting

  
1. Start the cooking process

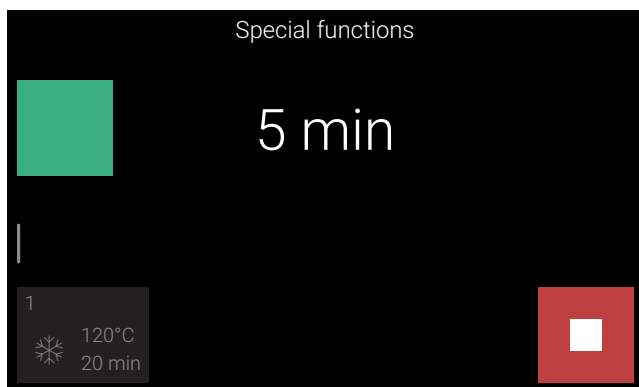

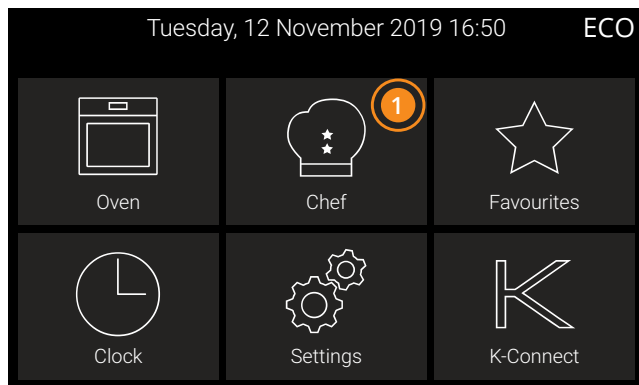

Programme Selection

 
1. Select "Chef"

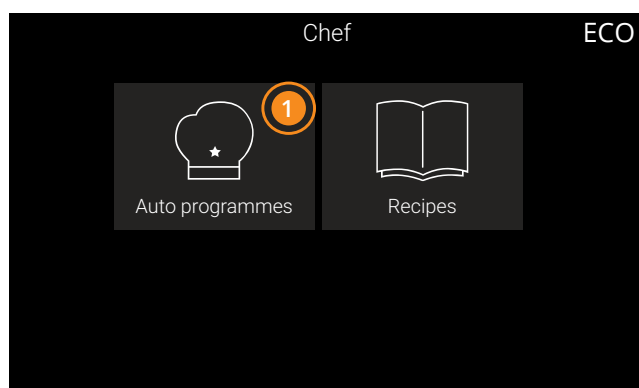


1. Select the "Auto programmes" function

i Information

 
When a programme is selected, the oven automatically calculates the temperature and duration required for the preparation based on the weight indicated. Unless further explicit instructions are given, the cooking time excludes any time needed for preheating.

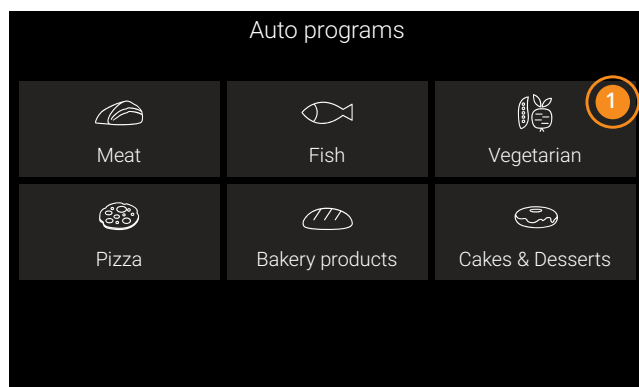

 1. Select the desired category

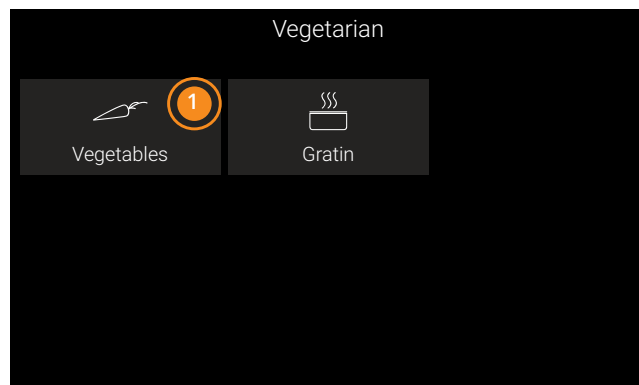

 
1. Select the desired subcategory

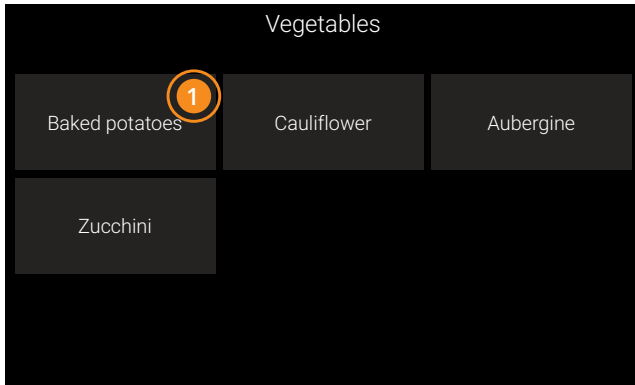

1. Select the desired programme


i Information

 It is very important to select the right weight for food due to be cooked so that it can be cooked correctly. However, select programmes do not require the weight to be set.

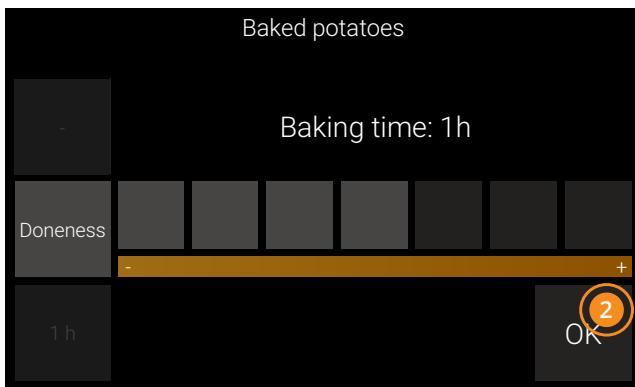


Setting the Cooking Level

 1. Select the cooking level
2. Confirm the cooking level

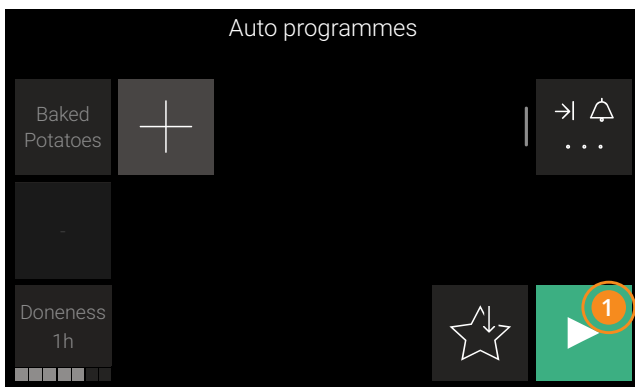

Overview of Settings

 
1. Confirm the settings. The oven will begin cooking.

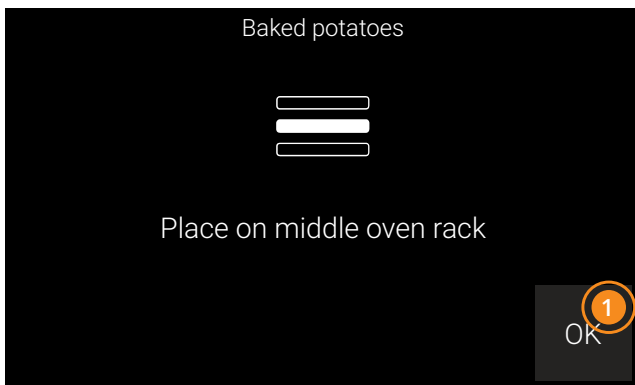

1. Confirm after placing the ingredients in the appropriate oven tier.

i Information

 For select programmes, the empty oven must first be preheated. The oven indicates when the food has to be cooked and on which tier.

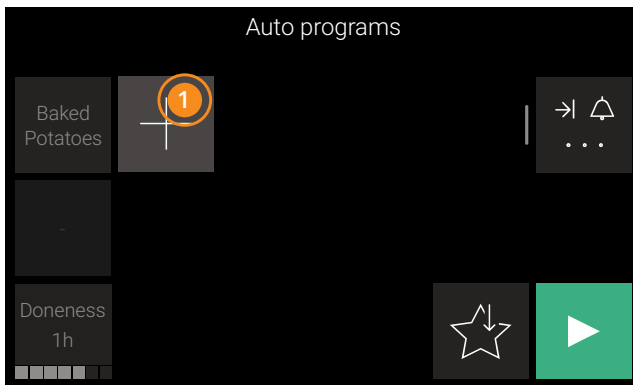

Multiple Cooking Processes

 
1. Add a further programme

i Information


Up to three programmes can be set. These must be compatible with the selection. The programme order will be determined automatically.




1. Confirm the settings

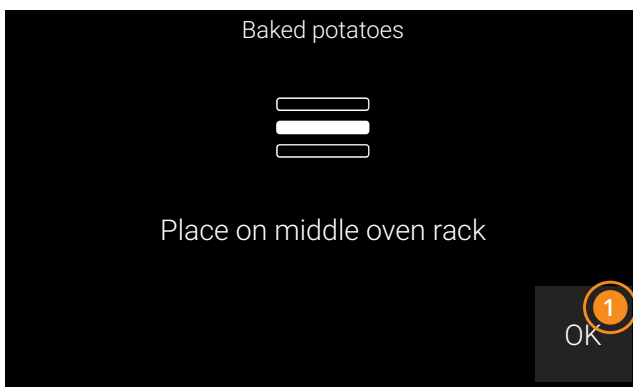

 
1. Confirm after placing the ingredients in the corresponding oven tier.

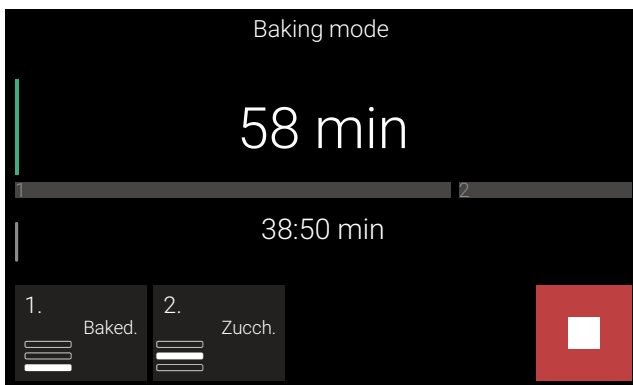

 
The oven will begin the cooking process.

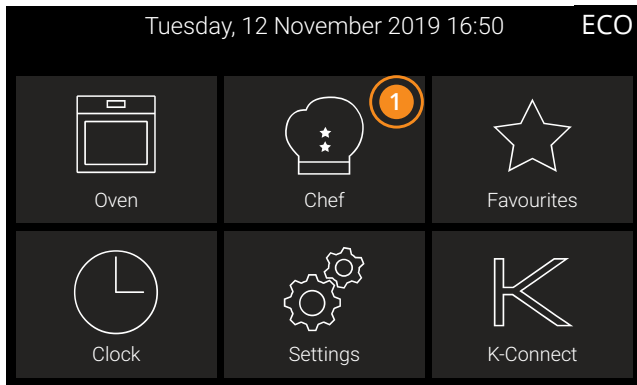

 1. Select "Chef"

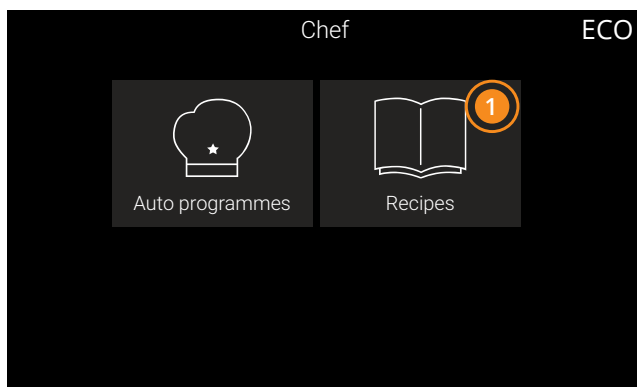


 1. Select the "Recipes" function

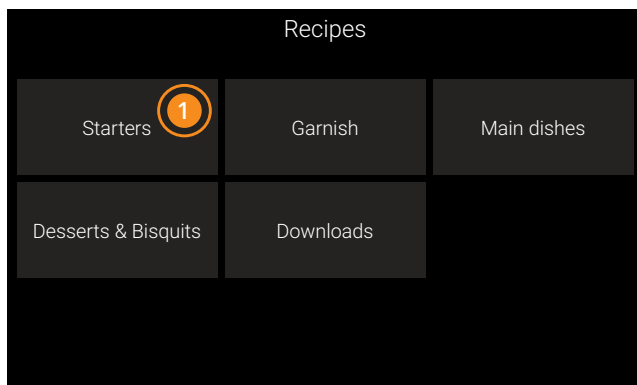


Recipe Selection

 1. Select the recipe category

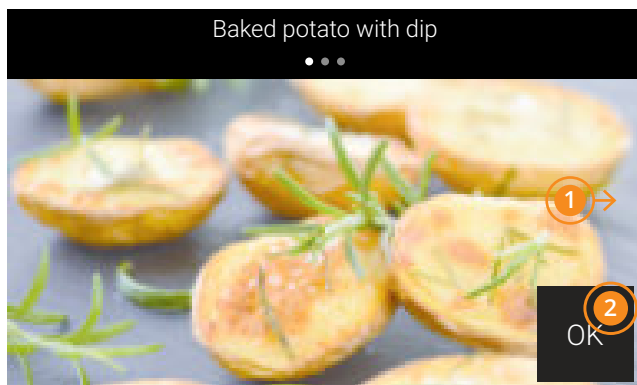

 - 1. Swipe to see the next recipe in the selected category
- 2. Confirm the selection

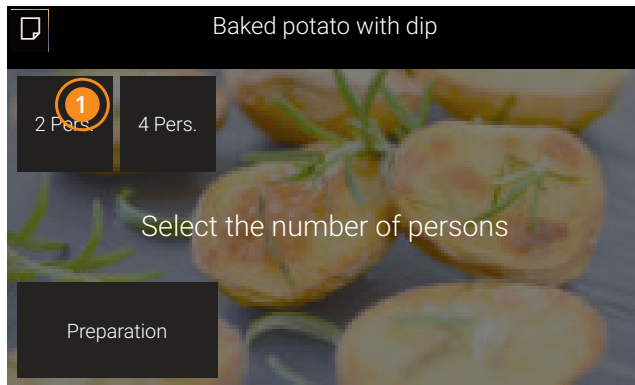


Settings


1. Selecting the number of persons

i Information

 The number of persons is needed to determine ingredients as well as further processes.

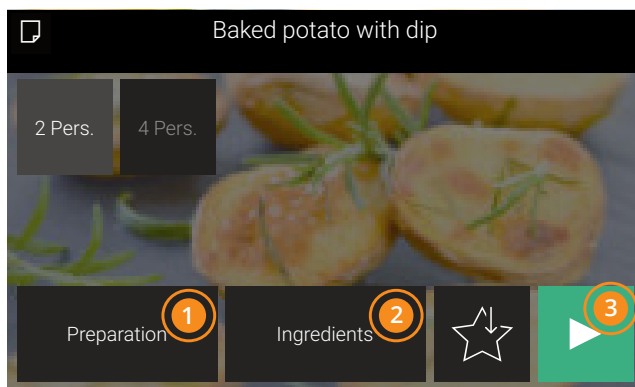

 
1. Step-by-step explanation of the preparation
2. Recipe ingredients list
3. Begin the cooking process

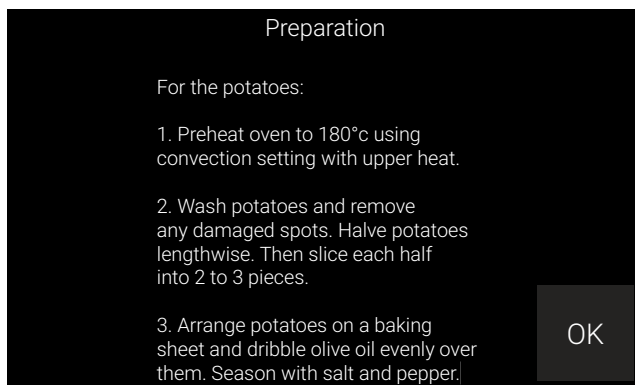

Preparation Instructions



 Recipe Ingredient List

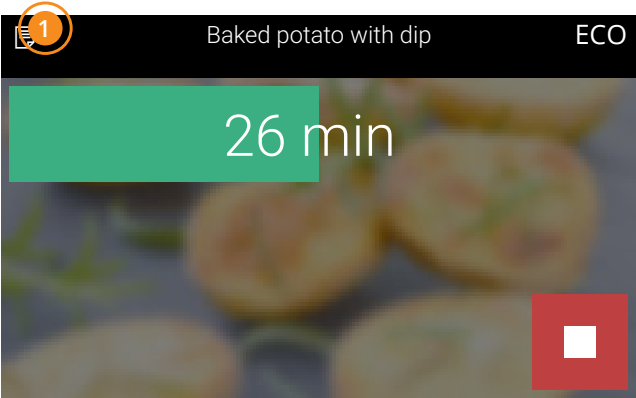


Creating a Note


- 1. Select note

Information

 
The saved note can be edited or deleted later.

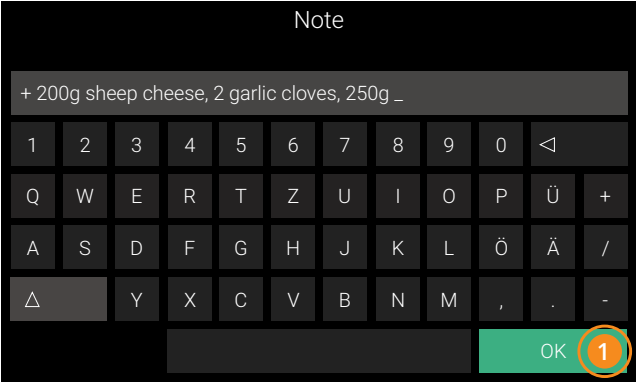

 
- 1. Enter the text and confirm by pressing "OK".

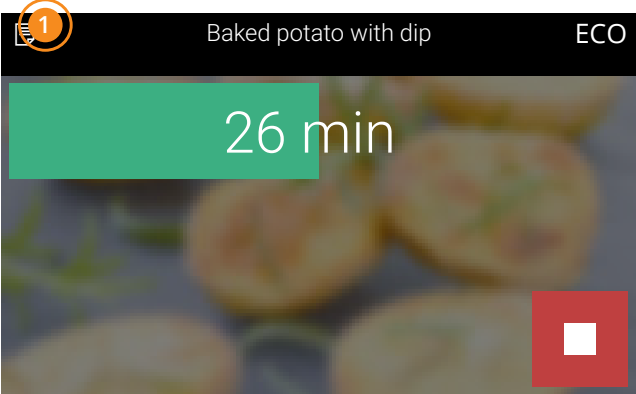

 - 1. Press the note icon in the status bar to edit or delete the note.

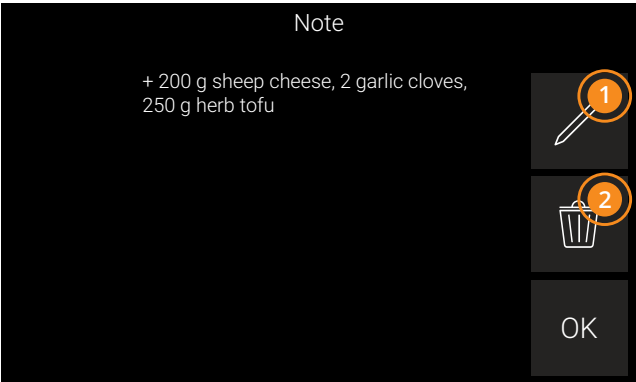


 - 1. Edit note
- 2. Delete note

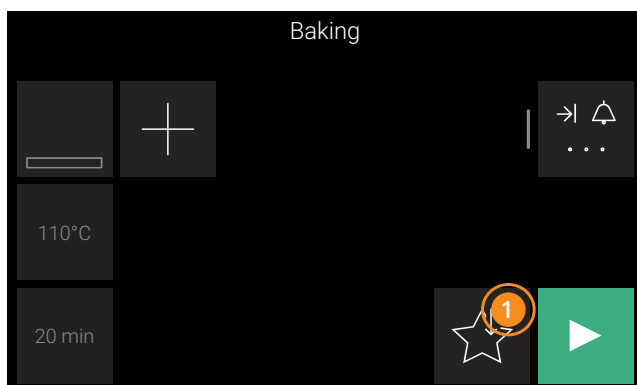

Saving

 
1. Select the "Save Favourites" function

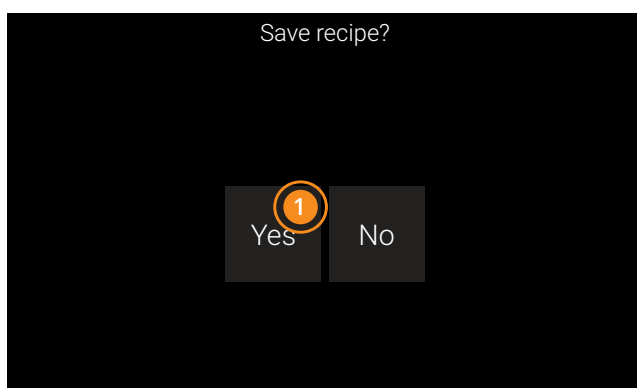


1. Save

i Information

 
If no user profile exists, a new profile must first be created.

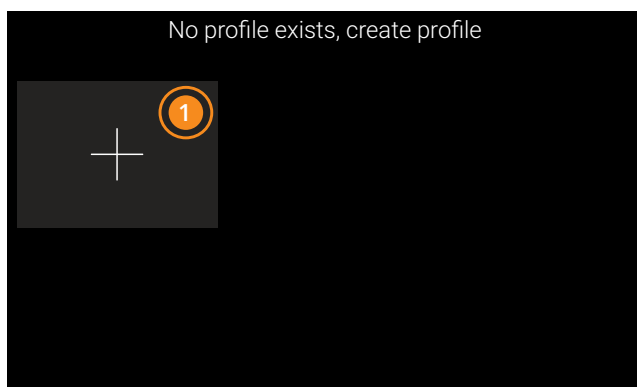

 
1. Create a new profile

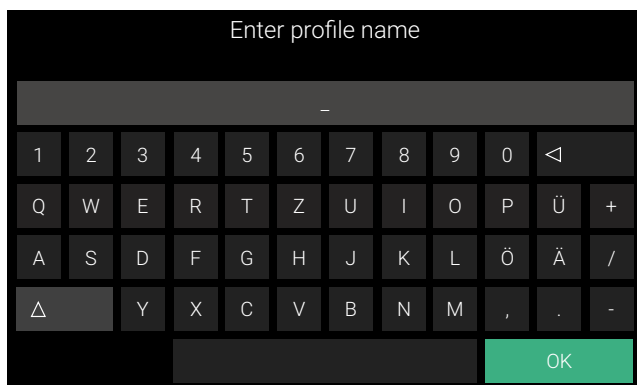


Entering the profile name

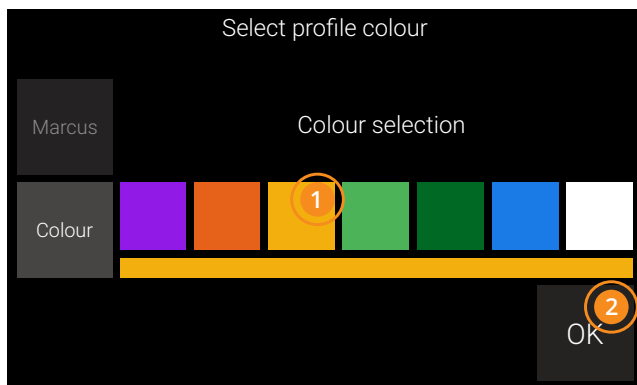 

 1. Select the colour
2. Confirm the selection

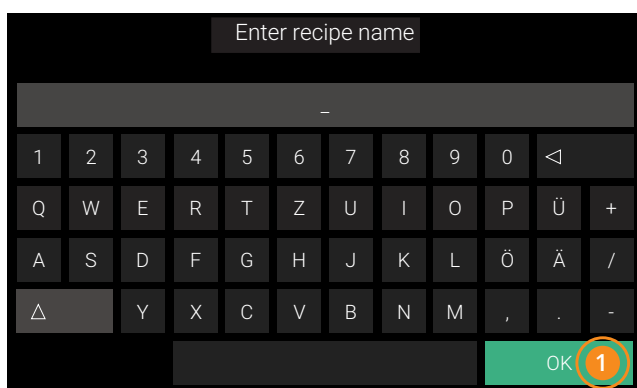

 
1. Enter a recipe name and confirm the entry by pressing "OK".

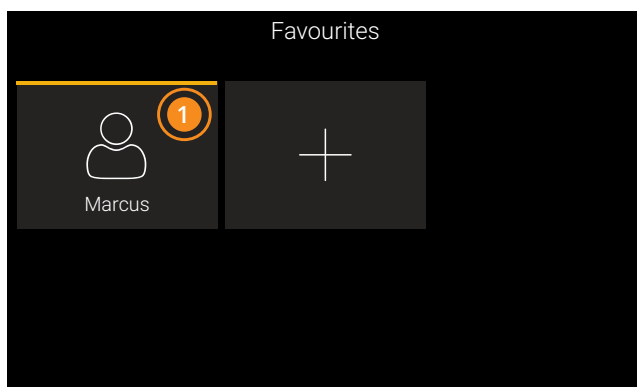


1. Select the profile
2. The recipe is added to the selected profile.

Alternatively: Editing or Deleting a Profile

 1. Tap and hold the button for 3 seconds to edit the profile.

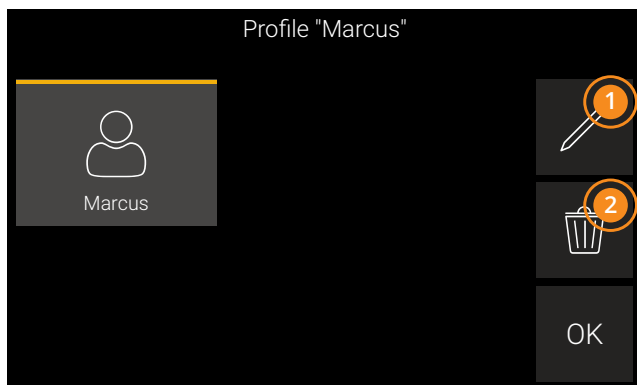


 1. Edit profile
2. Delete profile

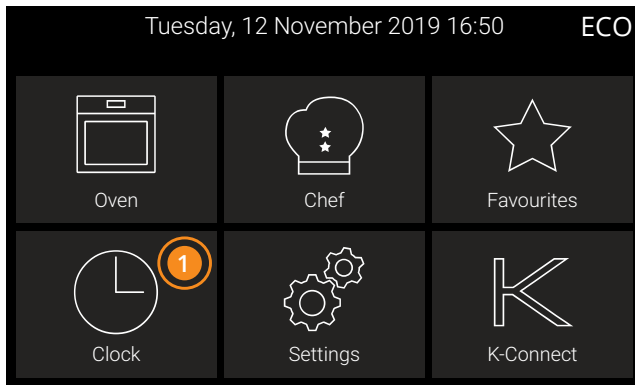


Timer

 
1. Select "Clock"

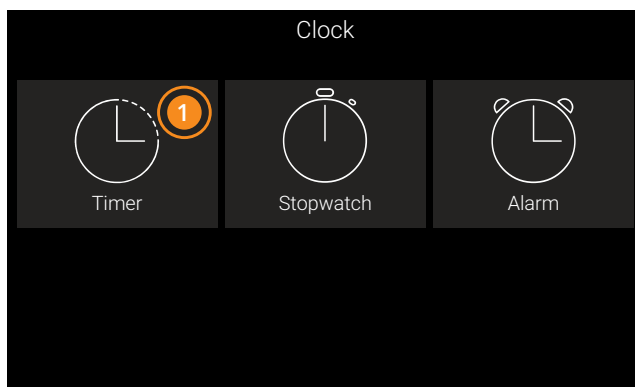

 1. Select the "Timer" function

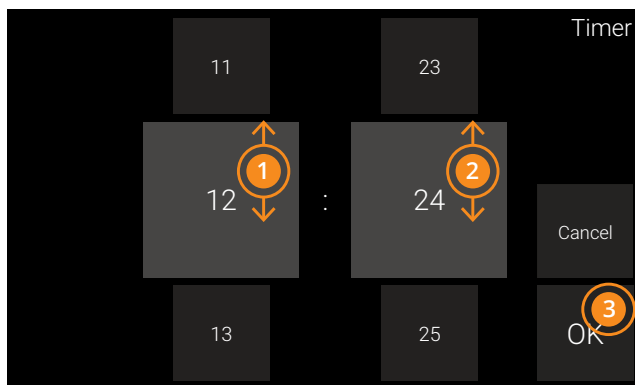

 1. Select the hours
2. Select the minutes
3. Confirm the selection

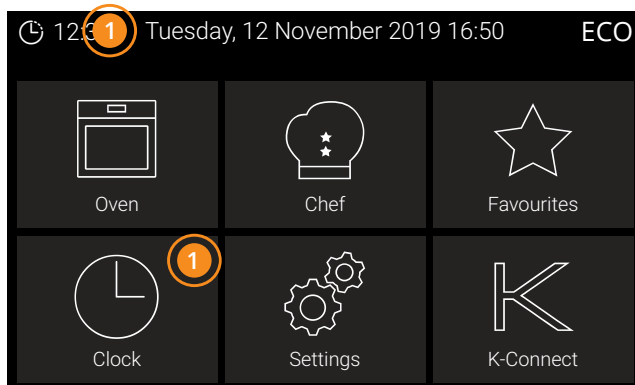


1. Adjust or delete the timer

i Information


Once the programmed time has elapsed, an audible tone will sound and the timer symbol will appear in the status bar. Press the timer symbol to stop the tone.

 The timer function runs independently of any active cooking process.

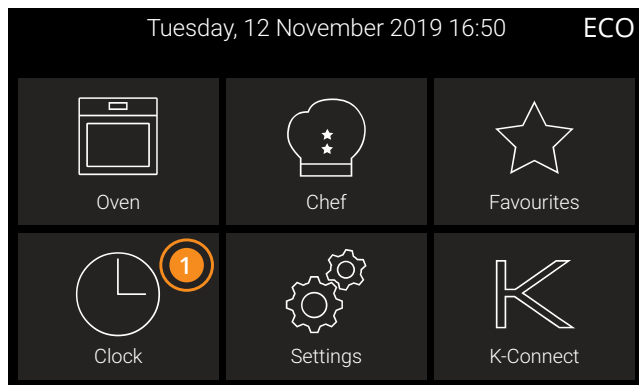

Stopwatch

 
- 1. Select "Clock"

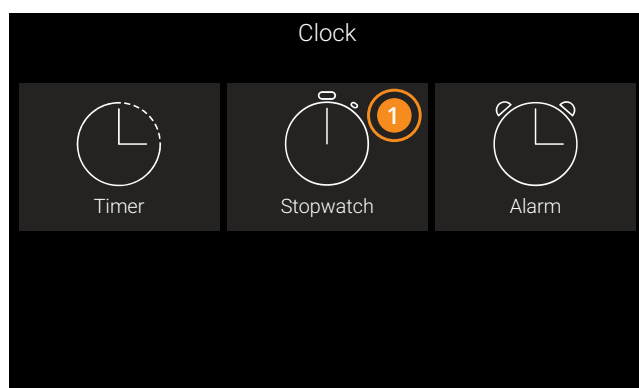

- 1. Select the "Stopwatch" function



 
- 1. Start the stopwatch

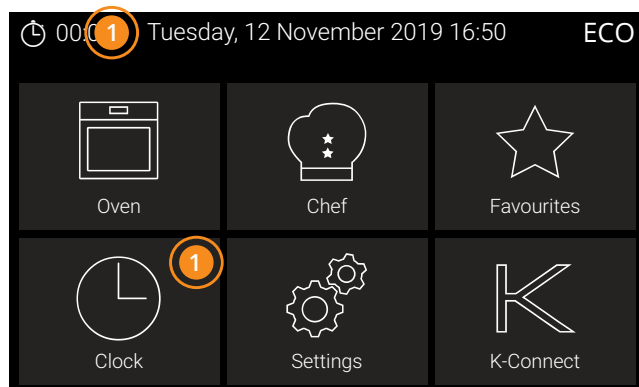

- 1. Delete the stopwatch


i Information
Pressing the stopwatch symbol will prompt another query. Delete the running stopwatch by pressing "Yes".

 The timer function runs independently of any active cooking process.

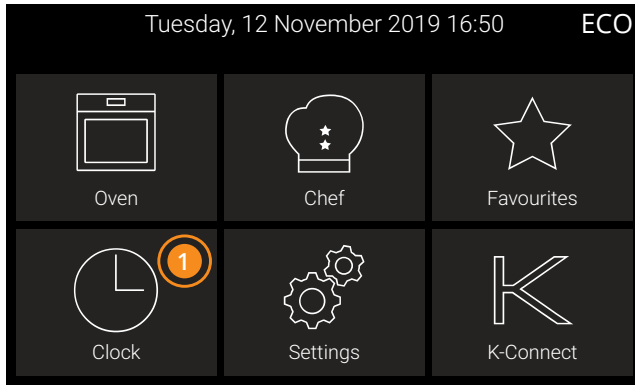


Alarm Clock

 
1. Select "Clock"

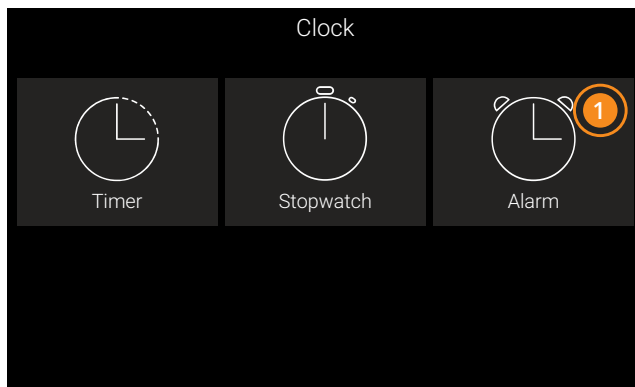

 1. Select the "Alarm Clock" function

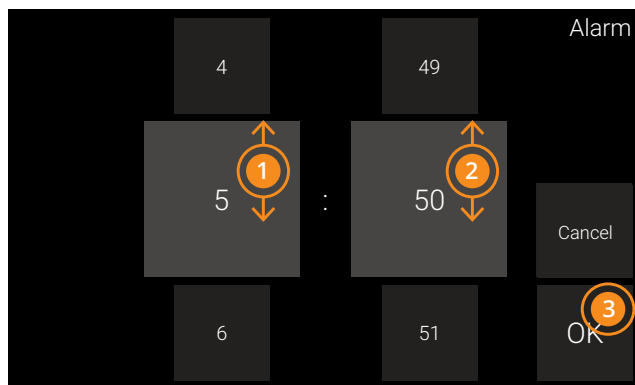

 1. Select the hour
2. Select the minute
3. Confirm the selection

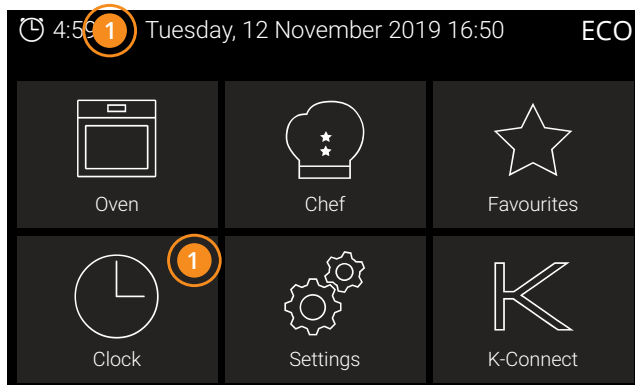


1. Adjust or delete the alarm clock


i Information

At the set time an audible tone will sound and the alarm clock symbol will flash in the status bar. Press the alarm clock symbol to stop the tone.

 
The alarm clock function runs independently of any active cooking process.

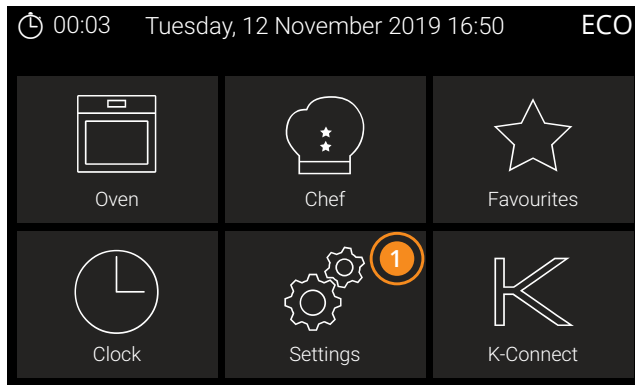

 1. Select "Settings"

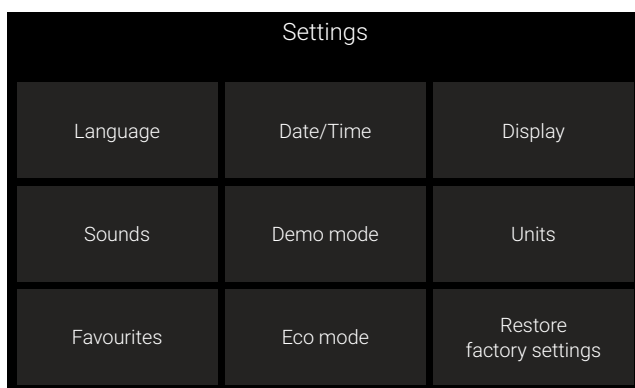


Settings

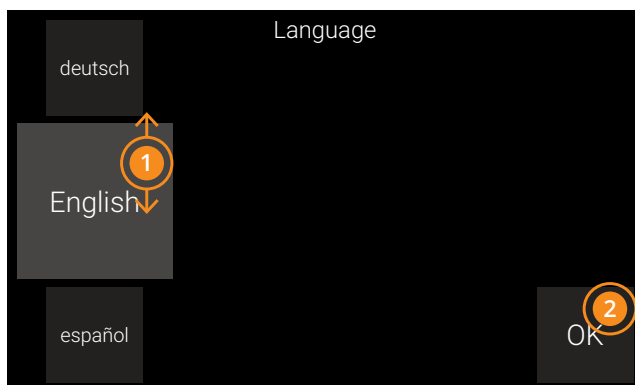 

Language

 1. Select the language
2. Confirm the selection

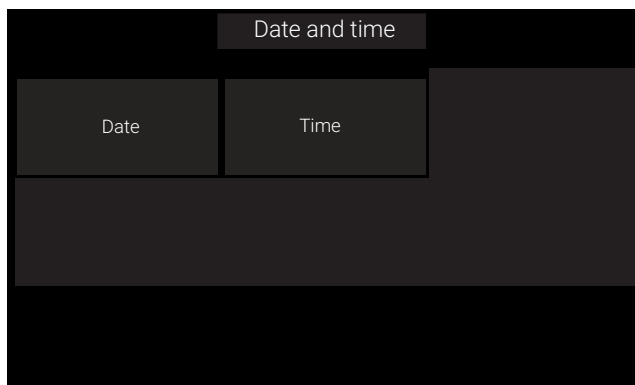


Date and Time




Date

 1. Select the year
2. Select the month
3. Select the day
4. Confirm the selection

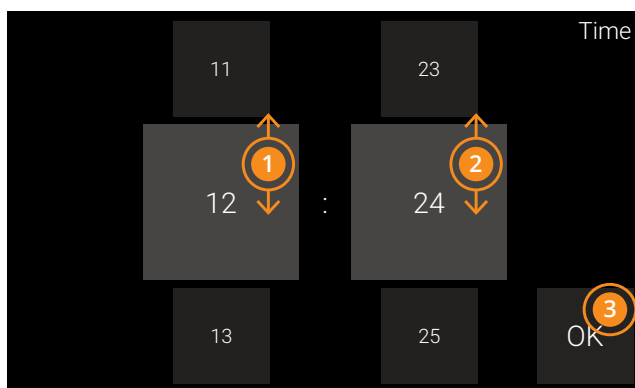


Time

 1. Select the hour
2. Select the minute
3. Confirm the selection

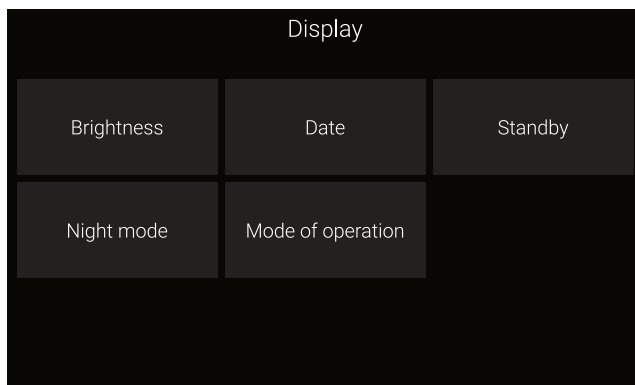


Display

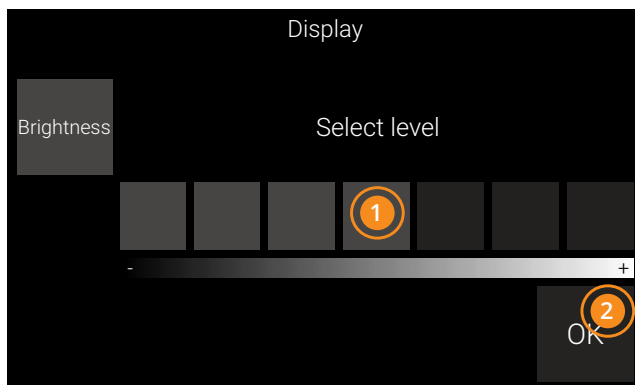 


Brightness

 1. Select the brightness
2. Confirm the selection

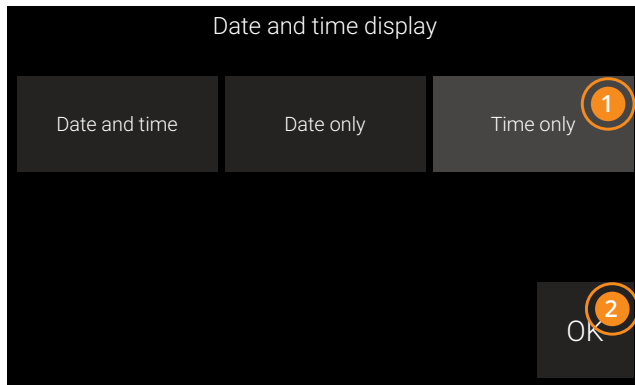


Display

 1. Select the information displayed during standby
2. Confirm the selection

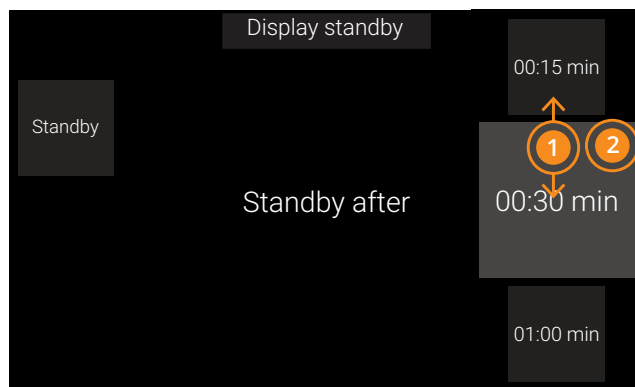


Standby

 1. Select the standby-time
2. Confirm the selection

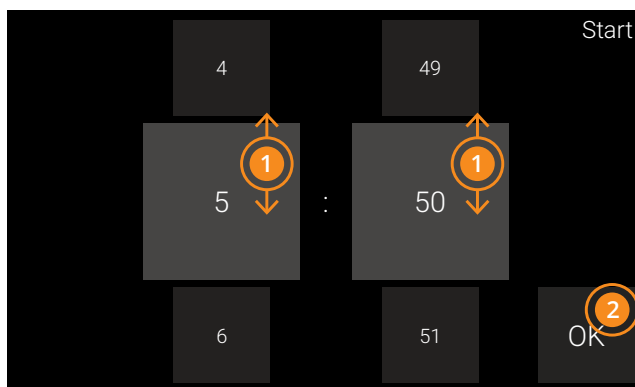


Night Mode

 1. Select the start time
2. Confirm the selection

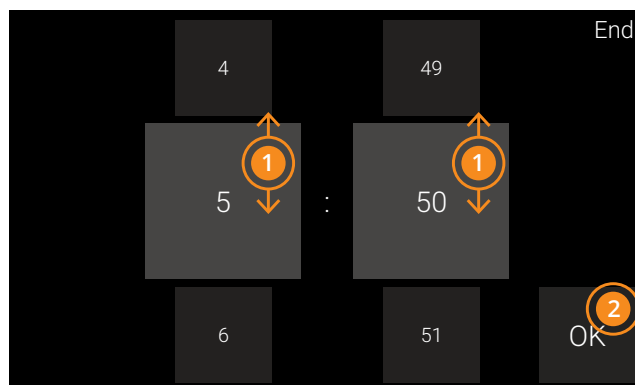


 1. Select the stop time
2. Confirm the selection

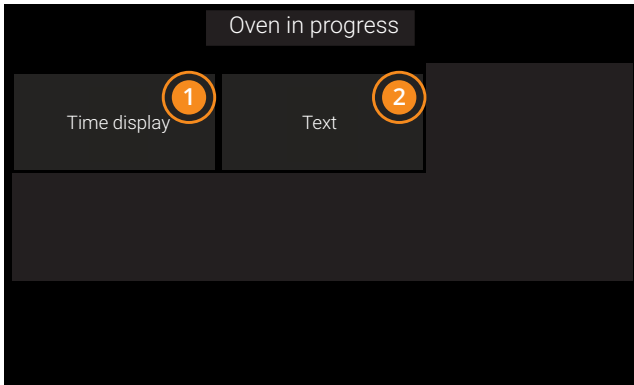


Cooking in Progress

 1. View the time display
2. View the text display

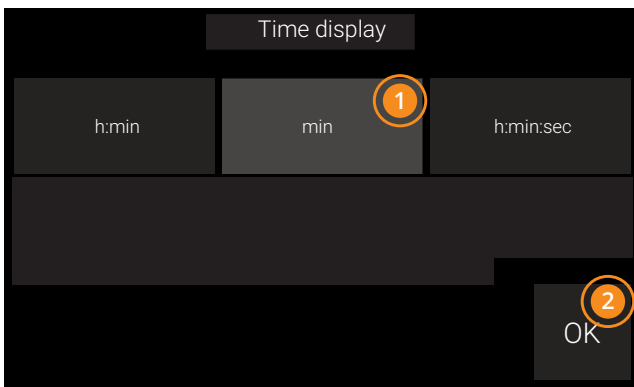


Time Display

 1. Select
2. Confirm

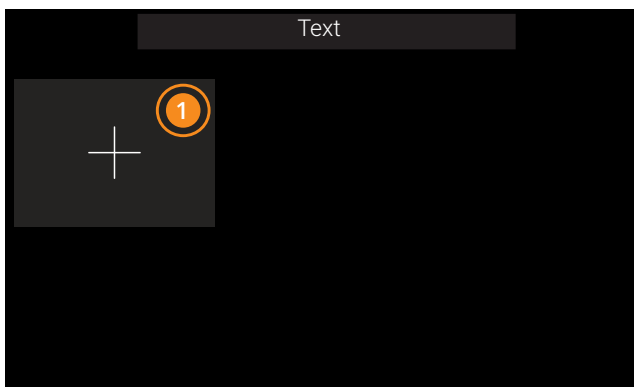

Text Display

 
1. Add text

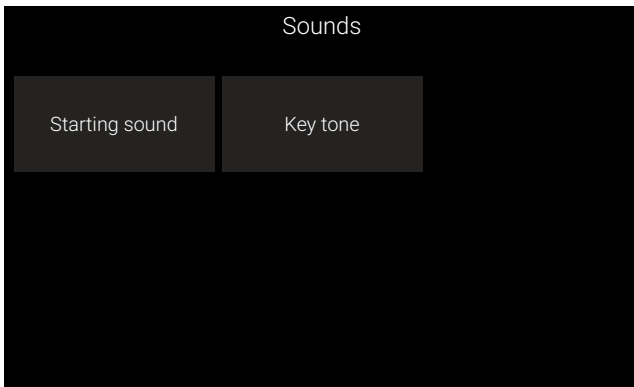


Sounds

i Informationen

 
When setting the key tone, proceed just as when setting the starting sound.

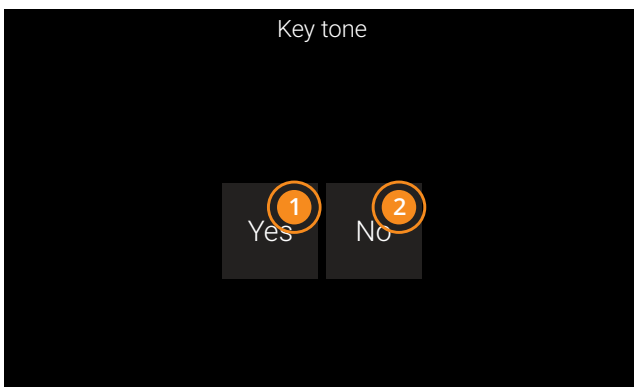

 
1. Activate the key tone
2. Deactivate the key tone

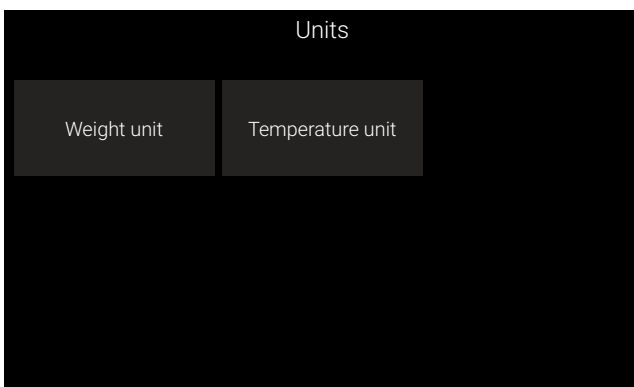

Units

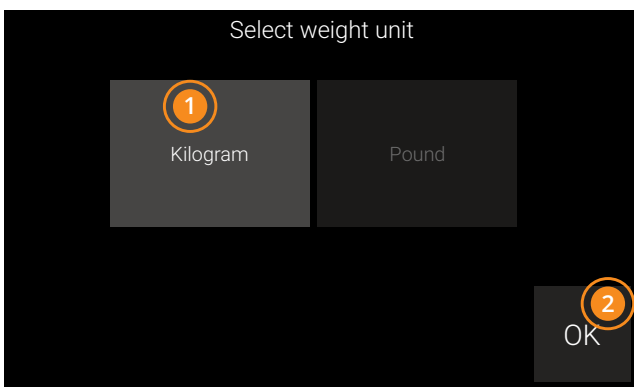 

 1. Select the unit of weight
2. Confirm the selection

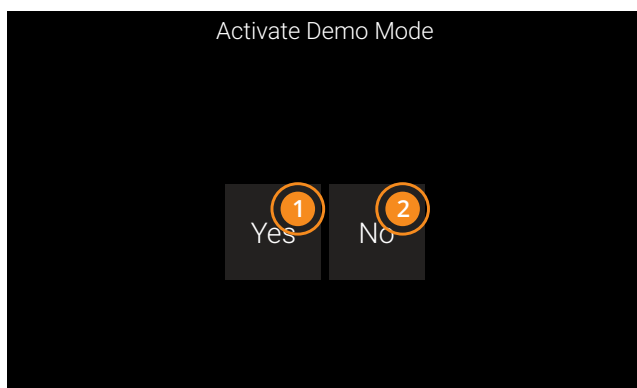


Demo Mode


1. Activate demo mode
2. Deactivate demo mode

i Informationen

 Demo mode allows the user to become familiar with the oven's functions without starting the oven.

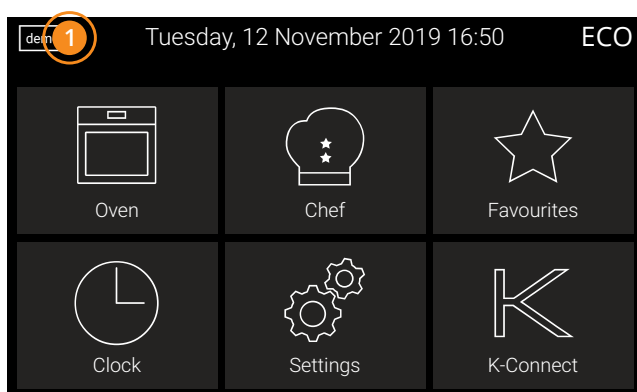

 1. Deactivate demo mode by pressing the demo icon in the status bar

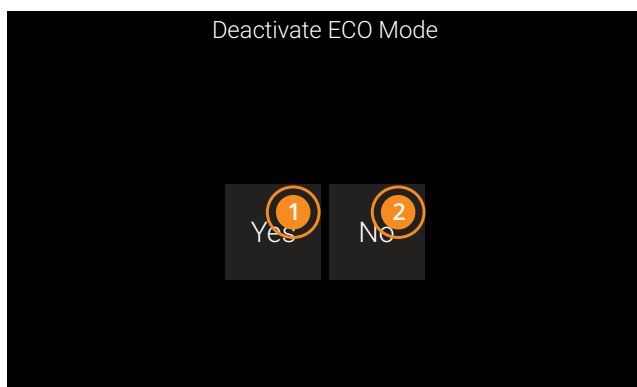


Eco Mode

1. Deactivate eco mode


i Information

 The oven consumes less energy in eco mode.

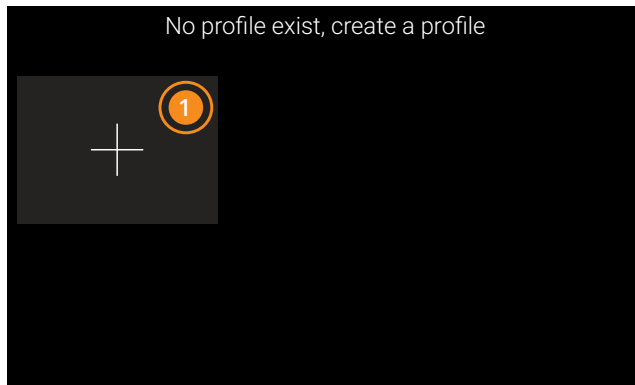


Favourites

 
1. Create a new profile

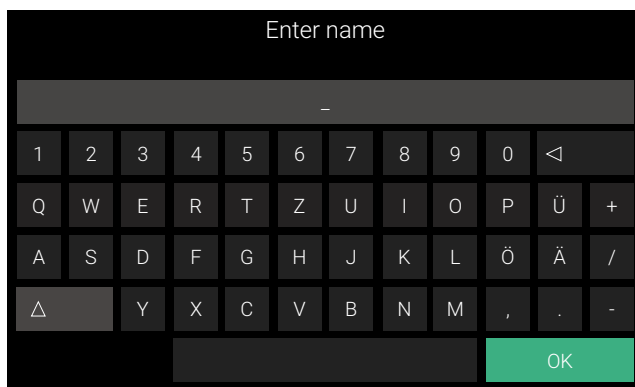

Entering the profile name

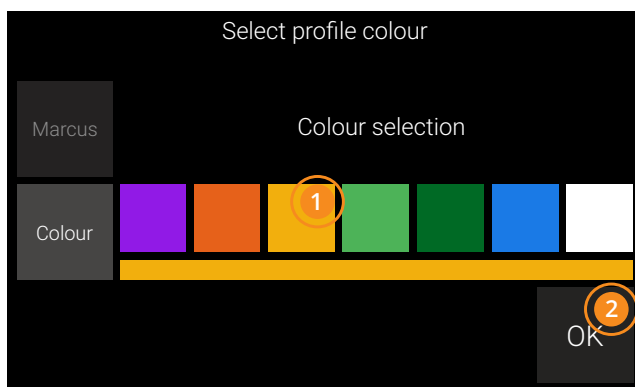 

 1. Select colour
2. Confirm the selection

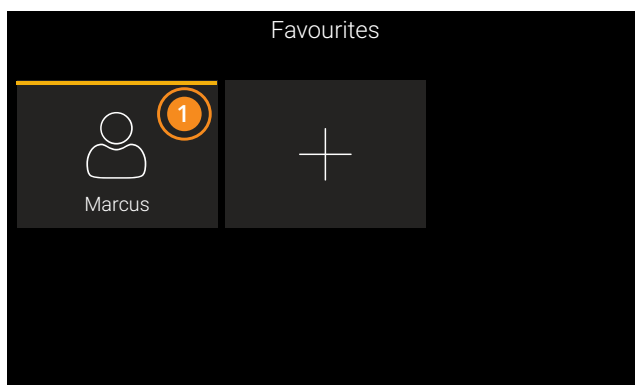

1. Press and hold the user button for 3 seconds to edit the profile



Factory settings

1. Reset to factory settings
2. Cancel

Oven functions



Top/bottom heat



Top heat



Bottom heat



Hot air



ECO



Intensive hot-air convection



Top/bottom heat with fan



Pizza mode



Small grill



Large-area grill



Grill/bottom heat



Grill roasting (small grill with fan)



Turbo fan grilling (large-area grill with fan)



Grill roasting + bottom heat

Back-Spezialfunktionen



Defrost



Slow cook



Keep warm



Freezer food



Plate warming



Au gratin



Preserving



Drying



Baking bread



Fermenting



Yoghurt function

Baking Mode



Add



Remove



Additional functions



Stop time



Quick heating off



Quick heating



Alarm clock



Start time



Edit



Cooking time



Extend cooking time



Delete



Start



Stop



Add to Favourites



Turn food over



Lower tier



Middle tier



Upper tier

Automatic Programmes



Fillet



Fish



Calf/Lamb



Pies



Bakery products



Beef



Poultry



Casseroles



Meat



Sweets



Pork



Vegetables



Vegetarian



Venison



Pizza



Cakes & Desserts

Menus



Oven



Baking



Defrosting



Special functions



Steam functions



Pyrolysis



Chef



Automatic Programmes



Recipes



Favourites



Settings



Time functions



Stopwatch



Alarm clock



Timer



K-Connect

Menus



User



Network



App connection



Network settings



Update

Miscellaneous



On/Off



Light



Parental lock



Back



Home



Refill



Water level



Low water level

Headline



Stop time



Start time



Descaling



Alarm



Create Note



Note available



Cook at low temperature



Cooling



Heating



Alarm clock



Timer



Steam intermittently



Stopwatch



Demo mode



Turn food over



Door locked



Microwave



Low water level



Water level




Quick heat-up





Wi-Fi





Steam


ENERG Y IJA
 енергия · ενεργεια IE IA


Küppersbusch BP6850.0S


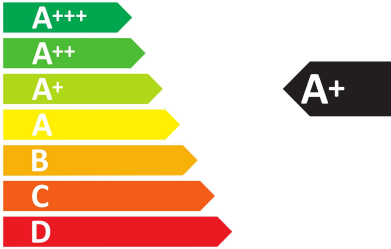
	0.99 kWh/cycle*
70 L	
	0.68 kWh/cycle*



* цикъл · cyklus · portion · zklus · πρόγραμμα · ciclo · tsükkel · ohjelma · ciklus
 ciklas · cikls · ciklu · cyclus · cykl · ciclu · program · cykel

65/2014


ENERG Y IJA
 енергия · ενεργεια IE IA

Küppersbusch B6850.0S

	0.81 kWh/cycle*
70 L	
	0.68 kWh/cycle*

* цикъл · cyklus · portion · zklus · πρόγραμμα · ciclo · tsükkel · ohjelma · ciklus
 ciklas · cikls · ciklu · cyclus · cykl · ciclu · program · cykel

65/2014

Küppersbusch Hausgeräte GmbH

Im Welterbe 2
D-45141 Essen

Telefon: +49 209 401-0
Telefax: +49 209 401-303

E-Mail: info@kueppersbusch.de