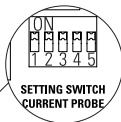


**SLCENERGY
MANAGER**USER'S
MANUAL**CURRENT TRANSFORMER SETTING SWITCH (100 mA)**

SW1	SW2	SW3	SW4	SW5	CT
0	0	0	0	1	80 A / 100 mA
0	0	0	1	0	200 A / 100 mA
0	0	0	1	1	300 A / 100 mA
0	0	1	0	0	400 A / 100 mA
0	0	1	0	1	600 A / 100 mA
0	0	1	1	0	1000 A / 100 mA
0	0	1	1	1	2000 A / 100 mA

salicru

WWW.SALICRU.COM/SUPPORT

+34 938 482 400

SST@SALICRU.COM

SLCENERGY MANAGER



SETTING SWITCH
CURRENT PROBE



USER'S
MANUAL

CURRENT PROBE SETTING SWITCH (5 A)

SW1	SW2	SW3	SW4	SW5	CT
0	1	0	1	1	100 A / 5 A
0	1	1	0	0	300 A / 5 A
0	1	1	0	1	400 A / 5 A
0	1	1	1	0	500 A / 5 A
0	1	1	1	1	600 A / 5 A
1	0	0	0	0	1000 A / 5 A
1	0	0	0	1	1500 A / 5 A
1	0	0	1	0	2000 A / 5 A
1	0	0	1	1	4800 A / 5 A

salicru

WWW.SALICRU.COM/SUPPORT

+34 938 482 400
SST@SALICRU.COM