
INSTALLATION AND SERVICE MANUAL



 
For Installation of Brisbane 9 recessed downlight luminaires Model. BRB-80011

Product drawing (dimensions) C€ IP20 CLASSII

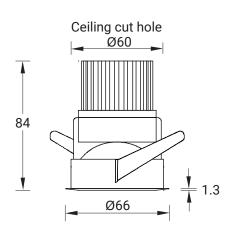

IMPORTANT NOTES: READ ALL INSTRUCTIONS THOROUGHLY AND CAREFULLY
PRIOR TO INSTALL OF FITTING AND RETAIN FOR FUTURE REFERENCE

- 1 INSTALLATION MUST BE BY A REGISTERED ELECTRICAL CONTRACTOR.
- 2 ENSURE ELECTRICAL POWER SUPPLY IS SWITCHED OFF BEFORE AND DURING THE INSTALLATION.
- 3 CUT OUT CEILING APERTURE TO SUIT. REFER TO CATALOGUE AND CHECK UNIT FOR SIZE.
- 4 CONNECT LUMINAIRE TO MAIN SUPPLY.
- 5 COMPRESS THE LEAF SPRINGS (A) AND WHILE IT IS COMPRESSED, INSERT THE LUMINAIRE INTO CEILING APERTURE.



- 6 DO NOT ALLOW ANY MATERIALS TO COVER THE LUMINAIRE COMPLY WITH AS/NZS 3000:2007 CLAUSE 4.5.2.3
- 7 ALL LUMINAIRES ARE FACTORY TESTED, IF THE LUMINAIRE FAILS TO OPERATE, CONTACT YOUR SUPPLIER.

DO NOT ATTEMPT TO MODIFY.

8 - DO NOT INSULATE TEST.
REFER TO ELECTRONIC INSTRUCTIONS.

- LIGMAN standard products are supplied with the control gear 220-240V 50/60Hz.

 The control gear for other voltages and frequencies is available upon request, please consult us for more details.
- LIGMAN luminaires are designed to conform IEC 60598 2-2 standard.

 Technical amendments and modifications techniques reserved.

Ligman Lighting

Europe Headquarters

Α

Ligman Europe s.r.o. VGP Park Usti nad Labem, P2 120, 40317 Prestanov Czech Republic Tel. +420 477 071 500 sales.cz@ligman.com Thailand Headquarters Ligman Lighting Co., Ltd. 17/2 Moo 4, Monthong, Bangnampreaw, 24150, Chachoengsao Tel: +66 33 026 082 info@ligman.com