



This document shows how to use the GM-PEV-EM-SE evacuation button in iP-Opener system.

CONNECTION TO THE IP OPENER CONTROLLER

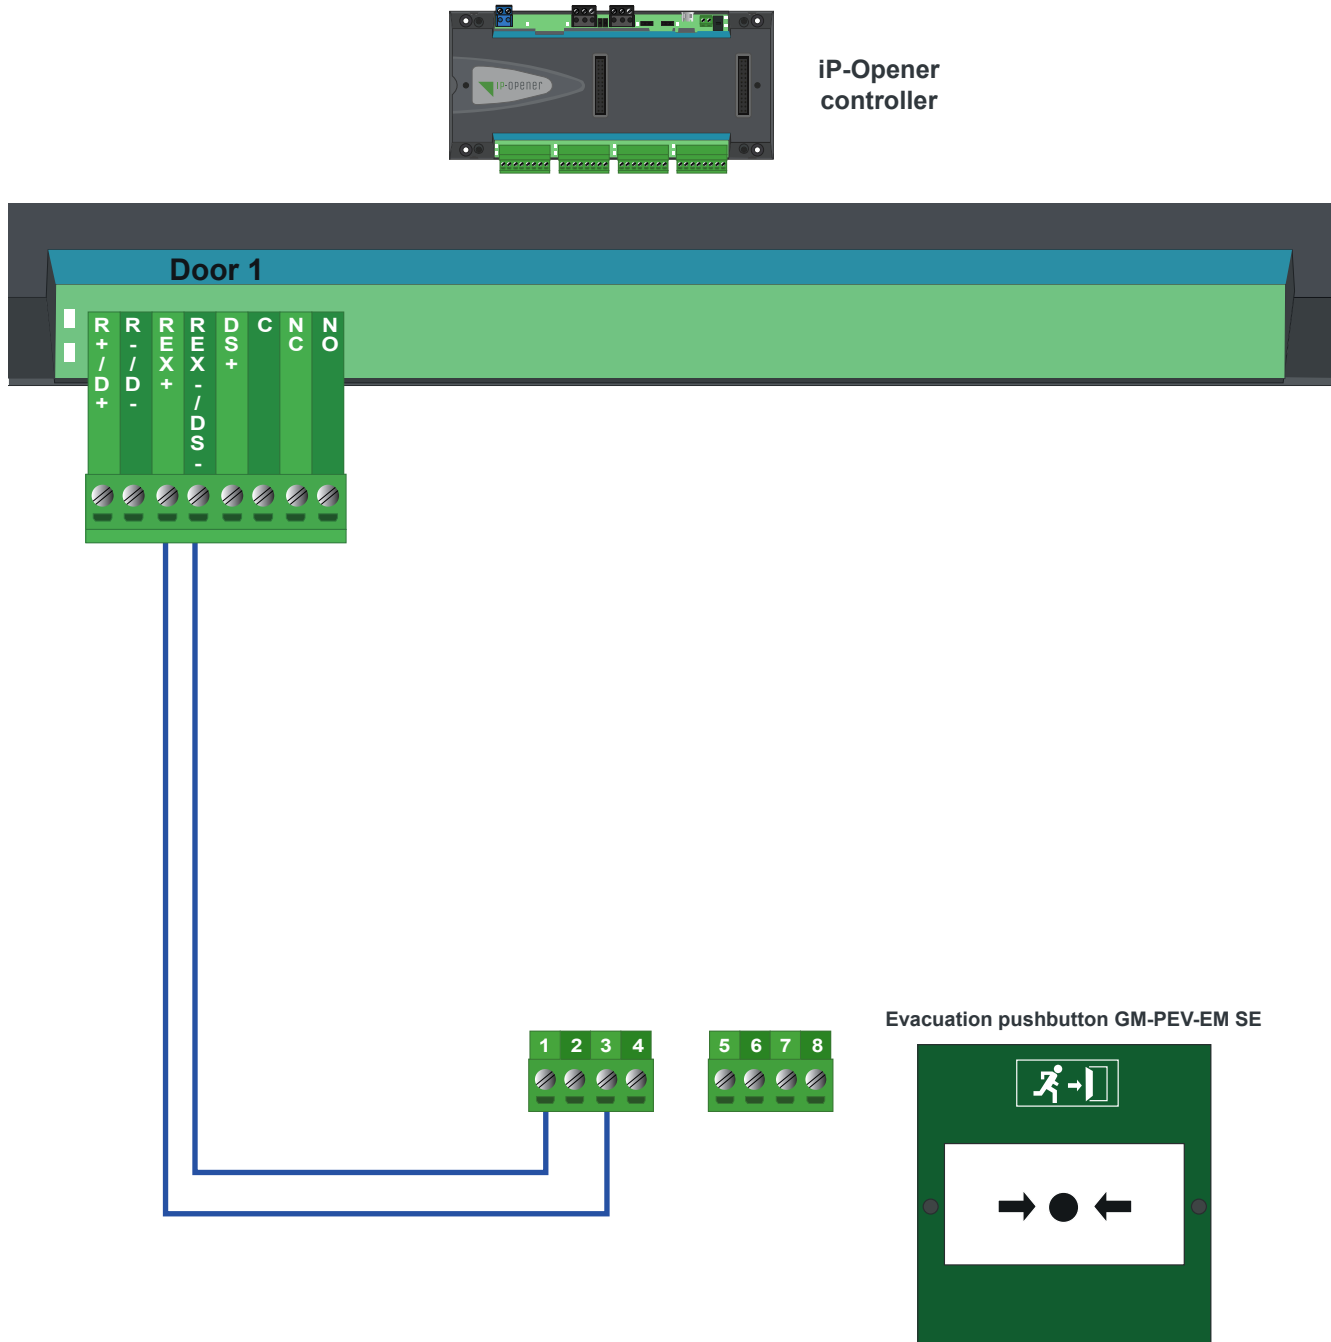

*In case to connect the evacuation push button to the output push button terminal of the controller to re-secure the door(s), the push button will need to be re-armed and the door(s) will need to be manually secured in iP Opener Manager.

CONNECTION TO IP OPENER RELAY EXPANDER

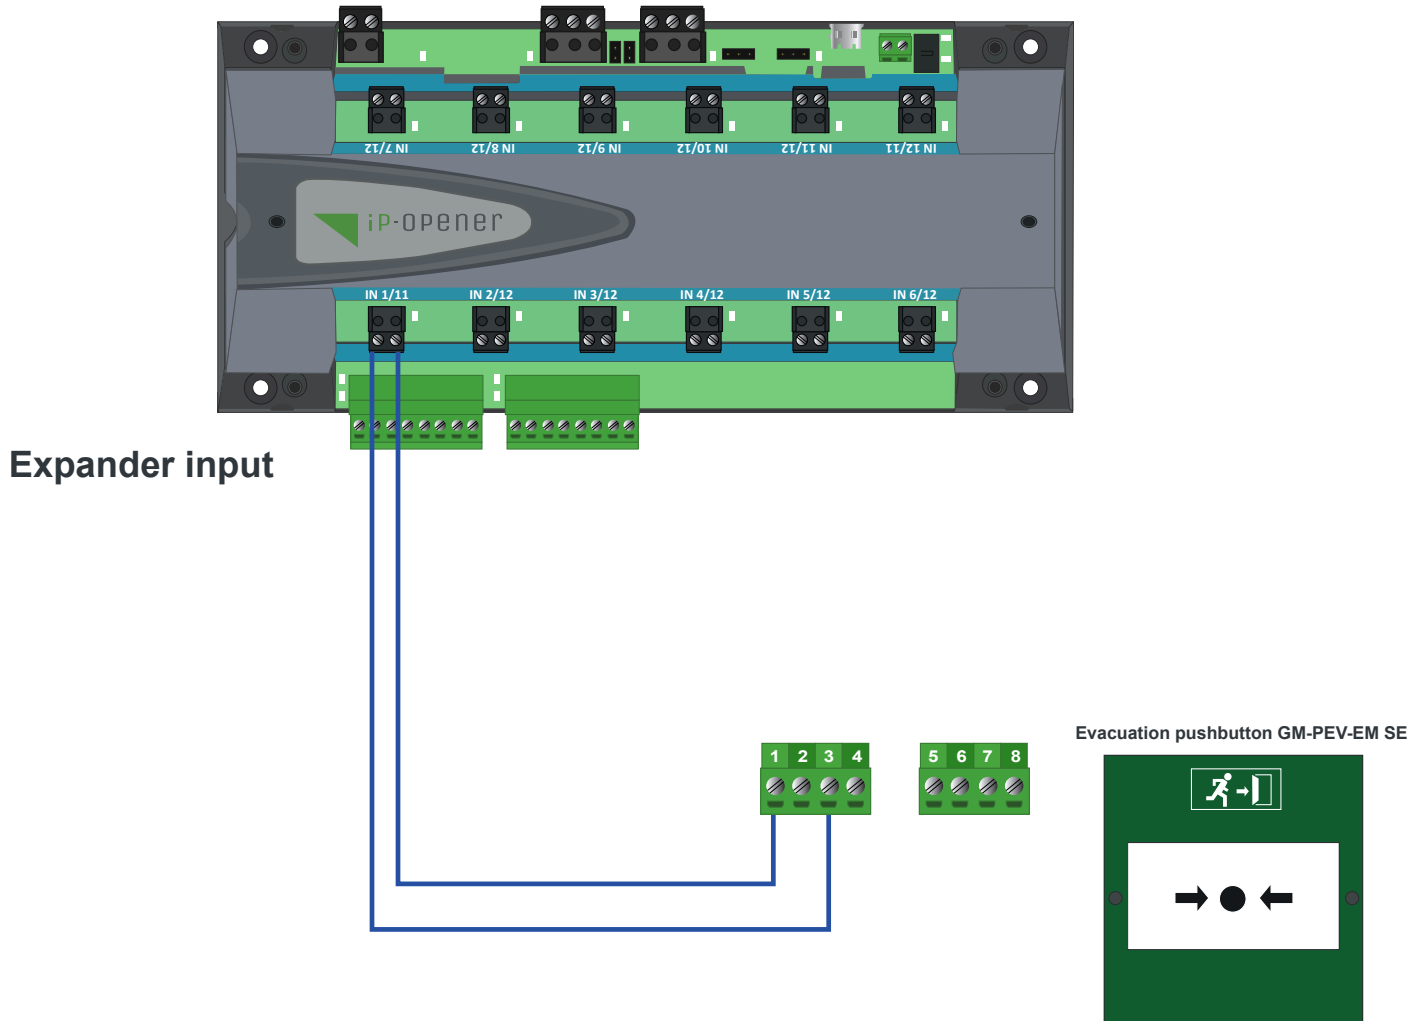

*In case to connect the evacuation push button to the input expander, the system can be configured so that the door or doors will be secured again after arming the push button again.