



ART 7/G+/48



USER MANUAL


INDEX

1. System operation	3
1.1. Call reception	3
1.2. In communication	3
1.3. Make a call	3
2. Home screen	4
3. Functions	4
3.1. View images from the door panel	4
3.2. Intercom	4
3.3. Events	4
3.4. Messages	6
4. Settings	7
4.1. Personal	7
4.2. Alarms	8
4.3. System	10


1. SYSTEM OPERATION

1.1 Call reception:

When receiving a call the monitor starts beeping displaying on the screen who is trying to communicate with the house. The monitor will automatically take a snapshot so that if the call is not answered, you can check who the caller was.

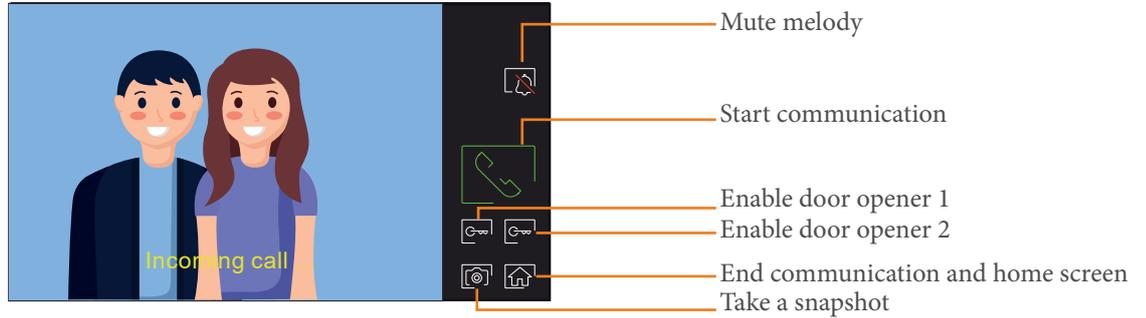


1.2. In communication:

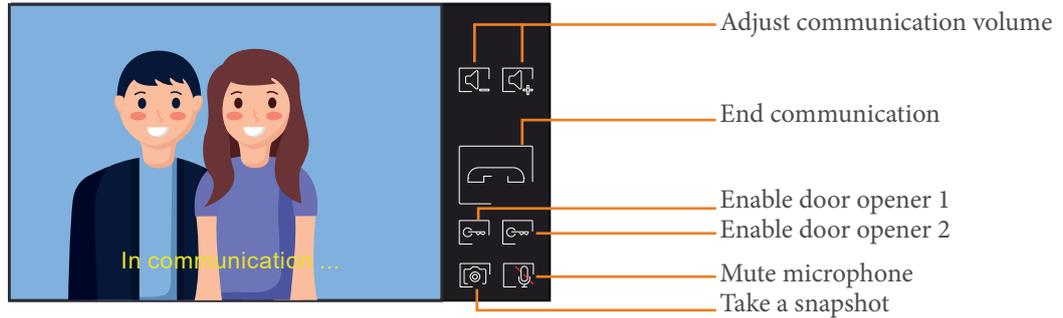


1.3. Make a call:

To start a call with other device in the installation select from the home screen  . Make the call by dialling the dialling code or via the contact book:

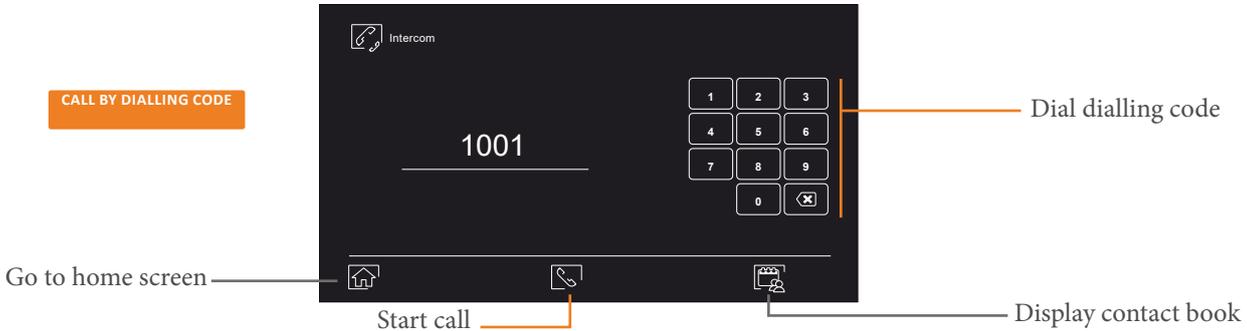

(*) It is possible to do a call rapidly to the guard unit. To do so, simply press  from the home screen.

2. HOME SCREEN

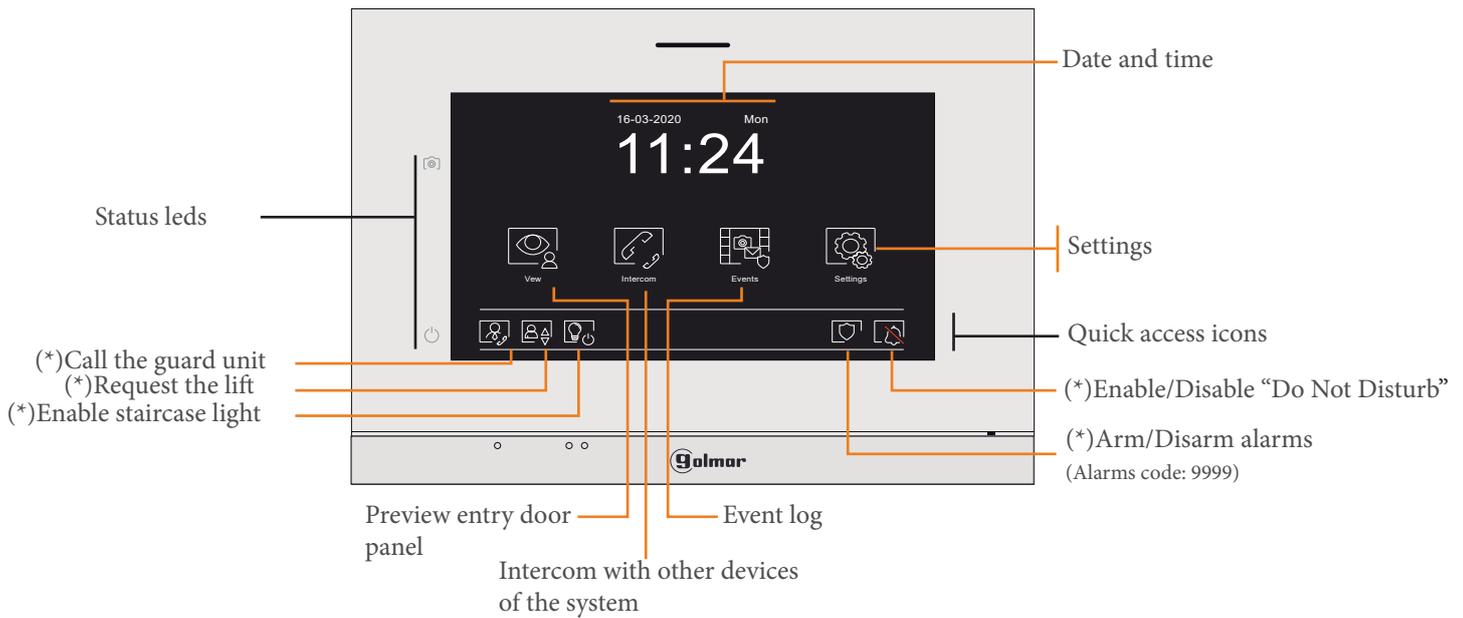

STATUS LEDS:



- Enabled snapshot taking.
- Doctor mode enabled (led blinking)
Open door enabled (led fixed)
- Do not disturb mode enabled.
- Power-on indicator.

(*)QUICK ACCESS ICONS:

Icons located on the bottom row of the screen are quick access. To be able to use them the corresponding function must be enabled and in some cases have an additional element (guard unit, lift controller, alarm sensor...).

FUNCTIONS



3.1. View image from the door panel.

This function allows to see the image of the system's panels and ONVIF cameras.



Select the panel from which you want to display the image. In case that the desired choice is a camera image, press to see the list of cameras.



Options when displaying the image of a panel.

- Toggle previous or next panel image
- Start communication.
- Enable door opener 1 or 2.
- Back to previous screen.
- Take a snapshot.



3.2. Intercom.

See the "Make a call" section described above in system operation.



3.3. Events.


The events section provides the following options:



These are defined in detail below:



Missed calls, shows the log of unanswered incoming calls:

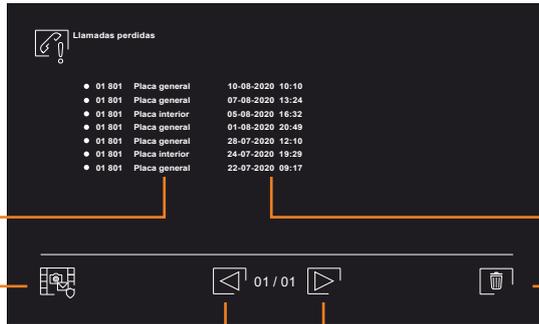

(*) Logs can be deleted individually or collectively.

Individual deletion, press , select the logs to be deleted → 01 801 General panel 10-08-2020 10:10 confirm deletion pressing on .

Complete deletion, press , press (close to waste bin) to do a complete selection and confirm pressing again .

Panel from which the call was made.
 Date and time when it was produced.
 Back to the previous screen.
 Move through the various log pages.
 Delete logs (*)



Alarms, shows the log of alarms produced in the system.



(*) Alarm logs can be deleted collectively.


Complete deletion, press and confirm pressing again .

Alarm ID.
 Type of alarm sensor ID.
 Date and time when it was produced.
 Back to the previous screen.
 Move through the various log pages.
 Delete logs. (*)



Recordings, shows the snapshot and recordings log.

*Voice recordings of unanswered calls requires the activation of the "leave message" option see "user settings".

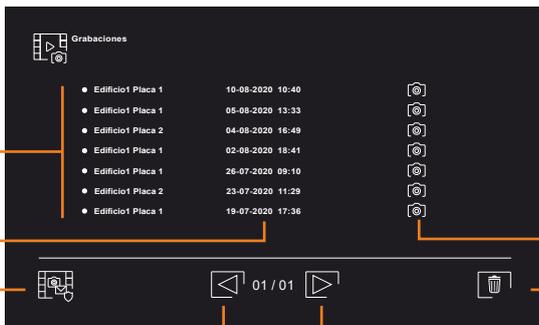

Panel from which the snapshot or recording was made.
 Date and time when it was produced.
 Show snapshot.
 Back to the previous screen.
 Move through the various log pages.
 Delete snapshots. (*)


(*) Logs can be deleted individually (in menu or from snapshot or recording) and collectively.

Individual deletion from menu, press , select the snapshot to be deleted → 01 801 Placa general 10-08-2020 10:10 and confirm .

Complete deletion, press , press (close to the waste bin) for a complete selection and confirm pressing again .


Individual deletion from snapshot or recording, press and confirm .

Snapshot display
 Display the previous or next snapshot.
 Back to the previous screen.

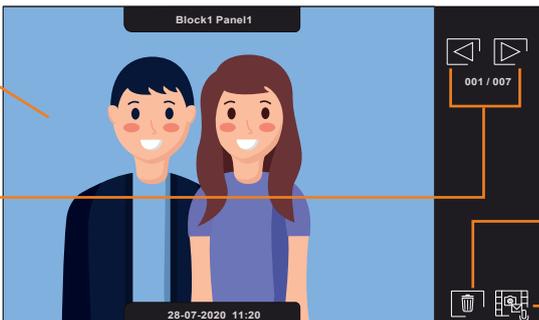

In case of voice recordings, the use is the same except that the button is available for the message play.

 3.4. Messages: Displays received messages and allows the sending.

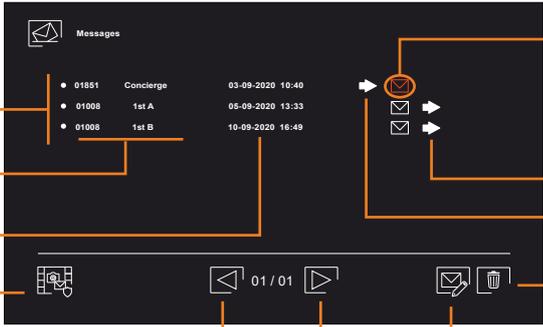

Recorded messages

Origin of the message

Date and time when it was produced.

Back to the previous screen.

Move through the various log pages.

Send message.

*Alarm message.
The symbol  indicates that it is an alarm message.
IMPORTANT: When receiving an alarm message, the monitor will alert of that on screen and in a sonorous way.

Send messages.

Received messages.

(*) Messages can be deleted individually or collectively.
Individual deletion, press , select messages to be deleted
→  01 801 General panel 10-08-2020 10:10 confirm deletion pressing again .

Complete deletion, press , press  (close to the waste bid) for a complete selection and confirm pressing again .

SEND MESSAGE:

When pressing send message  a keyboard is displayed for writing:



Back to the previous screen.

Keyboard.


Text of the message

Send message.

Addressee selection.

Once the message has been written, the addressee selection will be possible in two ways, by dialling or via the address book.

DIALLING

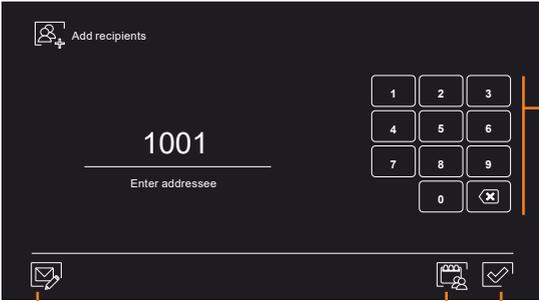


Back to the previous screen.

Display address book.

Dial dialling code

Validate.

ADDRESS BOOK

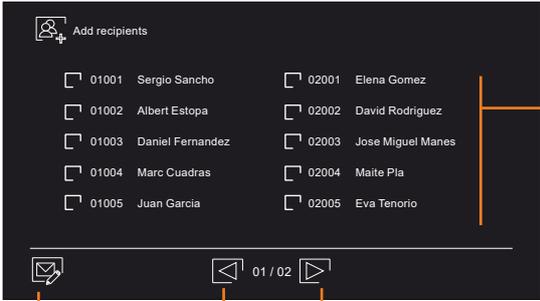


Back to the previous screen.

Move through the various address book pages.

Select addressee.

In this moment the message will be ready to send, only will left to press  :

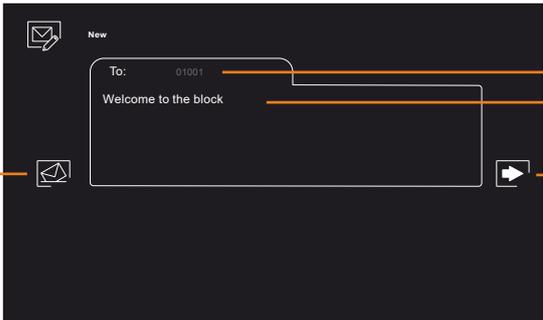


Back to the previous screen.


Send message.

Adresse and indicated text.

A progress bar will start and after brief moments the confirmation of send will be obtained.

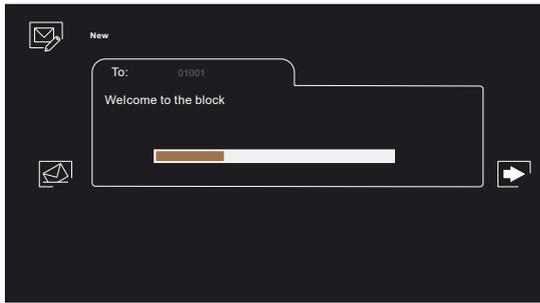

Progress bar

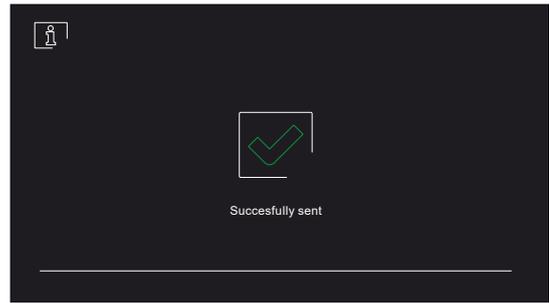

Confirmation

4. SETTINGS



Settings.

The settings section provides the following options:



Personal



Alarms



System


These are defined in detail below:



4.1. Personal: melody selection, volume, do not disturb ...



User.

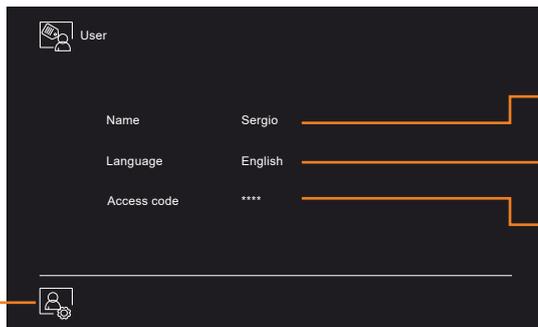

Identification name of the monitor.

(the name modification is not instantaneous, it updates at midnight)

Language selection.


Set the code of panel opening.

*The code cannot be repeated or consecutive. Example: 8888 or 1234 would not be valid

Back to the previous screen.



Ringtones.

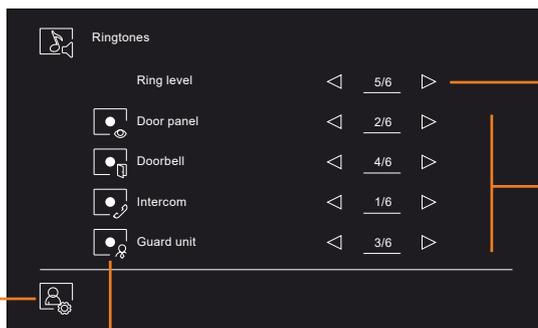

Adjust ringtone volume between 1-6

Select ringtone between 1-6.


(selecting different ringtones allow to differentiate the origin of the call)

Back to the previous screen.

Mute the call from this source



Do not disturb.

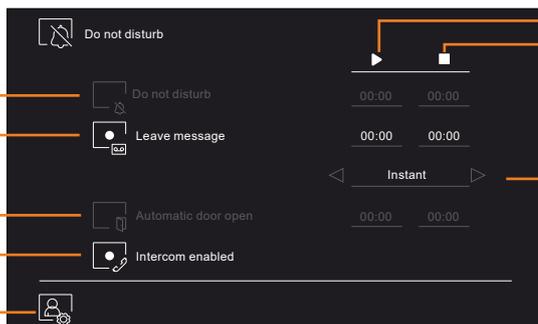

Start time.

End time.

Interval in which it will be enabled.

ENABLE/DISABLE

Do not disturb mode.

Message recording

(*)Doctor mode.


Intercom.

Back to the previous screen.

Instant activation or if the call is not answered.

(*)Request password to prevent it from being activated unintentionally. Installer password.

 Screen.

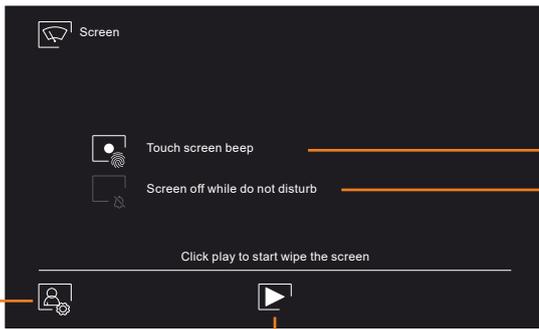


Back to the previous screen


Enable/disable key press confirmation sound.
When "Do not disturb" mode is enabled. Active screen allows to see who makes the call. When screen is off we will not be disturbed by the bright given off by the monitor.

Locks the screen during 30 seconds to be able to clean it.

 4.2. Alarms: 4 alarms zones settings.

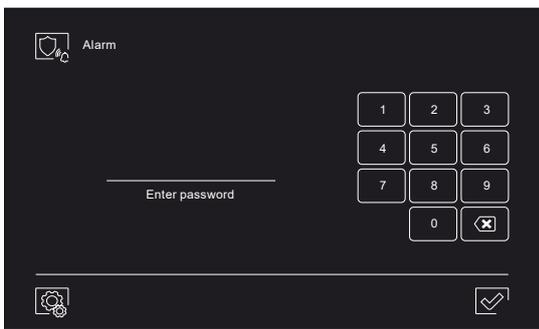


Default password to access the alarm settings is 9999.

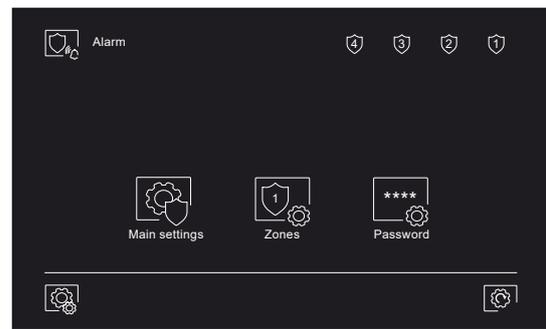

Home screen of alarm settings.



Main settings (generals)
These settings apply to all 4 alarm inputs (4 zones).

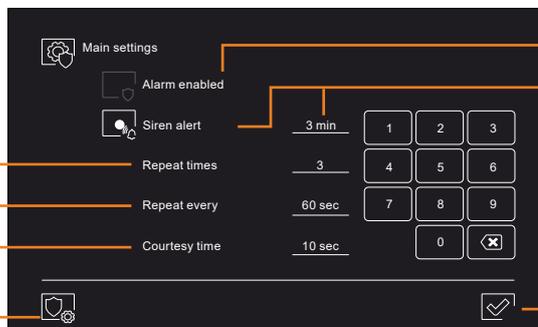

Siren repetition cycles.

Time interval in which this is repeated.

Time after detection in which it is possible to deactivate the alarm without siren activation.

Back to the previous screen


Activated or deactivated alarm.
Sirena on or off and timeout

Validate

The active alarm allows the quick access  located at the bottom of the monitor home screen. A short press will give you quick access to check the status of the alarm zones.



Short press

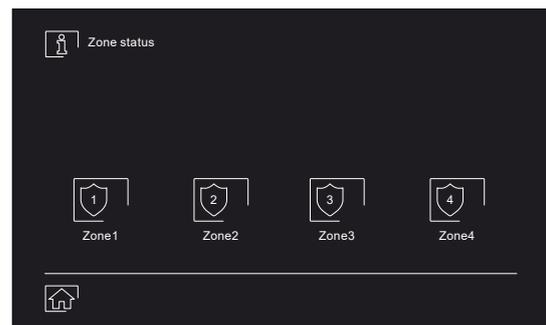


Alarm zones status.

A long press (keep pressing until se armed countdown) will arm the alarm.




Long press.

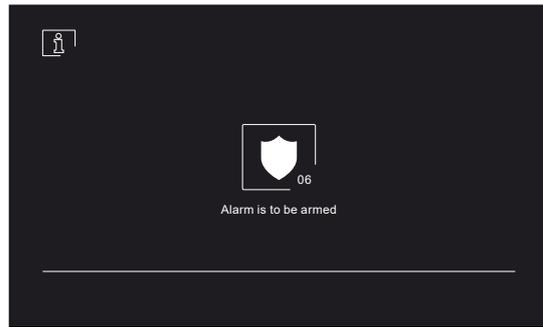


Arming the alarm.
After the end of the countdown, it will confirm the arming of the alarm on screen, indicating "the alarm has been armed".



Zones

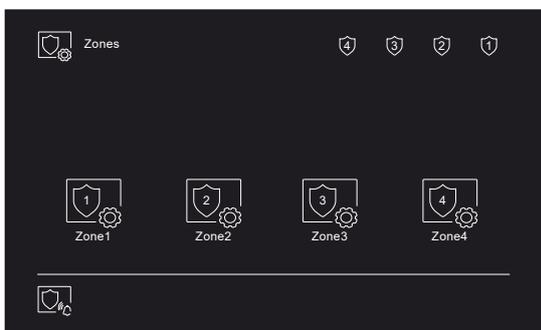

4 alarm input settings.

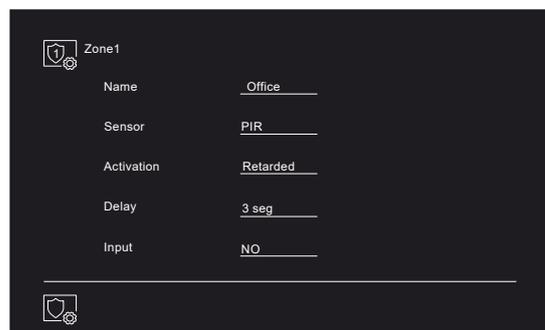


Possible settings per zone.

Zone settings description:

1. Name, label with which we will identify in the alarm register which alarm it is.
2. Sensor, definition of the sensor type connected to the alarm input:



3. Activation, behaviour when the alarm occurs.

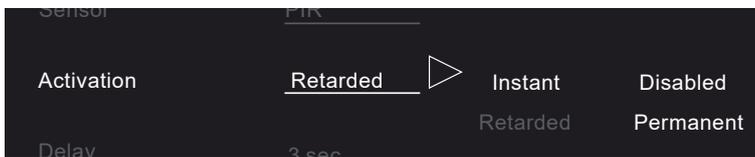

Deactivated: Siren activation will not produce even if the sensor activates.
Retarded: Siren activation will produce after the set delay time has elapsed.



Instantaneous: Siren activation occurs at the same time as the sensor is activated.
Permanent: The alarm is monitored regardless of whether the alarm is armed or disarmed.

4. Input, type of contact of the alarm sensor connected.




NO: Normally open, idle the sensor is open.
NC: Normally closed, idle the sensor is closed.



Password


Contraseña

The default password to access the alarm settings is 9999. It is possible to set a different one from the password menu:

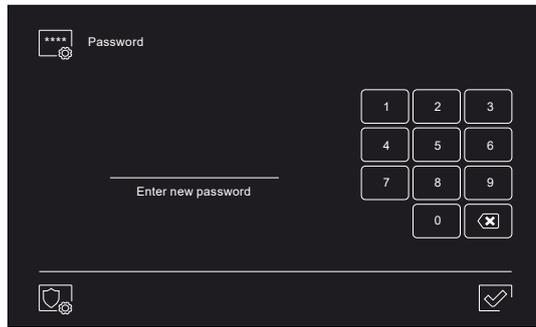


IMPORTANT: In case of modify the password keep in mind the new one.

It is possible to start from zero the alarm configuration, restarting the settings, for this:

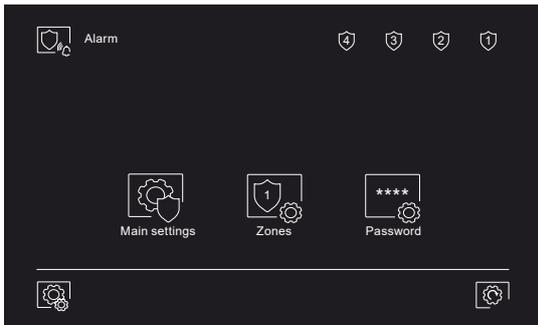

Press the  icon at the bottom right of the main alarm menu.

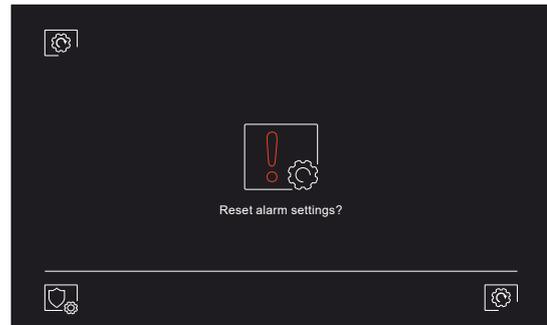

Confirm restarting pressing again .




4.4. System: installer settings.


Sistema

“System” settings are not detailed in this manual as these are installer settings.

To conclude this manual indicate that you have a QR link to access the updated documentation of the product:

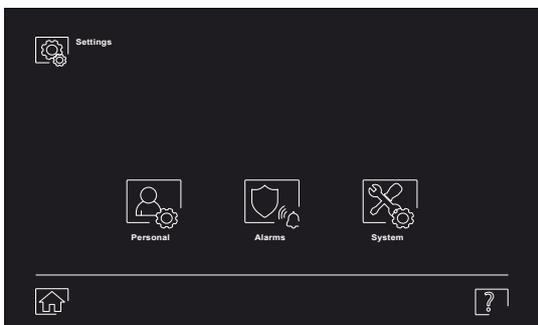

On the main screen of the settings menu, press the icon located on the bottom right of the screen .

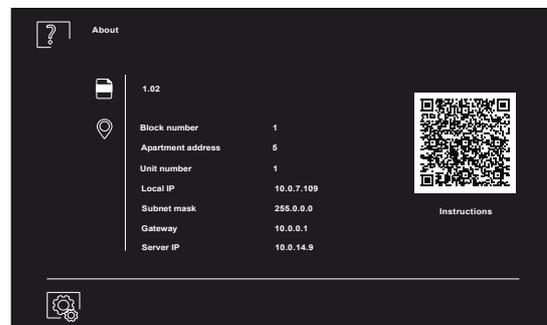

QR to download the manual.



C/ Silici 13. Poligon Industrial Famadas
08940 – Cornellà del Llobregat – Spain
golmar@golmar.es
Telf: +34 934 800 696
www.golmar.es