



ART 7AW/G+



USER MANUAL


INDEX

1. System operation	3
1.1. Call reception	3
1.2. In communication	3
1.3. Make a call	3
2. Home screen	4
3. Functions	3
3.1. View	3
3.2. Intercom	3
3.3. Events	3
3.4. Messages	6
4. Settings	7
4.1. Personal	7
4.2. Alarms	8
4.3. Wi-Fi	10
4.4. System	10


1. SYSTEM OPERATION

1.1 Call reception:


When receiving a call the monitor starts beeping displaying on the screen who is trying to communicate with the house. The monitor will automatically take a snapshot so that if the call is not answered, you can check who the caller was.

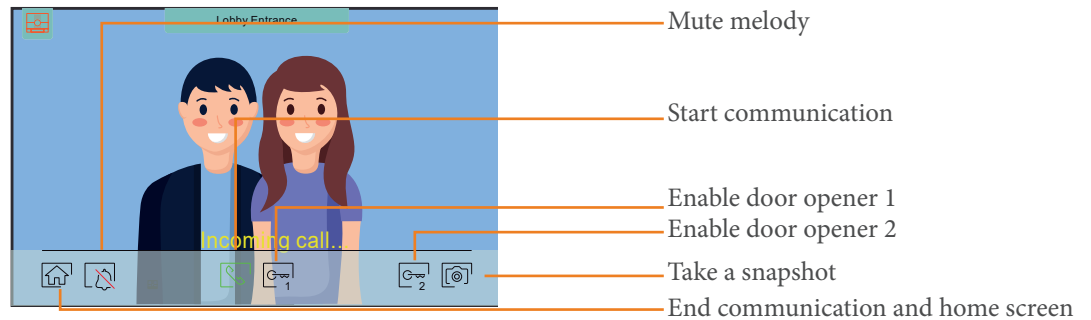


1.2. In communication:

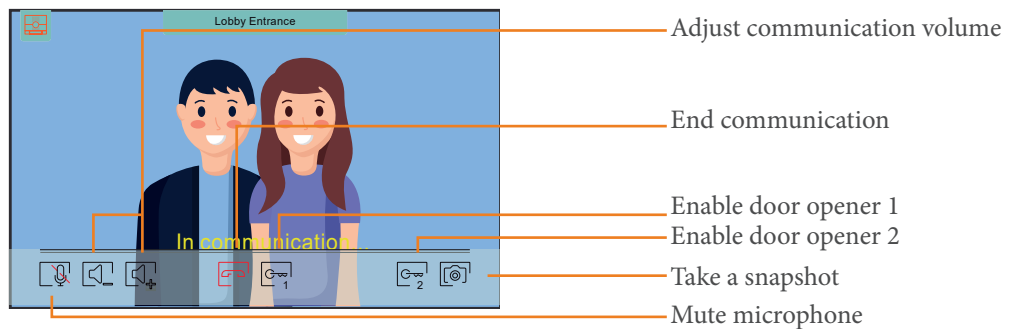


1.3. Make a call:

To start a call with other device in the installation select from the home screen  . Make the call by dialling the dialling code or via the contact book:

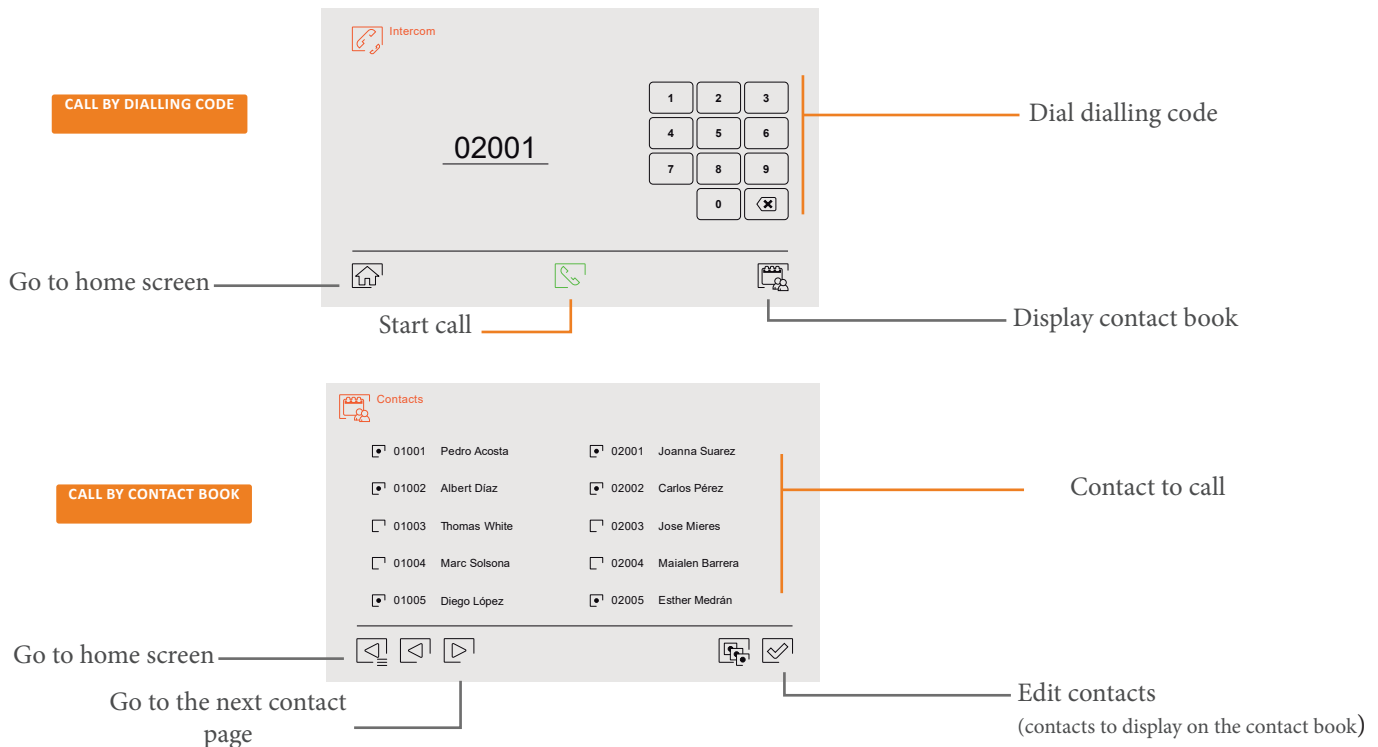


(*) It is possible to do a call rapidly to the guard unit. To do so, simply press  from the home screen.

2. HOME SCREEN

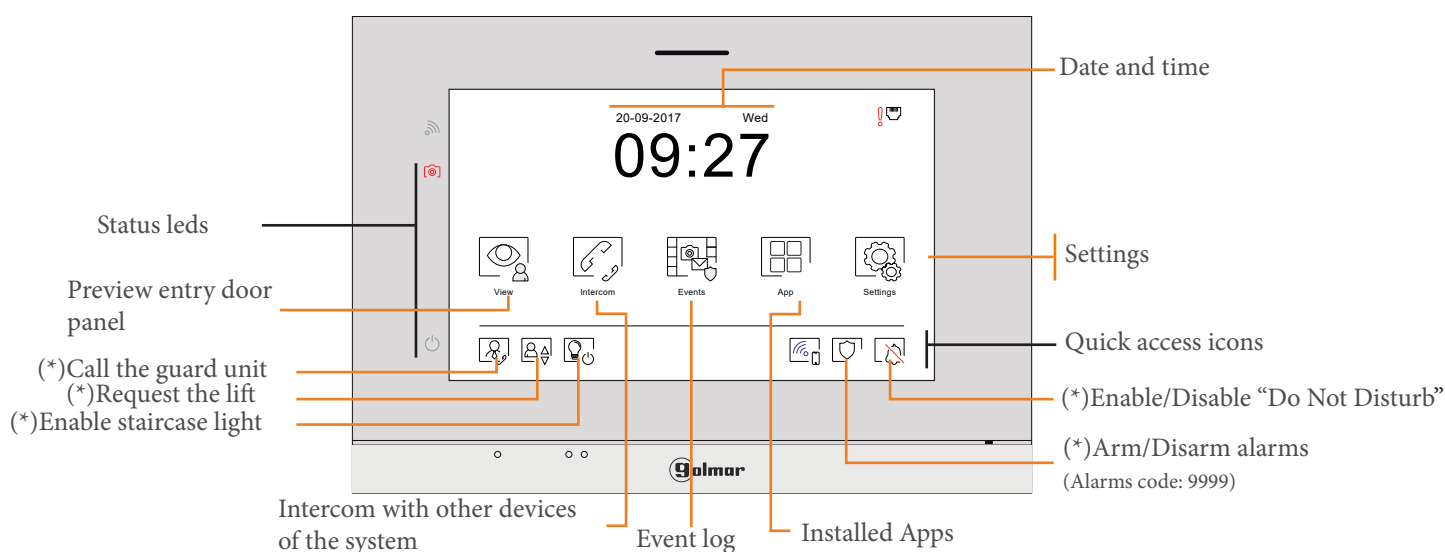

STATUS LEDS:

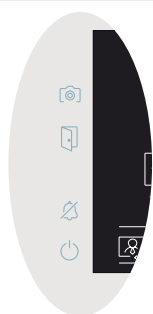

- Enabled snapshot taking.
- Doctor mode enabled (led blinking)
Open door enabled (led fixed)
- Do not disturb mode enabled.
- Power-on indicator.

(*) QUICK ACCESS ICONS:


Icons located on the bottom row of the screen are quick access. To be able to use them the corresponding function must be enabled and in some cases have an additional element (guard unit, lift controller, alarm sensor...).

FUNCTIONS




3.1. View image from the door panel.

This function allows to see the image of the system's panels and ONVIF cameras.

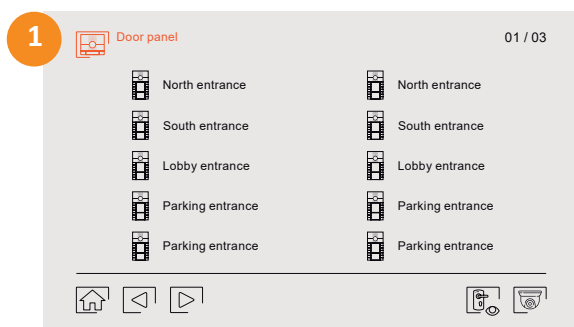

Select the panel from which you want to display the image. In case that the desired choice is a camera image, press to see the list of cameras.

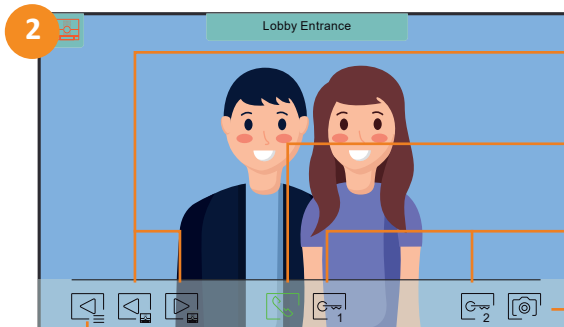

Options when displaying the image of a panel.

- Toggle previous or next panel image
- Start communication.
- Enable door opener 1 or 2.
- Take a snapshot.
- Back to previous screen.



3.2. Intercom.

See the "Make a call" section described above in system operation.



3.3. Events.

The events section provides the following options:



These are defined in detail below:



Missed calls, shows the log of unanswered incoming calls:




Panel from which the call was made.




Back to the previous screen.





 
Move through the various log pages.

Date and time when it was produced.

Delete logs (*)

(*) Logs can be deleted individually or collectively.
Individual deletion, press , select the logs to be deleted →  01 801 General panel 10-08-2020 10:10 confirm deletion pressing on .

Complete deletion, press , press  (close to waste bin) to do a complete selection and confirm pressing again .

Panel	Name	Date	Time	Icon
01001	Peter	22-08-2020	23:00	
01801	Lobby entrance	12-08-2020	11:55	
01003	Thomas Ham	28-07-2020	07:40	
02801	Parking entrance	04-07-2020	13:15	
01851	Concierge	30-06-2020	18:20	



Alarms, shows the log of alarms produced in the system.

Alarm ID.



Type of alarm sensor ID.

 
 
 

 
Back to the previous screen.

Move through the various log pages.

Date and time when it was produced.

Delete logs. (*)

(*) Alarm logs can be deleted collectively.
Complete deletion, press  and confirm pressing again .

Zone	Type	Date	Time	Icon
Zone 1	PIR	22-08-2020	23:00	
Kitchen	Gas	12-08-2020	11:55	
Zone 4	Custom	28-07-2020	07:40	
Bathroom	Water	04-07-2020	13:15	
Main entrance	Magnetic	30-06-2020	18:20	



Recordings, shows the snapshot and recordings log.

*Voice recordings of unanswered calls requires the activation of the "leave message" option see "user settings".

Panel from which the snapshot or recording was made.




Date and time when it was produced.




Back to the previous screen.



Move through the various log pages.





 
Show snapshot.

Delete snapshots. (*)

(*) Logs can be deleted individually (in menu or from snapshot or recording) and collectively.
Individual deletion from menu, press , select the snapshot to be deleted →  01 801 Placa general 10-08-2020 10:10 and confirm .


Complete deletion, press , press  (close to the waste bin) for a complete selection and confirm pressing again .

Individual deletion from snapshot or recording, press  and confirm .


Panel	Name	Date	Time	Icon
01001	Peter	22-08-2020	23:00	
01801	Lobby entrance	12-08-2020	11:55	
01003	Thomas Ham	28-07-2020	07:40	
02801	Parking entrance	04-07-2020	13:15	
01851	Concierge	30-06-2020	18:20	

Snapshot display

Display the previous or next snapshot.

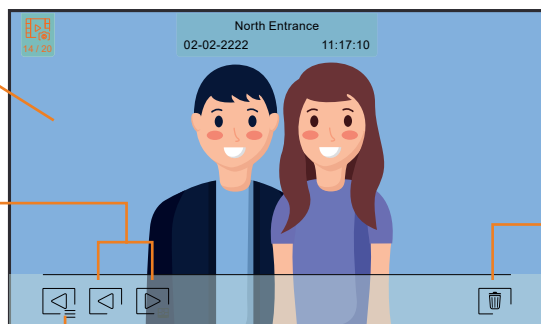

Back to the previous screen.

In case of voice recordings, the use is the same except that the button  is available for the message play.



3.4. Messages, displays received messages and allows the sending.

Mail box

- Recorded messages: 01891 South guard 22-08-2020 23:00
- Origin of the message: 01001 Peter 12-08-2020 11:55
- Date and time when it was produced: 01003 Thomas Ham 28-07-2020 07:40
- 01852 North guard 04-07-2020 13:15
- 99901 Site guard 30-06-2020 18:20

Navigation icons: Back to the previous screen, Move through the various log pages, Send message.

Message details: 01 / 03

- * Alarm message. The symbol indicates that it is an alarm message. IMPORTANT: When receiving an alarm message, the monitor will alert of that on screen and in a sonorous way.
- Send messages.
- Received messages.
- (*) Messages can be deleted individually or collectively. Individual deletion, press , select messages to be deleted 01 801 General panel 10-08-2020 10:10 confirm deletion pressing again . Complete deletion, press , press (close to the waste bid) for a complete selection and confirm pressing again .

SEND MESSAGE:

When pressing send message a keyboard is displayed for writing:

New

To: Click to add 0/256

Write your message here

Keyboard: Q W E R T Y U I O P, A S D F G H J K L Ñ, 123, Send message.

Navigation icons: Back to the previous screen, Send message.

Labels: Addressee selection, Text of the message.

Once the message has been written, the addressee selection will be possible in two ways, by dialling or via the address book.

DIALLING

Add recipients

01001,02001,10123

Enter recipients

Dial dialling code

Navigation icons: Back to the previous screen, Display address book, Validate.

ADDRESS BOOK

Add recipients

01001 Pedro Acosta	02001 Joanna Suarez
01002 Albert Diaz	02002 Carlos Pérez
01003 Thomas White	02003 Jose Mieres
01004 Marc Solsona	02004 Maialen Barrera
01005 Diego López	02005 Esther Medrán

Select addressee.

Navigation icons: Back to the previous screen, Move through the various address book pages.

In this moment the message will be ready to send, only will left to press :

New

To: 01001 0/256

Welcome to the building

Navigation icons: Back to the previous screen, Send message.

Labels: Addressee and indicated text.

4. SETTINGS



Settings.
The settings section provides the following options:



Personal



Alarms



Wi-Fi
* En modelos ART 7 WiFi



System

These are defined in detail below:



4.1. Personal: melody selection, volume, do not disturb ...



User.

User

Language

English

Name

Peter Ni

Access code

Back to the previous screen.

Identification name of the monitor.
(the name modification is not instantaneous, it updates at midnight)

Language selection.

Set the code of panel opening.

*The code cannot be repeated or consecutive. Example: 8888 or 1234 would not be valid



Ringtones.

Ringtone

Ring level

< 3 / 6 >

Door panel

< 1 / 6 >

Doorbell

< 3 / 6 >

Intercom

< 5 / 6 >

Guard unit

< 6 / 6 >

Back to the previous screen.

Adjust ringtone volume between 1-6

Select ringtone between 1-6.
(selecting different ringtones allow to differentiate the origin of the call)



Do not disturb.

ENABLE/DISABLE
Do not disturb mode.
Message recording
(*)Doctor mode.
Intercom.
Back to the previous screen.

Do not disturb

Do not disturb

00 : 00 00 : 00

Leave message

00 : 00 00 : 00

Automatic door open

00 : 00 00 : 00

Intercom enabled

Instant

Back to the previous screen.

Start time.
End time.


Interval in which it will be enabled.

Instant activation or if the call is not answered.

(*)Request password to prevent it from being activated unintentionally.
Installer password.



Screen.

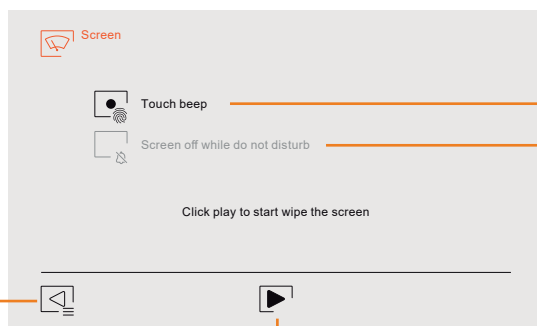

Enable/disable key press confirmation sound.

When "Do not disturb" mode is enabled.

Active screen allows to see who makes the call.


When screen is off we will not be disturbed by the bright given off by the monitor.

Back to the previous screen


Locks the screen during 30 seconds to be able to clean it.



4.2. Alarms: 4 alarms zones settings.

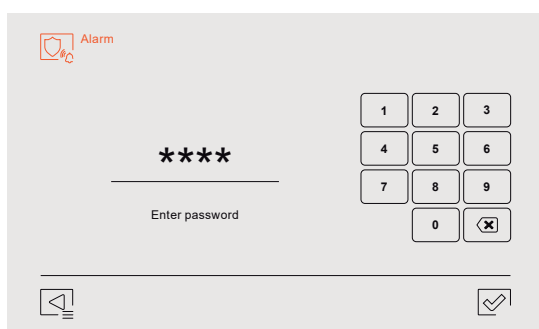

Default password to access the alarm settings is 9999.

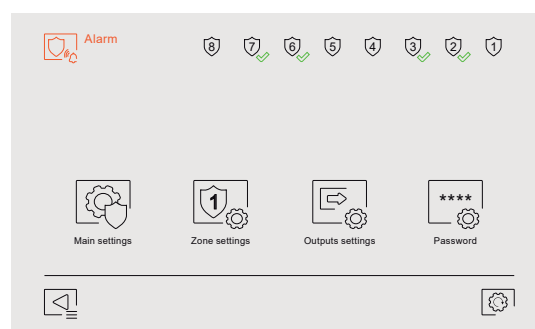


Home screen of alarm settings.



Main settings (generals)

These settings apply to all 4 alarm inputs (4 zones).

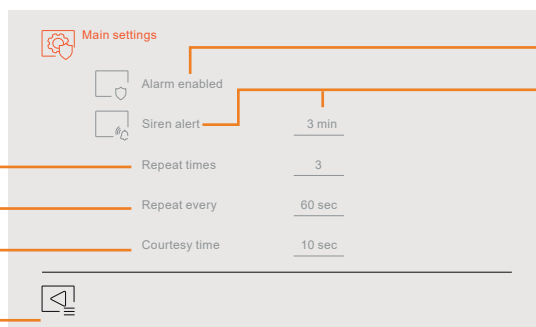

Activated or deactivated alarm.

Sirena on or off and timeout

Siren repetition cycles.


Time interval in which this is repeated.

Time after detection in which it is possible to deactivate the alarm without siren activation.


Back to the previous screen

The active alarm allows the quick access  located at the bottom of the monitor home screen.

A short press will give you quick access to check the status of the alarm zones.

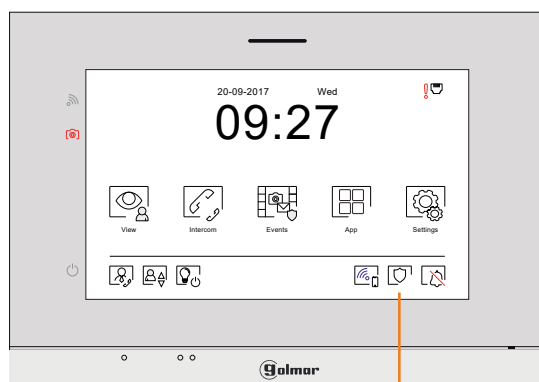

Short press

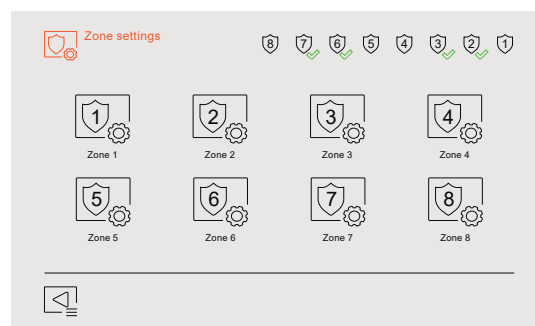


Alarm zones status.

A long press (keep pressing until se armed countdown) will arm the alarm.



Long press.

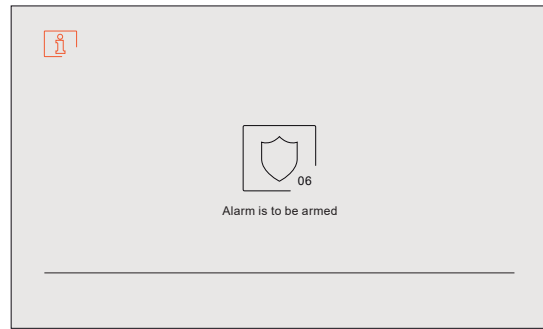


Arming the alarm.


After the end of the countdown, it will confirm the arming of the alarm on screen, indicating "the alarm has been armed".



Zones

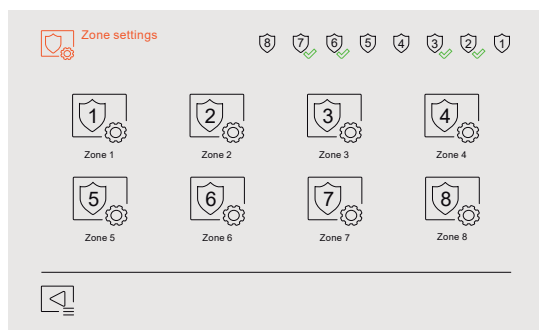


4 alarm input settings.

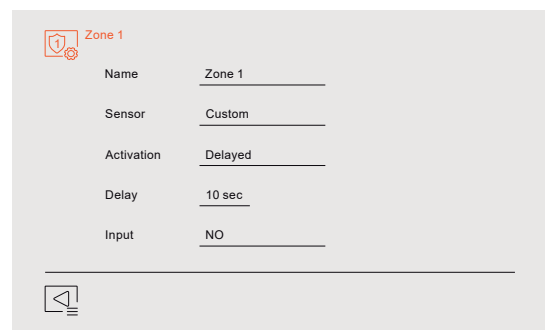


Possible settings per zone.

Zone settings description:

1. Name, label with which we will identify in the alarm register which alarm it is.
2. Sensor, definition of the sensor type connected to the alarm input:

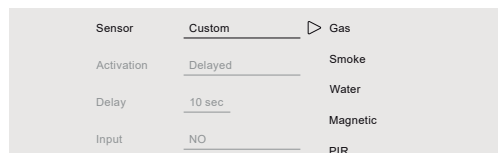

3. Activation, behaviour when the alarm occurs.

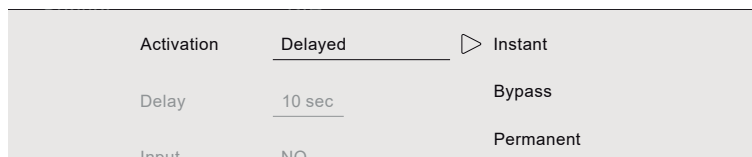

Deactivated: Siren activation will not produce even if the sensor activates.

Retarded: Siren activation will produce after the set delay time has elapsed.

Delay 10 sec

Instantaneous: Siren activation occurs at the same time as the sensor is activated.

Permanent: The alarm is monitored regardless of whether the alarm is armed or disarmed.

4. Input, type of contact of the alarm sensor connected.




NO: Normally open, idle the sensor is open.

NC: Normally closed, idle the sensor is closed.




Password

The default password to access the alarm settings is 9999. It is possible to set a different one from the password menu:

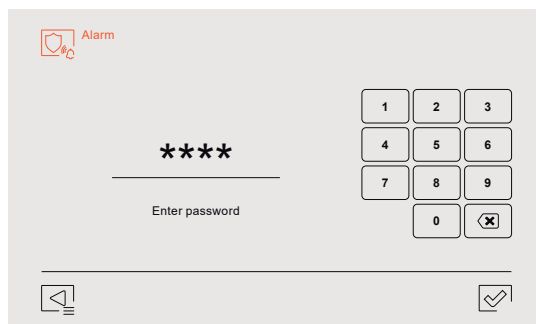


IMPORTANT: In case of modify the password keep in mind the new one.

It is possible to start from zero the alarm configuration, restarting the settings, for this:

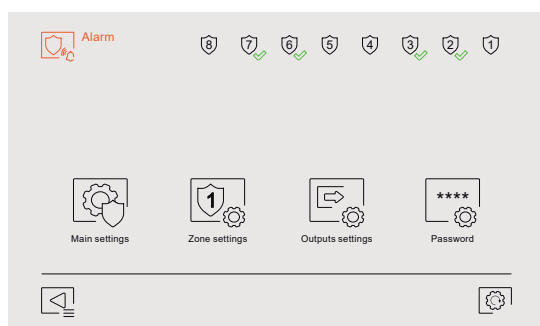

Press the  icon at the bottom right of the main alarm menu.

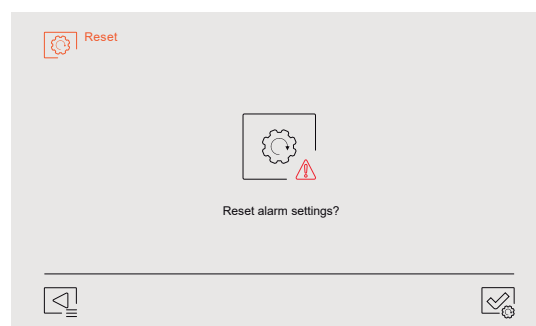

Confirm restarting pressing again .



4.3. WiFi: WiFi settings for the call forwarding.

This service is only available in ART 7 WiFi monitors.


To do the “WiFi” settings see the APP G2CALL+ manual.




4.4. System: installer settings.

“System” settings are not detailed in this manual as these are installer settings.

To conclude this manual indicate that you have a QR link to access the updated documentation of the product:

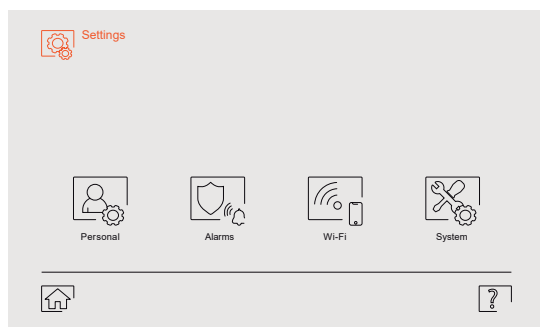

On the main screen of the settings menu, press the icon located on the bottom right of the screen .

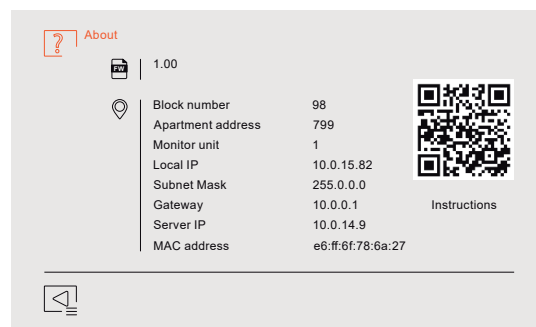

QR to download the manual.



C/ Silici 13. Poligon Industrial Famadas
08940 – Cornellà del Llobregat – Spain
golmar@golmar.es
Telf: +34 934 800 696
www.golmar.es