

Tray

1

TRAY 35

Ø50

2

TRAY 55

Ø62

A

C

CONNECT

220 V~
240 V~

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

4

ADJUST CABLE LENGTH

5

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

1

REMOVE PROTECTION

2

OK

3

OK

4

ADJUST CABLE LENGTH

5

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

Tray Base

1

REMOVE PROTECTION

2

OK

3

OK

4

ADJUST CABLE LENGTH

5

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

NO DIM 3a

1

REMOVE PROTECTION

2

OK

3

OK

4

ADJUST CABLE LENGTH

5

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

NO DIM 3b

1

REMOVE PROTECTION

2

OK

3

OK

4

ADJUST CABLE LENGTH

5

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

Tray Wire Trimless

1

REMOVE PROTECTION

2

OK

3

OK

4

ADJUST CABLE LENGTH

5

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

NO DIM 11

1

REMOVE PROTECTION

2

OK

3

OK

4

ADJUST CABLE LENGTH

5

NO DIM

3

DIMMER (NOT INCLUDED)

L N + -

POWER SUPPLY

DIM DALI

L N PRI
DA DA
DA

POWER SUPPLY

+

SEC

1

2

3

4

5

6

7

8

9

10

11

12

13

14