

 
48V connectors

ARKOSLIGHT

Connectors are required to provide electrical continuity between tracks, ensuring an uninterrupted 48V flow.


Live-End Connector 48V

A338-00-01- | N |




T-Joint Connector 48V

A450-00-07- | N |

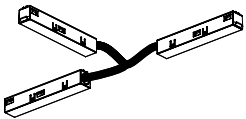


Central Connector 48V

A338-00-02- | N |

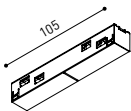


X-Joint Connector 48V

A450-00-08- | N |

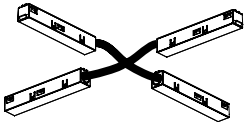

Corner 90° Connector One Plane 48V

A338-00-24- | N | W |

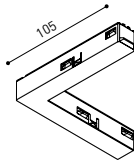

L-Joint Connector 48V

A338-00-12- | N |

