

# RM/DRM

## LED/COLOR TUNING REMOTE DRIVER HOUSING

### Standard Instructions



Flammable



Warning



High Voltage



Hot Surface

#### TOOLS NEEDED:

- 1/8" Allen Wrench
- Waterproof Wire Connectors
- Phillips Screwdriver
- Level
- Hammer
- Mounting Hardware

### INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

#### Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

**SAVE THESE INSTRUCTIONS**


### IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS

- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens. Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.


### IMPORTANT LISTINGS AND CERTIFICATIONS

- Suitable for wet locations

Power Supply  
(Power Supply Will Vary by Product)

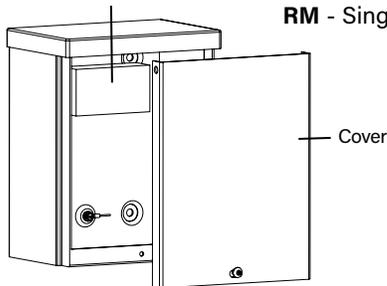

Dual Power Supply  
(Power Supply Will Vary by Product)

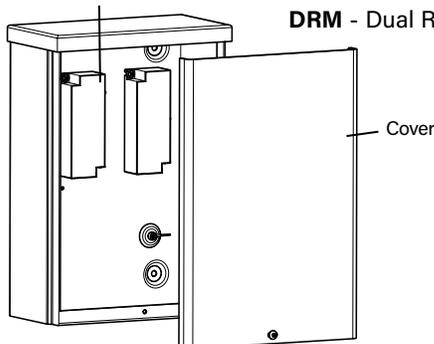

### ⚠ REMOTE WIRING

#### LED Driver

Remote driver installations require inter-connected wiring between the LED and driver (not included). Drivers have specific wiring requirements between these components. Driver manufacturers regularly recommend the following wiring details for such installations:

- Do not exceed 50 foot overall wiring distance using 12 gauge copper wire.

**Failure to comply with specific wiring requirements will void product warranty.**

**This set of instructions works for:**

- DE-FL** - Denali Floodlight
- SA-FL** - Saratoga Floodlight
- YO-FL** - Yosemite Floodlight
- K2-FL** - K2 Floodlight
- AR-FL** - Artistar Floodlight
- MA-FL** - Mammoth Floodlight
- DE-WM** - Denali Wall Mount
- AP-WM** - Alpine Wall Mount
- AR-WM** - Artistar Wall Mount
- DE-IN** - Denali In-Grade



**LED and Color Tuning**

### IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS


# B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
05/22/2024

REFERENCE NUMBER  
INS-2860-00


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF B-K LIGHTING, INC. AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF B-K LIGHTING, INC. IS STRICTLY FORBIDDEN.

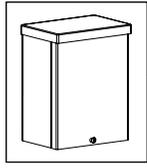


**Standard Instructions**

**⚠️ iOS device (Not Included) with installed B-K Lighting Inspiration Application required for use.**


**Housing Installation**

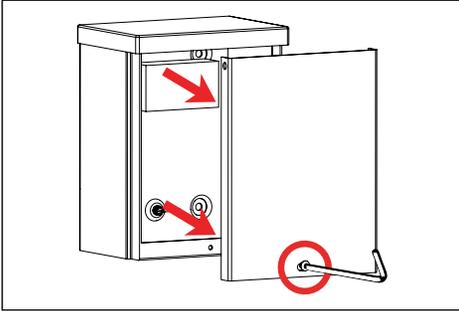

1. Remove cover by removing #10-24 cover screw using a 1/8" allen wrench.

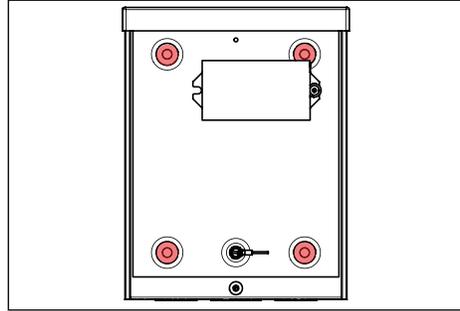


2. Attach the NEMA 3R housing at mounting holes with 1/4" fasteners. Use suitable mounting hardware for surface. Use level to ensure a level install.

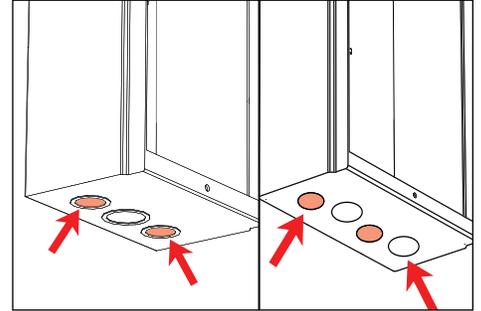


3. Remove knockout(s) with hammer as needed from the NEMA 3R housing. Leave remaining unused knockouts in place to maintain seal.

**⚠️ NOTE: Many methods exist to bolt to a flat surface. The housing is provided with mounting brackets with 1/4" holes.**

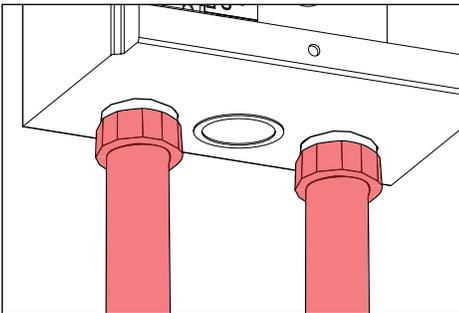

4. Connect conduit connector through female threaded conduit entry.


**⚠️ NOTE: Surface conduit is a common entrance for water if not properly sealed. Seal connector threads and conduit with a suitable sealant (teflon tape, adhesive, etc.). Sealing the conduit after knockouts are removed is required to maintain warranty.**

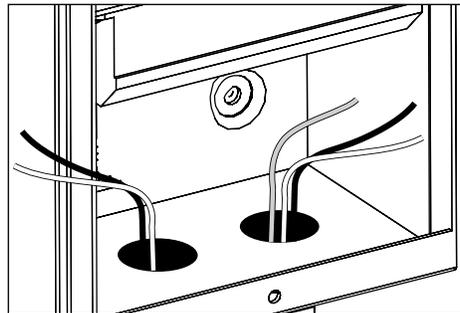

5. Pull branch circuit wiring necessary for installation.


6. Pull secondary lamp leads necessary for installation through dedicated conduit.

**⚠️ NOTE: Failure to comply with specific wiring requirements will void product warranty.**

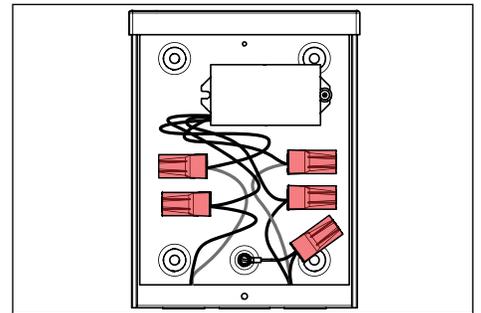


7. Make connections using waterproof wire connectors (included) to driver and to ground wire on NEMA 3R housing. See attached label for additional information.

**⚠️ Number of connections may vary depending of driver quantity and wiring control selected. See wiring diagram.**

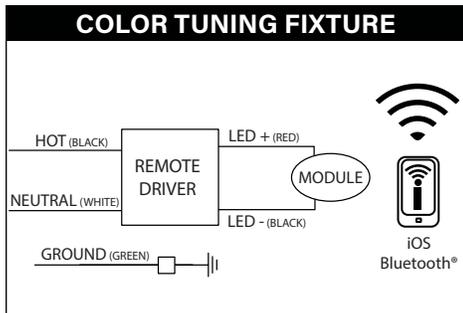


**WIRING DIAGRAM - Wireless Bluetooth® Controls with Inspiration Application on iOS device**

iOS device controls dimming, CCT, Saturation, and Hue using Bluetooth® wireless controls and the application.

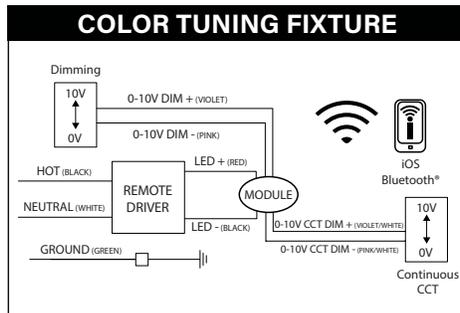

**WIRING DIAGRAM - Hybrid**

Secondary wiring from remote driver connects to fixture leads. 0-10V dimming connects to module. 0-10V Continuous CCT connects to module. iOS device controls Saturation and Hue.

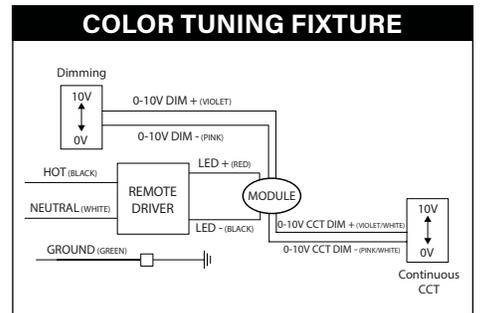


**WIRING DIAGRAM - 0-10V Wired**

Secondary wiring from remote driver connects to fixture leads. 0-10V dimming connects to module. 0-10V Continuous CCT connects to module and controls CCT.

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE  
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**




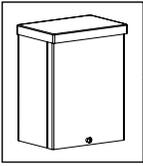

# RM/DRM REMOTE DRIVER HOUSING


## Standard Instructions

iOS device (Not Included) with installed B-K Lighting Inspiration Application required for use.

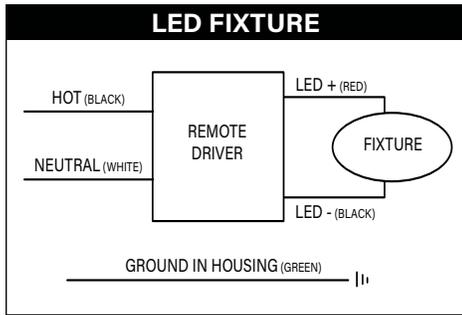


**WIRING DIAGRAM - INC Control Type**

Use waterproof wire connectors (not included) to connect driver primary leads to branch circuit wires. Connect incoming ground to ground wire provided in UPM housing. Connect secondary leads to fixture leads. **See wiring diagram.**

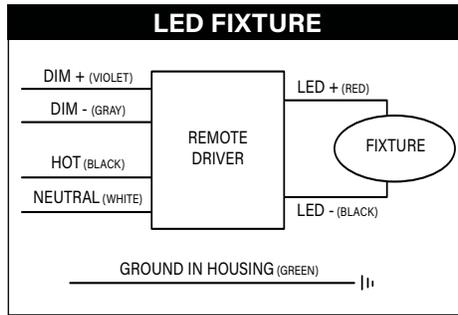

**WIRING DIAGRAM - 010 Control Type**

Use waterproof wire connectors (not included) to connect driver primary leads to branch circuit wires. Connect incoming ground to ground wire provided in UPM housing. Connect incoming dimming control wires to driver dimming controls. Connect secondary leads to fixture leads. **See wiring diagram.**

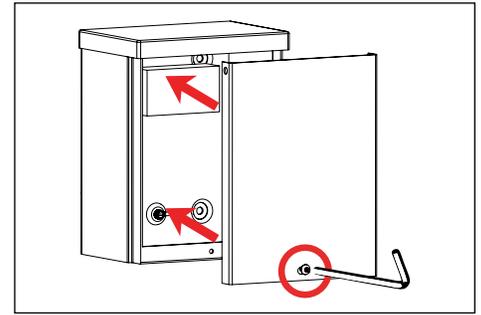

8. Re-attach cover. Tighten cover screw.

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE  
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**



**B-K LIGHTING**

40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
05/22/2024

REFERENCE NUMBER  
INS-2860-00