MANUAL DE INSTALACIÓN | INSTALLATION MANUAL

LED DOWNLIGHT | DLR

Lea atentamente las instrucciones que le indicarán la forma de conectarse y algunos asuntos requieren atención antes de instalar y usar. Tenga cuidado con las instrucciones en caso de que pueda usarlo.

Instrucciones de instalación:

1. Abra un orificio adecuado en el piso del techo.

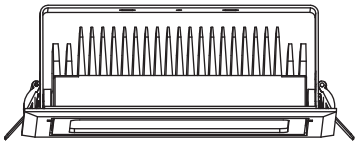

2. Conecte el cable de entrada y el cable de salida como se muestra en la figura, el cable rojo de entrada de la fuente de alimentación está conectado al cable rojo de salida de la lámpara. Destacado para fijar el cable firmemente, evitar que se caiga o se caliente.

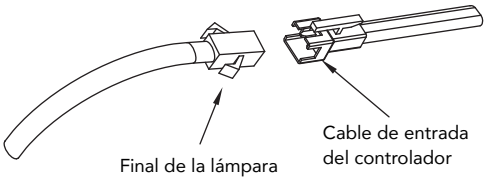

3. Conecte los cables del controlador, conecte directamente los cables de entrada marrón y azul al suministro eléctrico (220-240 V), como se muestra en la figura.

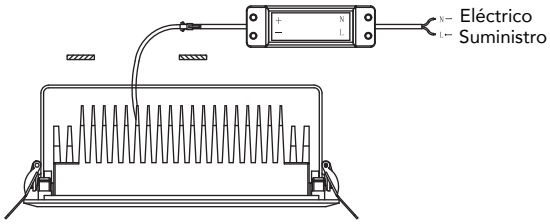

4. Instale los resbalones de la lámpara: presione ambos clips de resorte laterales con la mano al mismo tiempo, coloque el cuerpo de la lámpara en el orificio.

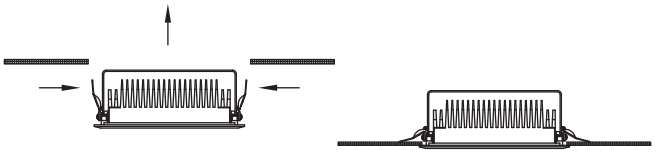

Atención:

- Úselo en condiciones interiores y evite golpes, polvo y altas temperaturas, o provocará fácilmente incendios y descargas eléctricas.
- En caso de descarga eléctrica, desconecte la alimentación antes de instalar, limpiar y reparar.
- Asegúrese de que la luz empotrada tenga un orificio de tiro de 95 mm como mínimo. La lámpara debe mantenerse a una distancia mínima de 500 mm del objeto irradiado, o provocará un incendio y una falla.
- Evitar en cualquier caso cubrir las lámparas con material aislante térmico o materiales similares.
- No debe desarmar la estructura interna de la lámpara en ningún momento.
- Corte la alimentación cuando el producto funcione de forma anormal y póngase en contacto con nuestro centro de servicio o con nuestros especialistas.

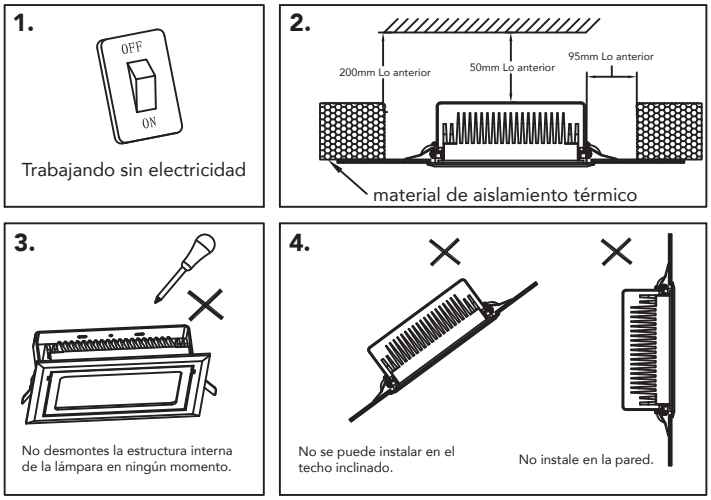

Mantenimiento:

Para usar nuestros productos de manera efectiva, realice una limpieza completa cada seis meses. Puede usar un secador de pelo o un cepillo seco para eliminar el polvo de la superficie, luego use un paño suave con alcohol para limpiar el producto. El polvo no solo afecta el aspecto exterior, sino que también perjudica gravemente la dispersión del calor y acorta la vida útil. Por favor, no use agua, gasolina y Tiana para limpiarlo, o destruirá la lámpara o su color. Cada 3 o 5 años, solicite a los especialistas que revisen las luces y cambien los componentes rotos en caso de incendio.

LED DOWNLIGHT | DLR

Please read carefully the instructions that will tell you how to connect and some matters require attention before installing and using. Be careful with the instructions in case you can use it.

Installation instructions:

1. Open suitable hole at ceiling floor .

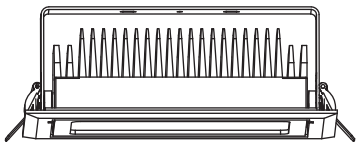

2. Connect the input wire and output wire as shown in the figure, the power supply input red wire is connected to the lamp output red wire. Featured to fix the cable firmly, prevent it from falling off or getting hot.

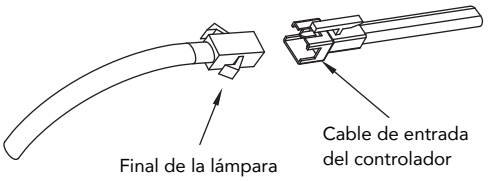

3. Connect the controller wires, directly connect the brown and blue input wires to the power supply (220-240V), as shown in the figure.

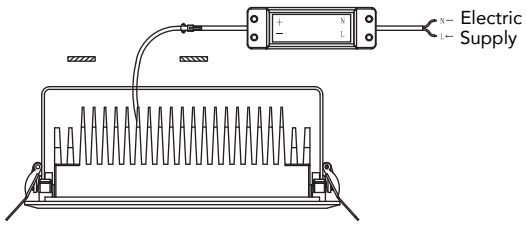

4. Install the lamp slips: press both side spring clips by hand at the same time, put the lamp body into the hole.

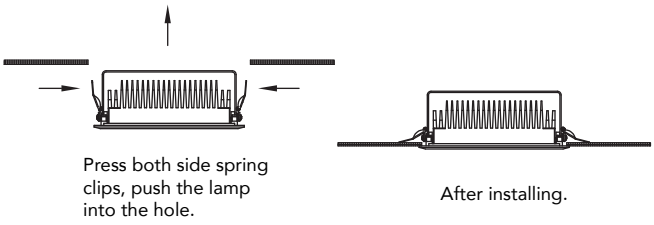

Attention:

- Please use it in indoor condition and avoid shock, dust and high temperature, or it will easily cause fire and electric shock.
- In case of electric shock, please turn off the power before installing, cleaning and repairing.
- Make sure the recessed light has a minimum 95mm draft hole. The lamp must be kept at least 500mm away from the irradiated object, or it will cause fire and failure.
- Avoid in any case covering the lamps with thermal insulating material or similar materials.
- You must not disassemble the internal structure of the lamp at any time.
- Cut off the power when the product works abnormally and contact our service center or specialists.

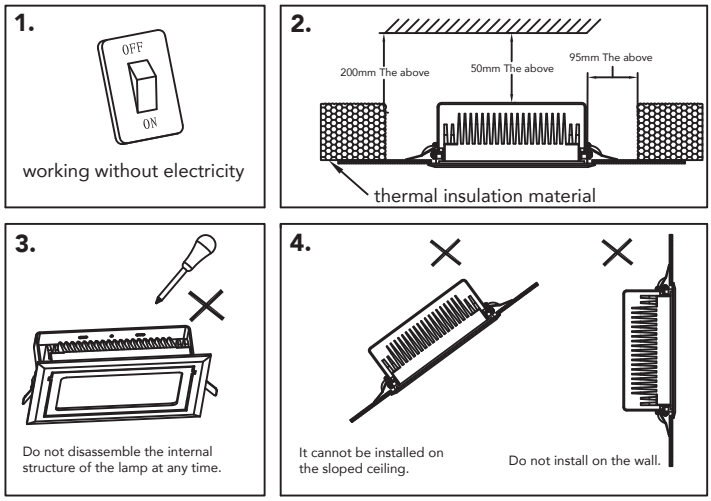

Maintenance:

To use our products effectively, perform a thorough cleaning every six months. You can use a hair dryer or dry brush to remove surface dust, then use a soft cloth with alcohol to clean the product. Dust not only affects the outer appearance, but also seriously impairs heat dispersion and shortens service life. Please don't use water, gasoline and Tiana to clean it, or it will destroy the lamp or its color. Every 3 to 5 years, ask specialists to check lights and change broken components in case of fire.

ROBLAN EUROPA S.A.
Avda. de las Retamas 5. 45950
Casarrubios del Monte
Toledo, Spain

ROBLAN COLOMBIA S.A.S.
NIT. 900.748.926-0
ROBLAN AUSTRAL SPA
ROBLAN UK LTD

Roblan @Roblan_EU Roblan roblaneuropa