





Levanto Installation Guidance

Calypso Vanity Bathroom Furniture

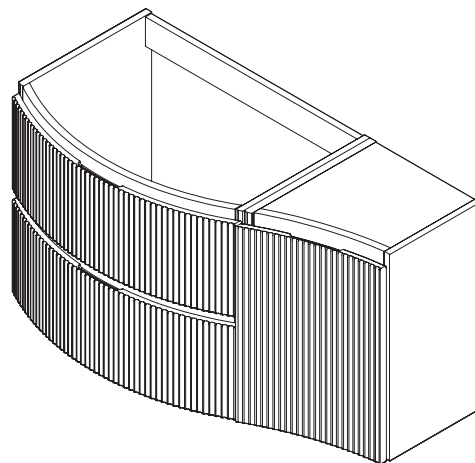

Installation guidance:

- Determine the height of the top edge of the unit to be installed and mark a horizontal line on the wall.
- Make 2 x vertical lines on the wall going down from the horizontal line using these dimensions:

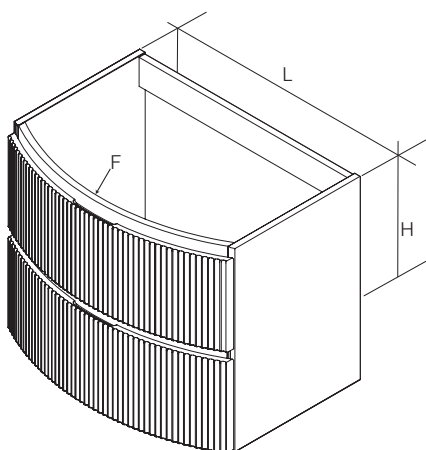

Vanity unit dim	Distance (mm)
L	686
H	370

- Secure the brackets to the wall at the required height using the heavy-duty wall fixings provided.
- Level the unit by adjusting the screws in the rear brackets.
- Once satisfied, use the back cross rail to secure the unit in place.
- Place the basin on top of the unit. If installing the Farra Cast basin, slide the back of the basin as far back as it will go, before applying firm pressure to the front edge to click it into place. If the basin does not fit, the fitter must cut a small chamfer with a plane or jigsaw on the inside edge of the front rail (F) to allow space for the bowl.
- Silicone into place

Care and Maintenance:

- Using a soft cloth or dampened sponge, gently clean with soapy water using a mild detergent.
- Clean regularly (weekly).
- Avoid heavy handed cleaning or use of chemicals or abrasive cleaners.
- Do not use scouring pads on any surfaces.