





Diamante Installation Guidance

Calypso Vanity Bathroom Furniture

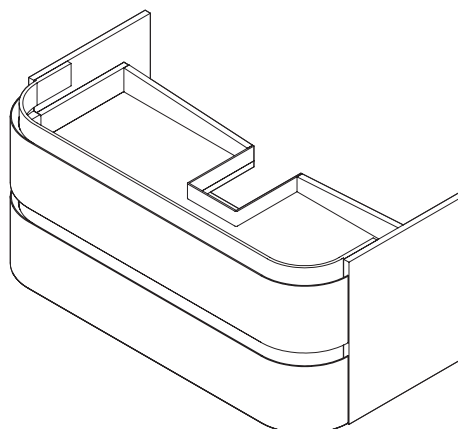

Installation guidance:

- Determine the height of the top edge of the unit to be installed and mark a horizontal line on the wall.
- Make 2 x vertical lines on the wall going down from the horizontal line using these dimensions:

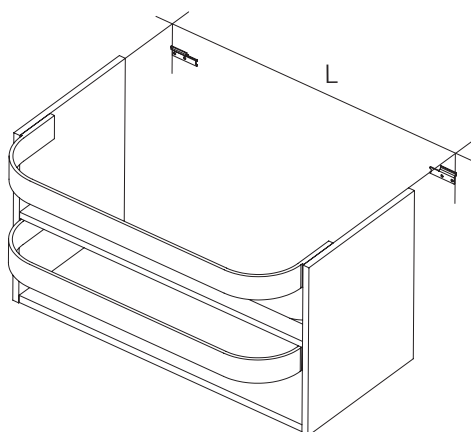

Vanity unit width	Bracket Distance (L)
600	556
800	756
1000	956
1200	1156

- Secure the brackets to the wall at the required height using the heavy-duty wall fixings provided.
- Remove the drawers from the cabinet by unclipping the runners at the front
- Fix the adjustable cabinet hangers to the inside of the unit using the fixings provided.
- Hang the cabinet on the wall brackets and make the following hanger adjustments:
 - A. Level the vanity with a spirit level by adjusting the wall hanging brackets
 - B. Check the side panels are level front to back
 - C. Once happy, tighten the hangers into place and fit the covers provided.
- Replace the drawers into the unit by placing them over the runners, ensuring they click into place.

Care and Maintenance:

- Using a soft cloth or dampened sponge, gently clean with soapy water using a mild detergent.
- Clean regularly (weekly).
- Avoid heavy handed cleaning or use of chemicals or abrasive cleaners.
- Do not use scouring pads on any surfaces.