


INSTRUCCIONES DE MONTAJE PARA CAJA EMPOTRAR CE-6502 TE INSTRUCTIONS FOR CE-6502 TE EMBEDDED BOX INSTALLATION

- 1.Introducir la caja de empotrar en la pared
- 2.Asegurarse de que las pestañas laterales de la Caja de Empotrar quedan apoyadas en la pared
- 3.Las pestañas laterales NO deben quedar dentro de la pared

- 1.Introduce the embedded box in the wall
- 2.Make sure that the side flanges of the Embedding Box rest against the wall.
- 3.The Side flanges should NOT be inside the wall

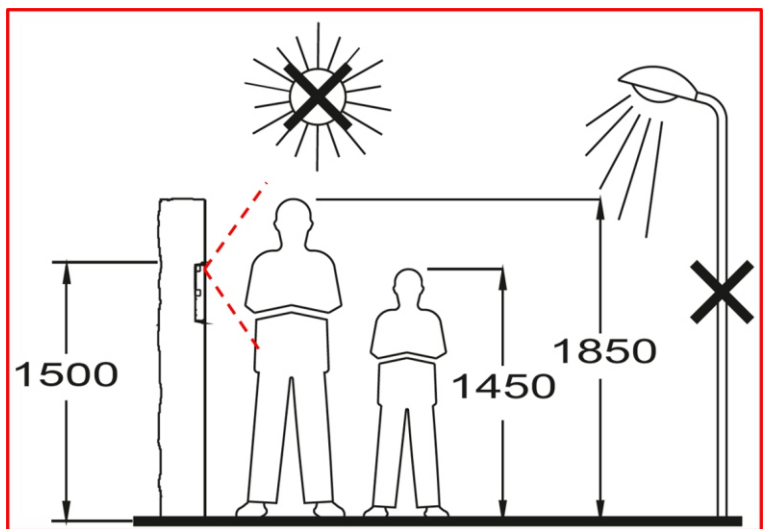

CE-6502 TE






INSTRUCCIONES DE MONTAJE PARA VISERA S7865 TE y CAJA CE-6502 TE INSTRUCTIONS FOR RAIN COVER S7865 TE & CE-6502 TE BOX INSTALLATION

1. Introducir la caja de empotrar en la pared
2. Sacar entre 3mm y 4mm la pletina superior de la Caja (tornillos interiores)
3. Colgar la Visera en la pletina superior de la Caja de tal modo que quede plana contra la pared
4. Ensamblar la Placa con la Caja de Empotrar asegurándose de que la Visera quede fijada perimetralmente entre la Placa y la pared

1. Introduce the embedded box in the wall
2. Extend the top plate of the box by between 3mm and 4mm (use internal screws)
3. Hang the Rain Cover on the top plate of the Box so that it lies flat against the wall
4. Fix the Panel to the Box, ensuring that the Rain Cover is secured around the edge between the Panel and the wall

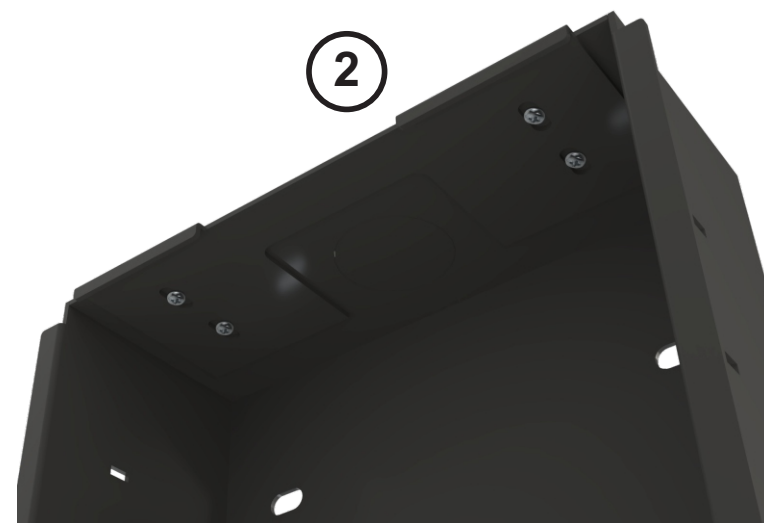

S7865 TE



CE-6502 TE

