


WALLACE: HOW TO SPECIFY

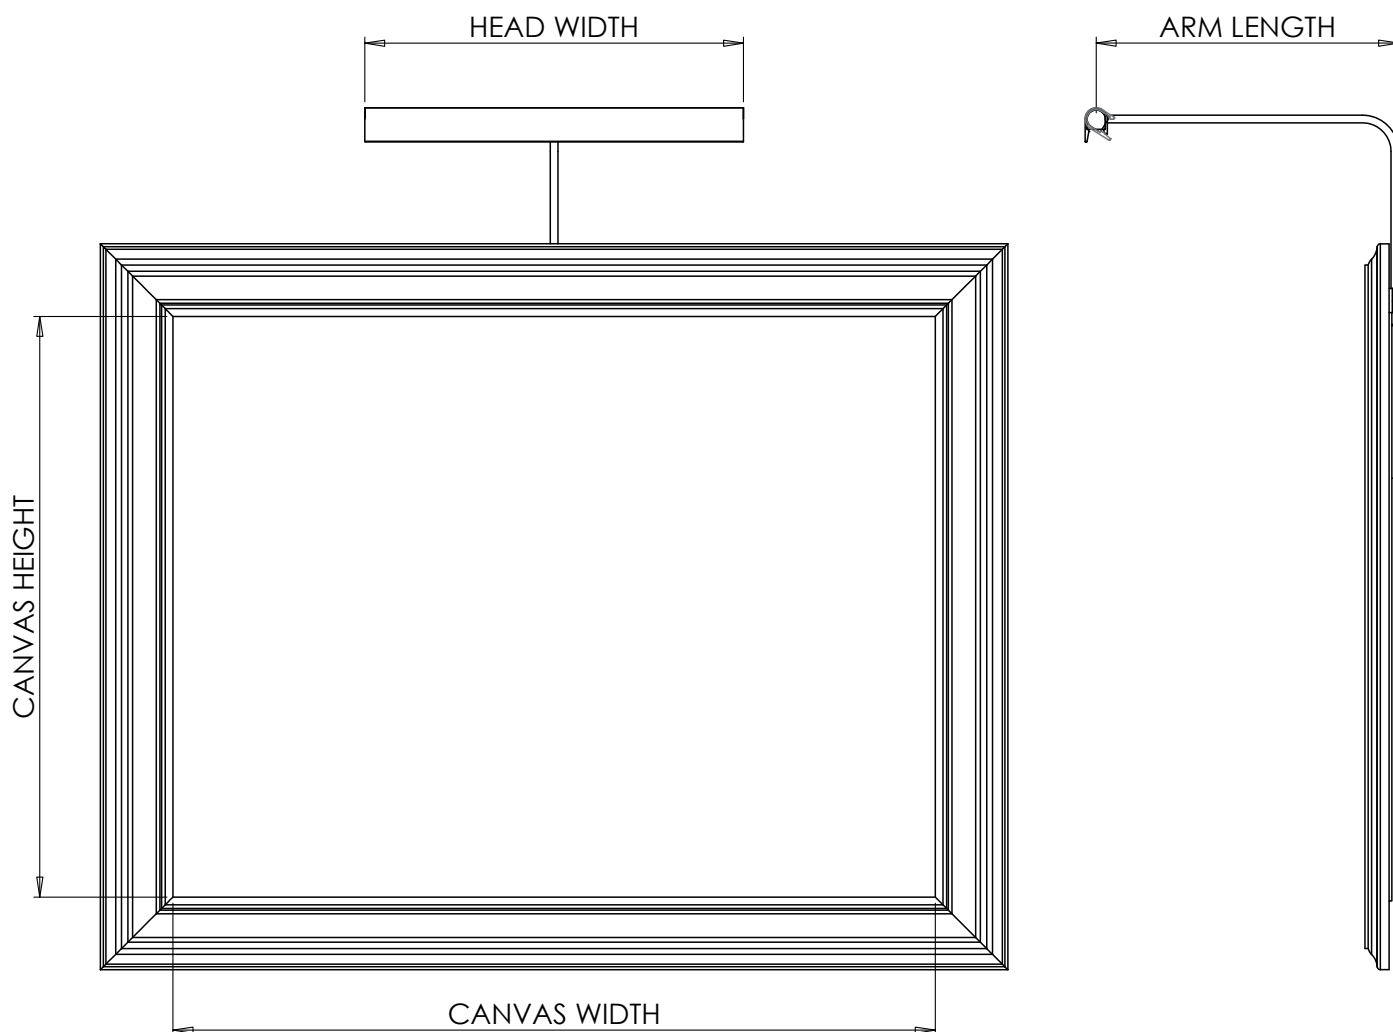

1. Measure width and height of canvas.
2. Using the below table as a guide, find the required product code.
3. Select finish using codes listed below to complete product code.
4. Select driver using table below.

		CANVAS WIDTH (MM)						
		Up to 380	380-620	630-860	860-1100			
CANVAS HEIGHT (MM)	Up to 380	WA1515XX1	WA3015XX1	WA4515XX1	WA6015XX1	150	ARM LENGTH (MM)	XX = FINISH
	380-620	WA1520XX1	WA3020XX1	WA4520XX1	WA6020XX1	200		04 = ANTIQUE BRASS
	630-860	WA1525XX1	WA3025XX1	WA4525XX1	WA6025XX1	250		06 = ANTIQUE BRONZE
	860-1100	WA1530XX1	WA3030XX1	WA4530XX1	WA6030XX1	300		26 = PRIMED
		150	300	450	600			
		HEAD WIDTH (MM)						

XX = FINISH
 04 = ANTIQUE BRASS
 06 = ANTIQUE BRONZE
 26 = PRIMED