

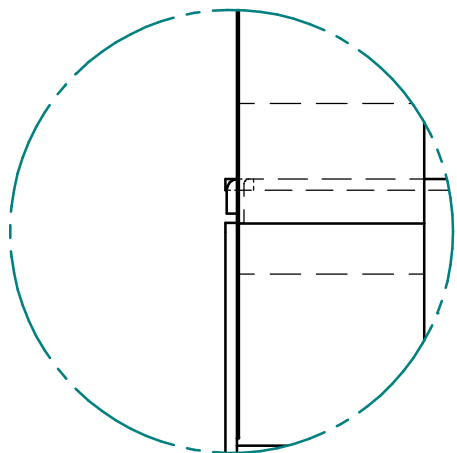


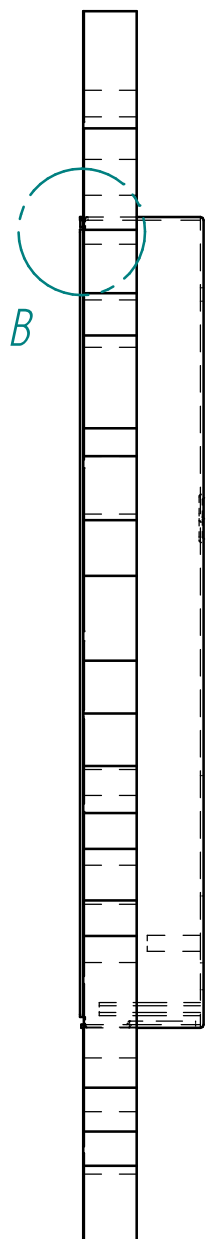



DETAIL B

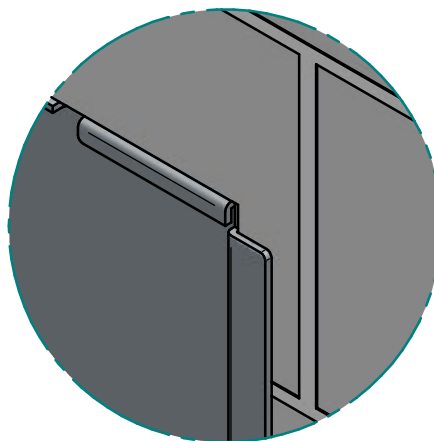

DETAIL A

Installation CE-6502 TE

Make sure that the **side flanges** of the Embedding Box rest **against** the wall.
THE SIDE FLANGES SHOULD NOT BE INSIDE THE WALL.

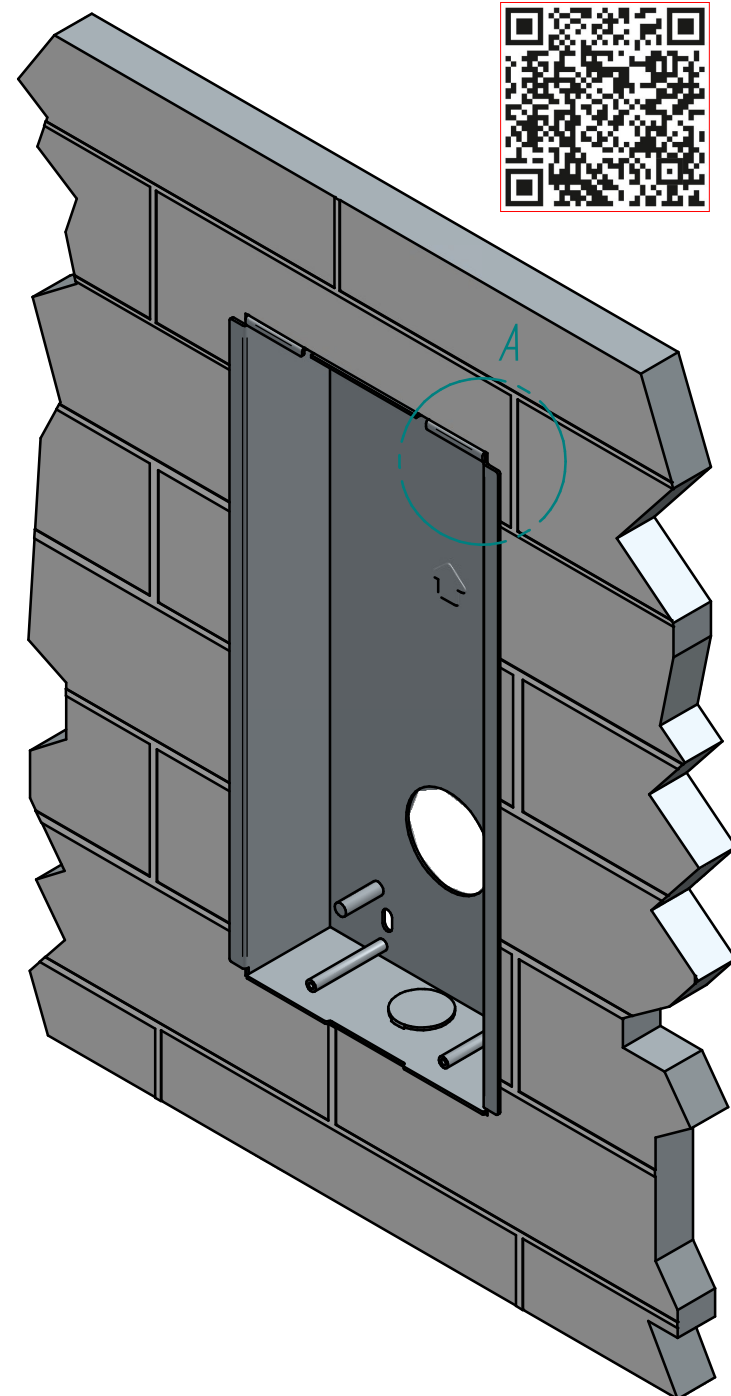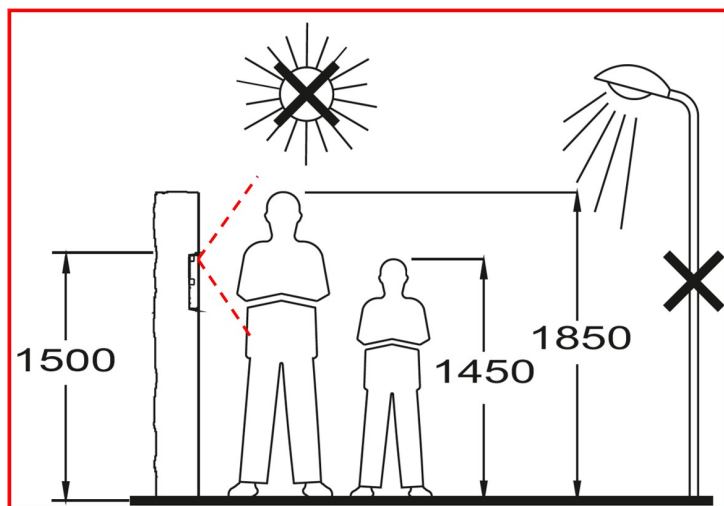





INSTRUCTIONS FOR RAIN COVER AND EMBEDDED BOX INSTALATION


STEP 1 – PLACE THE RAIN COVER ON THE WALL.

STEP 2 – INTRODUCE THE EMBEDDED BOX IN THE HOLE.


STEP 3 – FIX THE DOOR PANEL TO THE EMBEDDED BOX.

NOTE: Make sure the rain cover is between the wall and the flanges of the embedded box as shown on the picture.

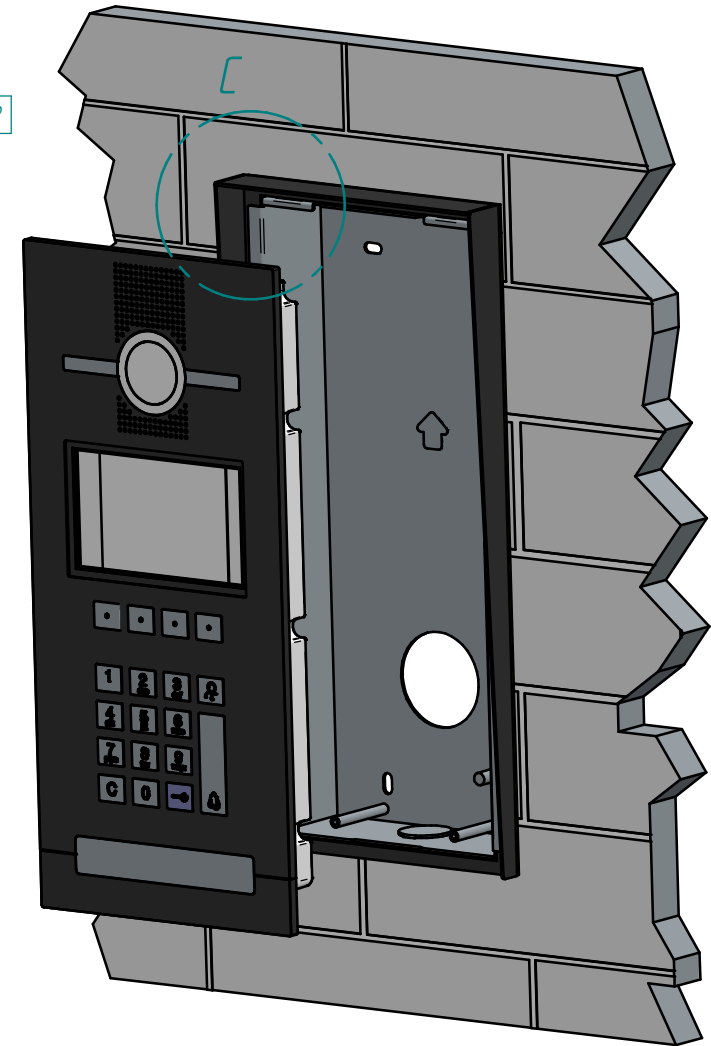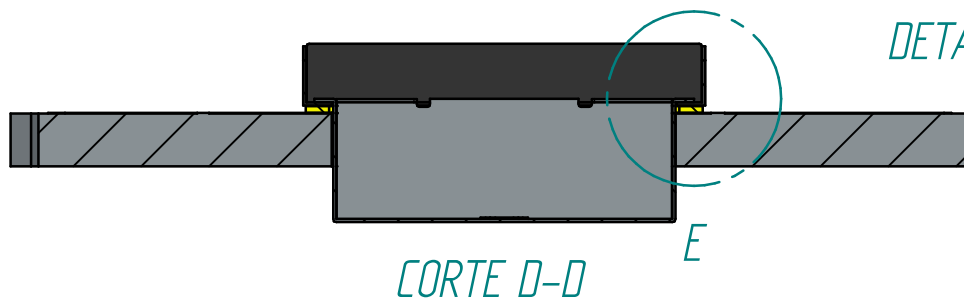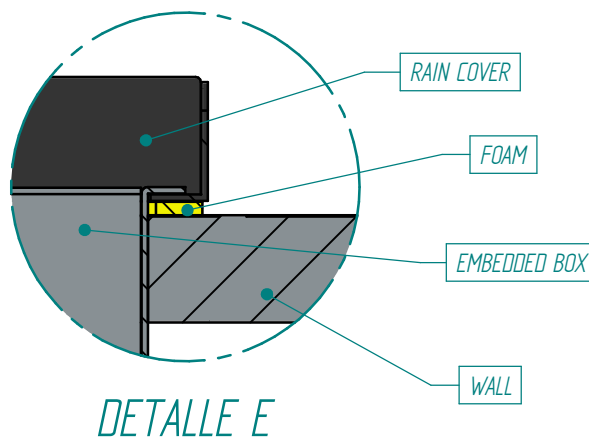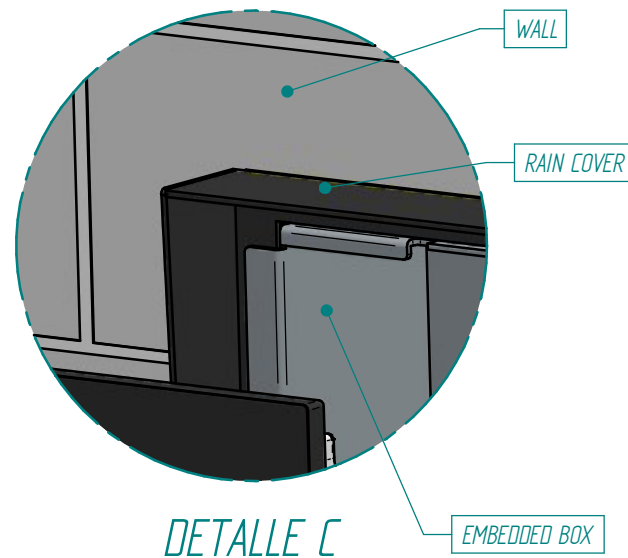

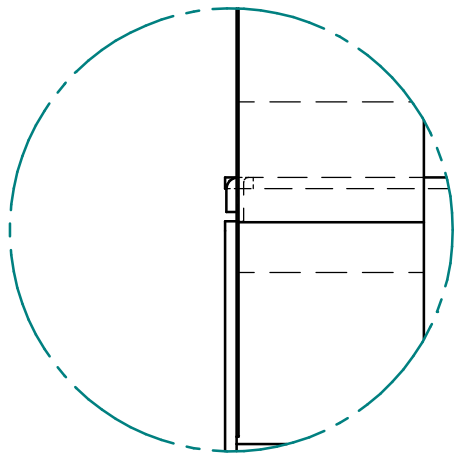

DETALLE B


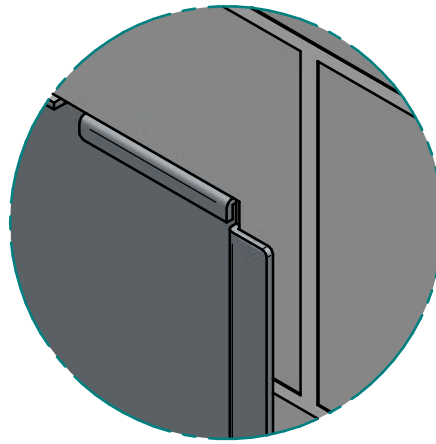


DETALLE A

Instalación CE-6502 TE

Asegúrese de que las **pestañas laterales** de la Caja de Empotrar quedan **apoyadas** sobre la pared.

LAS PESTAÑAS LATERALES NO DEBEN QUEDAR DENTRO DE LA PARED.

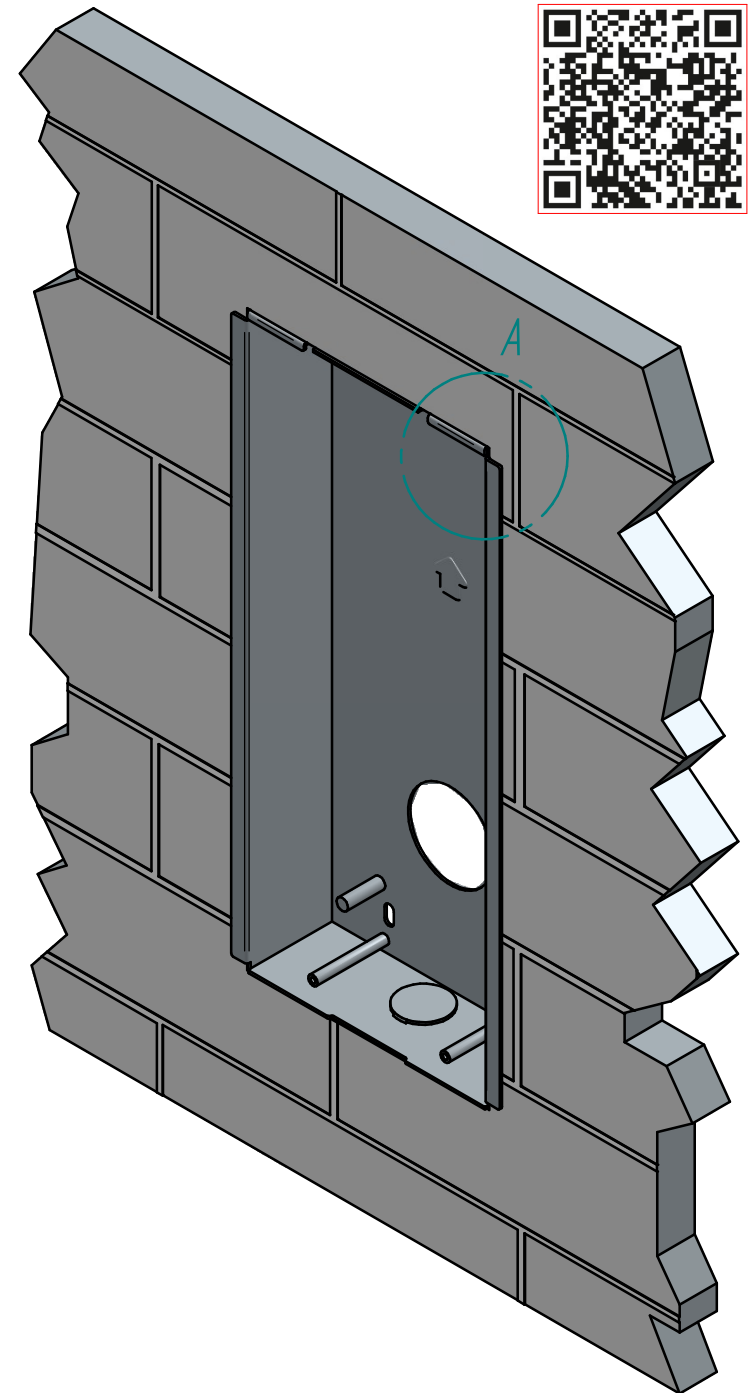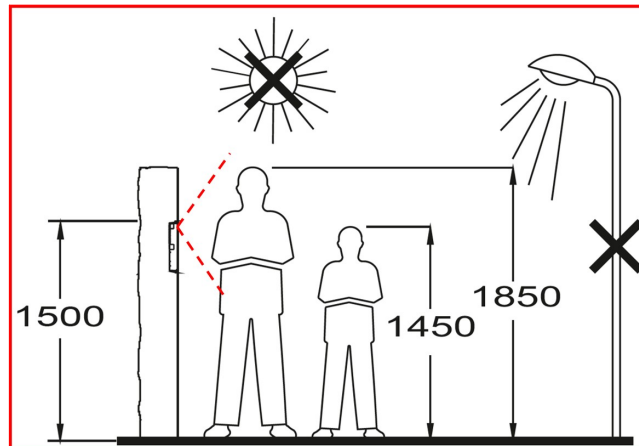

INSTRUCCIONES PARA LA INSTALACIÓN DE LA CAJA DE EMPOTRAR Y VISERA

PASO 1 – SITUAR LA VISERA EN LA PARED

PASO 2 – INTRODUCIR LA CAJA DE EMPOTRAR EN EL AGUJERO

PASO 3 –FIJAR LA PLACA A LA CAJA DE EMPOTRAR

NOTA: ASEGÚRESE DE QUE LA VISERA ESTÁ ENTRE LA PARED Y LAS PESTAÑAS DE LA CAJA DE EMPOTRAR TAL COMO SE MUESTRA EN LA IMAGEN.

