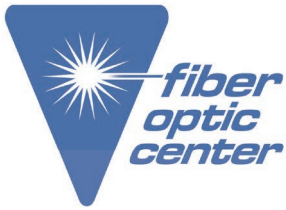


Quick Start Guide

**Manufacturer:**

Viavi

Product Name:

Viavi SmartClass™ OLP-82P Digital Video Display Kit with Patch Cord, Probe Scope & Optical Power Meter

Manufacturer Part Number:

FIT-82P01

▶ [Click here for more details on the Viavi SmartClass™ OLP-82P Digital Video Display Kit with Patch Cord, Probe Scope & Optical Power Meter](#)

VIavi

FBP-HD4i/HD4iP and OLP-82/82P SmartClass™ Fiber

Quick Start Guide

22002195

2022.11

English

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

Copyrights

This product or parts of this product are based on recommendations and/or standards from the standardization section of the International Telecommunication Union – ITU-T and/or the European Telecommunications Standards Institute – ETSI. These recommendations and standards are subject to the proprietary rights of these organizations. It is not permitted to copy ITU-T recommendations or ETSI standards fully or in part and/or to pass them on to third parties without prior written permission from ITU-T and/or ETSI.

Copyright

© Copyright 2022 VIAVI Solutions Inc. All rights reserved.
VIAVI and the VIAVI logo are trademarks of VIAVI Solutions Inc.
All other trademarks and registered trademarks are the property of their respective owners.

Order number: 22002195

Issue: 2022.11

Previous issue: 2012.09

Notes:

Changes may be made to specifications, designations and delivery information.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

CONTENTS

1 INTRODUCTION	5
SmartClass Fiber Devices.....	5
User manual update.....	6
Symbols used in this Quick Start Guide	6
2 CONTROLS	7
Operator control panel	8
Home Screen Display.....	9
3 OPERATION	10
Setting Up PASS/FAIL Analysis	10
Using the Device.....	11

*fiber
optic
center*

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

1 INTRODUCTION

SmartClass Fiber Devices

VIavi's SmartClass Fiber family is the next generation of optical handheld test solutions that allow technicians to inspect, test, certify, and save on a single device. Designed to help users work smarter and faster, the SmartClass Fiber family incorporates the features that technicians rely on every day to deliver best-in-class reliable networks to their customers.

Products in the SmartClass Fiber family include:



HD4i
Digital handheld
video display



OLP-82
Digital handheld video display
with optical power meter

Key Features and Functions

Description	HD4i	OLP-82
Portable handheld display with 3.5" color touch screen	✓	✓
Simple graphical menu-driven interface	✓	✓
Accepts PASS/FAIL P5000i Probe	✓	✓
Accepts external USB power meter	✓	✓
Integrated connector certification reporting	✓	✓
On-board storage: Endface images and inspection analysis	✓	✓
User-definable acceptance criteria	✓	✓
Integrated optical power meter		✓
On-board storage: Power meter results		✓
Integrated PON power meter (BPON, EPON, and GPON)		
Integrated PASS/FAIL patch cord microscope option	✓	✓

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without
notice. FOC last update 1/13/2026.

This Quick Start Guide will focus on the HD4i and OLP-82 products.

Symbols Used in this Quick Start Guide

The following character formats are used in this guide:

✓	Requirement This requirement must be met first; e.g. ✓ The device is switched on.
▶ 1. 2.	Instruction Follow the instructions given (the numbers indicate the order in which the instructions should be followed); e.g. ▶ Select mode.
Bold type face	Pages, controls, and display elements Screen pages, controls, and display elements are indicated in bold type.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

VIavi

2 CONTROLS

2 CONTROLS



- | | |
|----|---|
| 1 | Connector interface (OLP-82/82P only) |
| 2 | 3.5 inch color touch screen |
| 3 | Key pad (operator control panel) |
| 4 | LED indicators |
| 5 | Patch Cord Microscope (PCM) with FMAE adapter (HD4iP and OLP-82P only) |
| 6 | Test head cover (OLP-82/82P only) |
| 7 | Battery life indicator |
| 8 | Graphic menu interface |
| 9 | PCM controls (focus control, automated PASS/FAIL analysis, magnification control) |
| 10 | 2x USB2 interfaces, 1x micro-USB interface, external power supply connector |

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

Operator Control Panel

Mode	Description
	Home key ▶ Press to go to the home screen.
	Menu key ▶ Press to open a menu.
	Back key ▶ Press to go back one step.
	Input Select Key (ISK) ▶ Press for fast toggling between device functions.
	Power key ▶ Press to switch the instrument ON and OFF. LED glows green when the instrument is ON.
	Arrow keys ▶ Press to navigate through the menus. ▶ Press to change values in the menus. Center key ▶ Press to confirm the selection.
	Save key ▶ Press to save results
	Low battery LED Glows red when battery is low
	Test in process LED Glows red when a measurement is running in the background
	Charge LED Glows amber when battery is charging. If the power is OFF, charging will continue with no LED indicator.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

Home Screen Display



Fig. 1: OLP-82P Home Screen shown with P5000i Probe and MP-series USB OPM attached via USB

Icon	Description
	Battery Status Indicates the battery charge level / status.
	Optical Power Meter (OPM) Activates the on-board OPM to view optical power measurement results, edit acceptance criteria, and view saved results.
	Inspect (PCM) Activates the integrated Patch Cord Microscope (PCM) to inspect and analyze fiber endfaces, detect scratches and defects, and provide PASS/FAIL results. The PCM is ideal for inspecting male fiber connectors such as patch cords and test leads.
	Inspect (Probe) Activates the handheld P5000i Digital Probe microscope to inspect and analyze fiber endfaces, detect scratches and defects, and provide PASS/FAIL results. The probe is ideal for inspecting connectors located behind bulkheads.
	USB Optical Power Meter (OPM) Activates OPM devices (such as MP-60 or MP-80) that are connected to one of the USB ports to view optical power measurement results, edit acceptance criteria, and view saved results.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

3 OPERATION

Setting Up PASS/FAIL Analysis

Select acceptance criteria

Inspection (Probe)



1. Open the **INSPECT (Probe)** application.
2. Press **MENU**.
3. Select **PROFILE** (choose desired PROFILE from list).
4. Select **TIP** (choose from list).

Inspection (PCM)



1. Open the **INSPECT (PCM)** application.
2. Press **MENU**.
3. Select **PROFILE** (choose desired PROFILE from list).

Set up OPM PASS/FAIL thresholds

✓ Wavelengths are measured in dBm.



1. Open the **POWER METER** application.
2. Select **MORE... > EDIT WAVELENGTH TABLE**.
3. Select a wavelength from the list.
4. Press **MENU**.
5. Select **ENTER LIMIT**.
6. Enter your desired limit value (measured in dBm) using the numeric keypad.
7. Press **OK**.
8. Repeat steps 4–7 for all desired OPM wavelengths.
9. Check the boxes for only the wavelengths you want to use.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.

Using the Device

This SmartClass Fiber device allows users to inspect, test, certify, and save results quickly and easily by driving the user's behavior and incrementally stepping them through each application as it should be used in a proper testing workflow as follows:

Starting from the Home Screen

1. Certify the patch cord/test lead endfaces:

- a. Press  to activate the PCM.
- b. Inspect patch cord/test lead end **A** using the PCM.
- c. Press the [TEST] button on the PCM.
- d. Press  to save result (if necessary).
- e. Move end **A** over to the OPM port.
- f. Inspect patch cord/test lead end **B** using the PCM.
- g. Press the [TEST] button on the PCM.
- h. Press  to save result (if necessary).
- i. Leave end **B** in the PCM.

2. Certify the bulkhead connector endface:

- a. Press  to activate the Probe Microscope.
- b. Inspect the bulkhead endface using the Probe Microscope.
- c. Press the [TEST] button on the Probe.
- d. Press  to save result.
- e. Plug patch cord/test lead end **B** into the bulkhead port.

3. Measure the optical power:

- a. Press  to switch to the OPM.
- b. Select desired wavelength (OPM value will be displayed on the screen).
- c. Press  to save result.
- d. Repeat as necessary for other wavelengths.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Data is subject to change without notice. FOC last update 1/13/2026.