


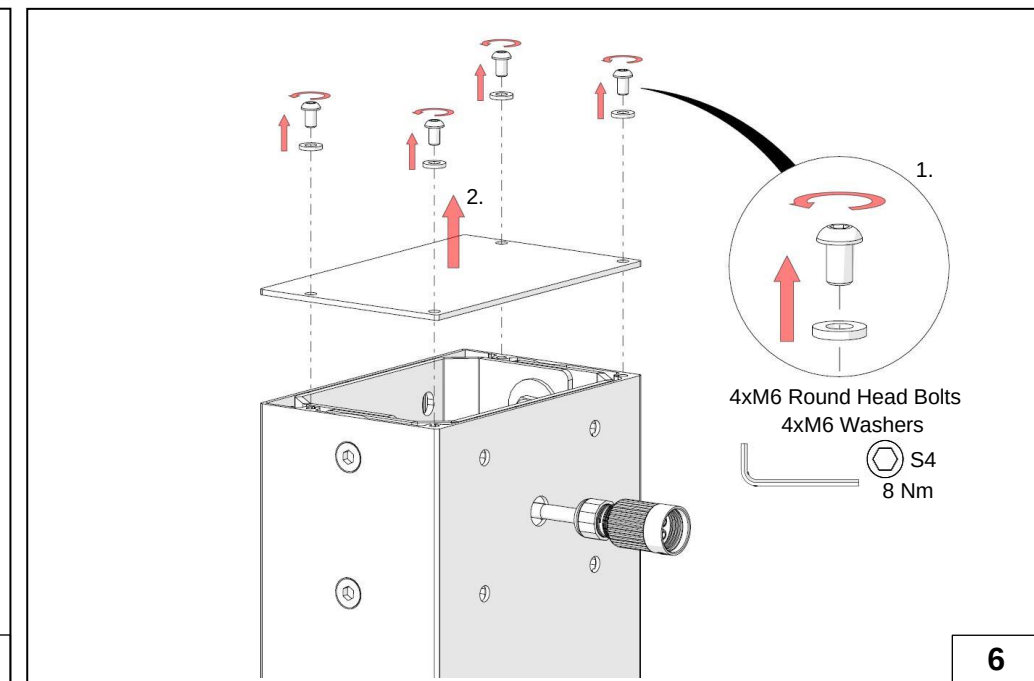
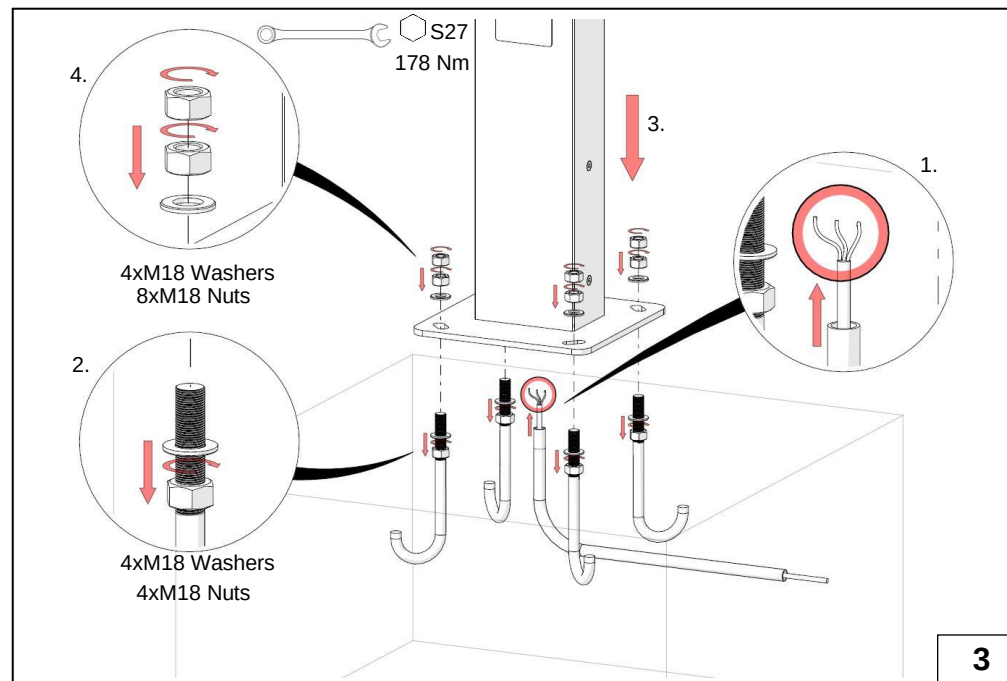
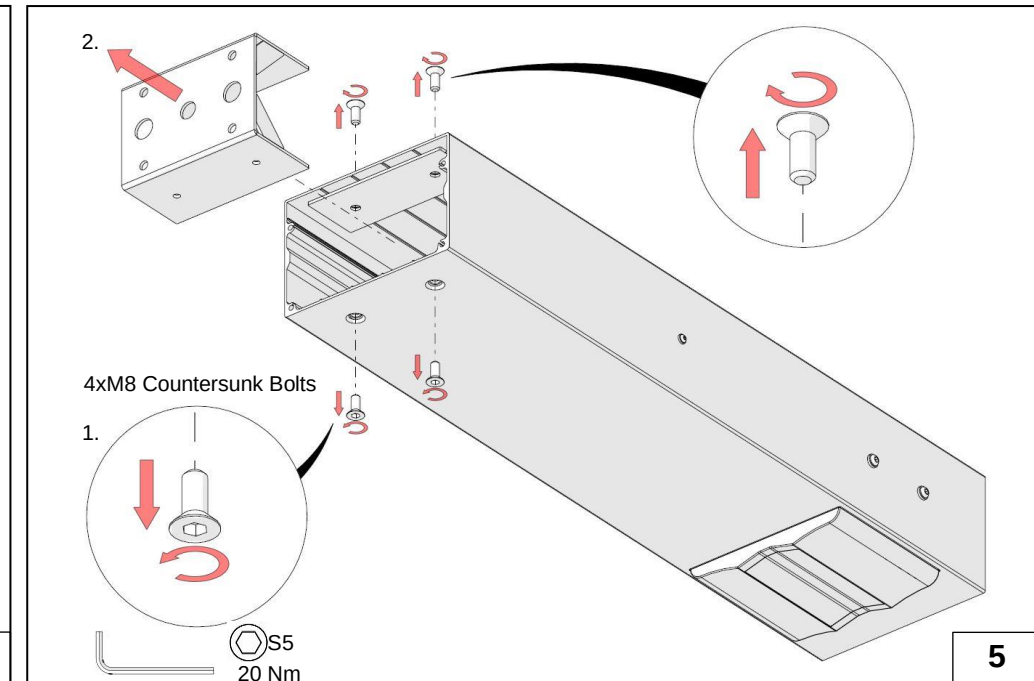
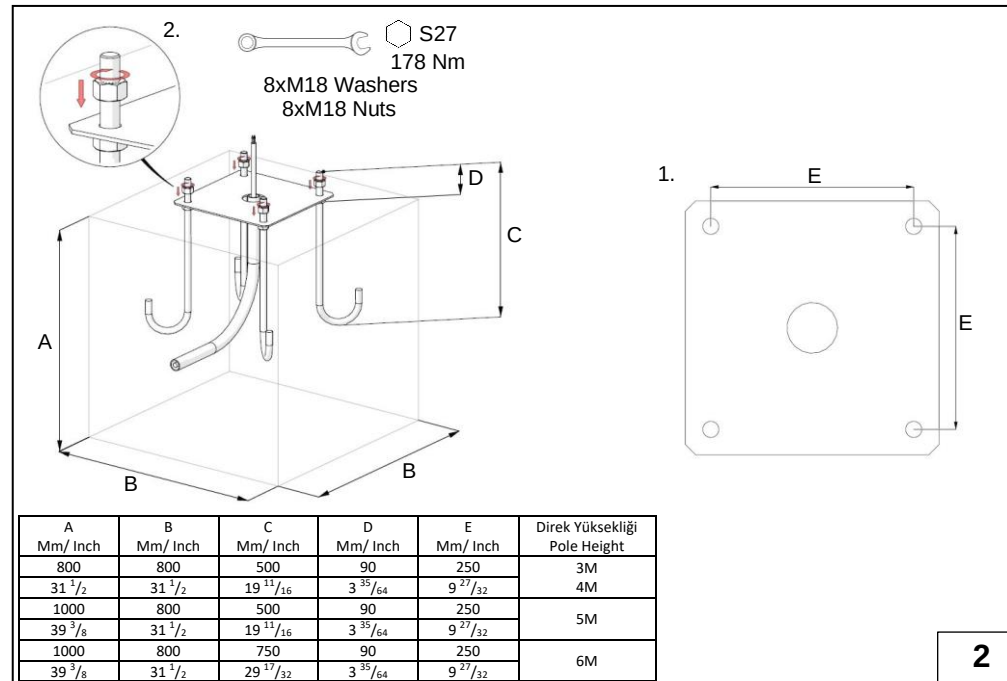
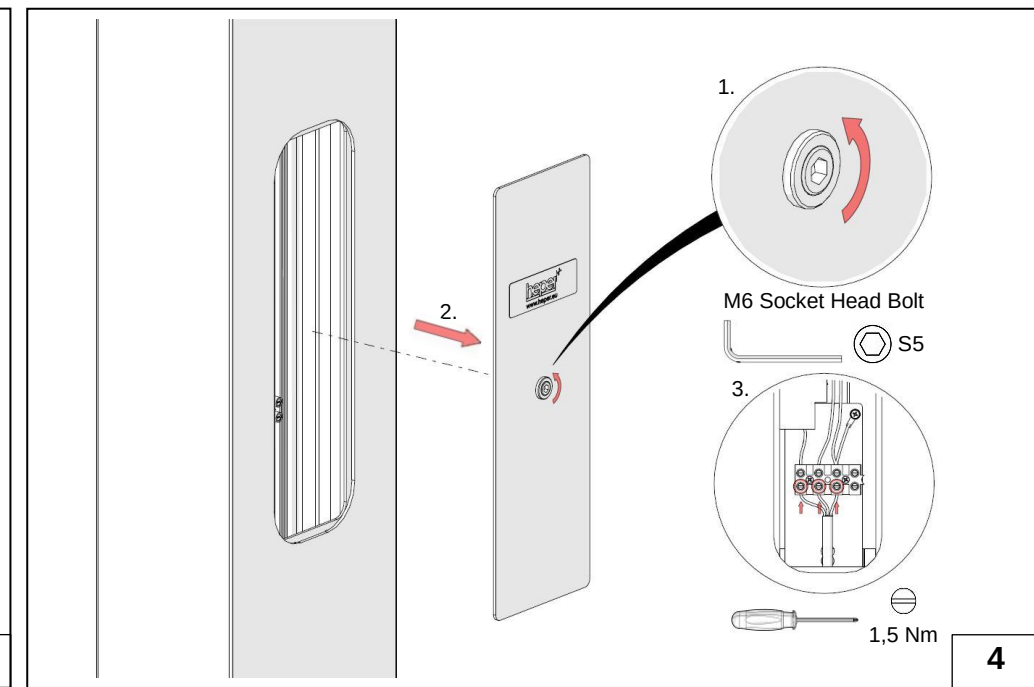
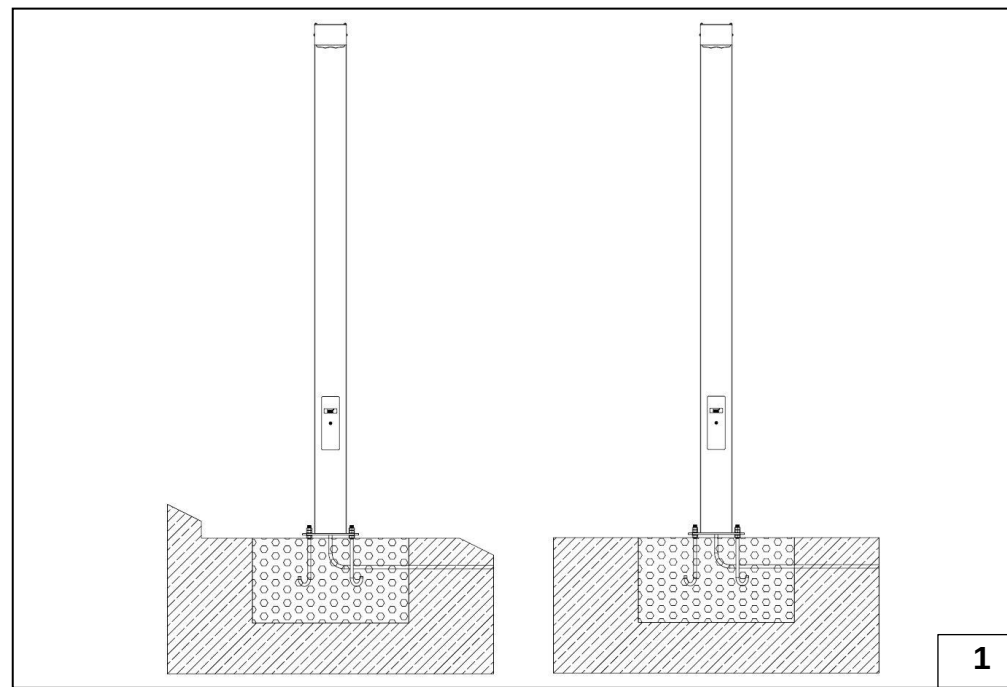
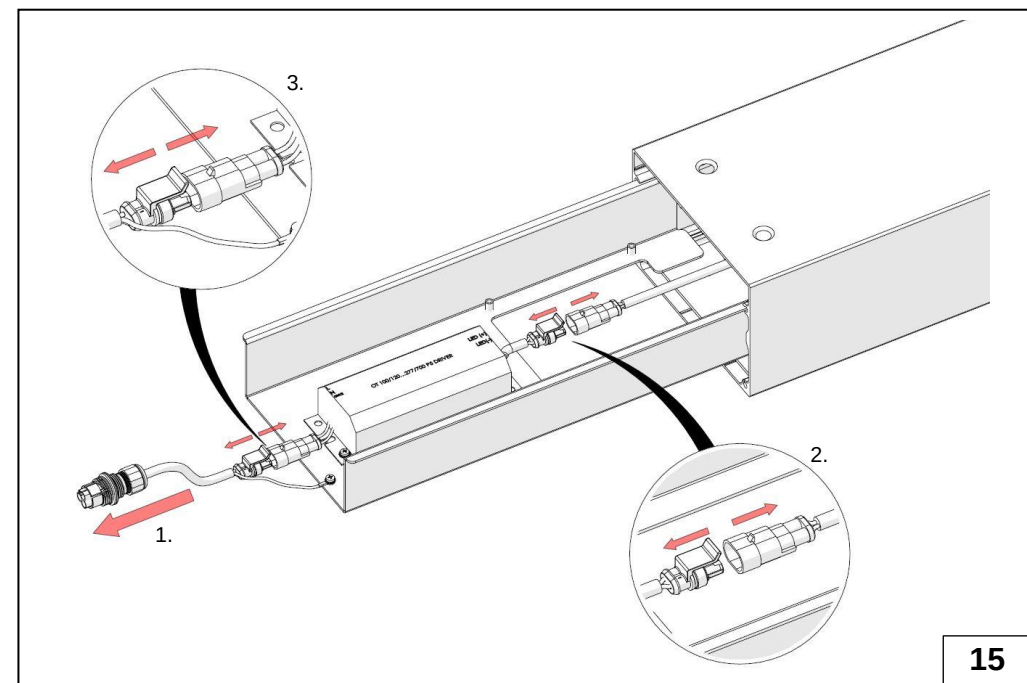
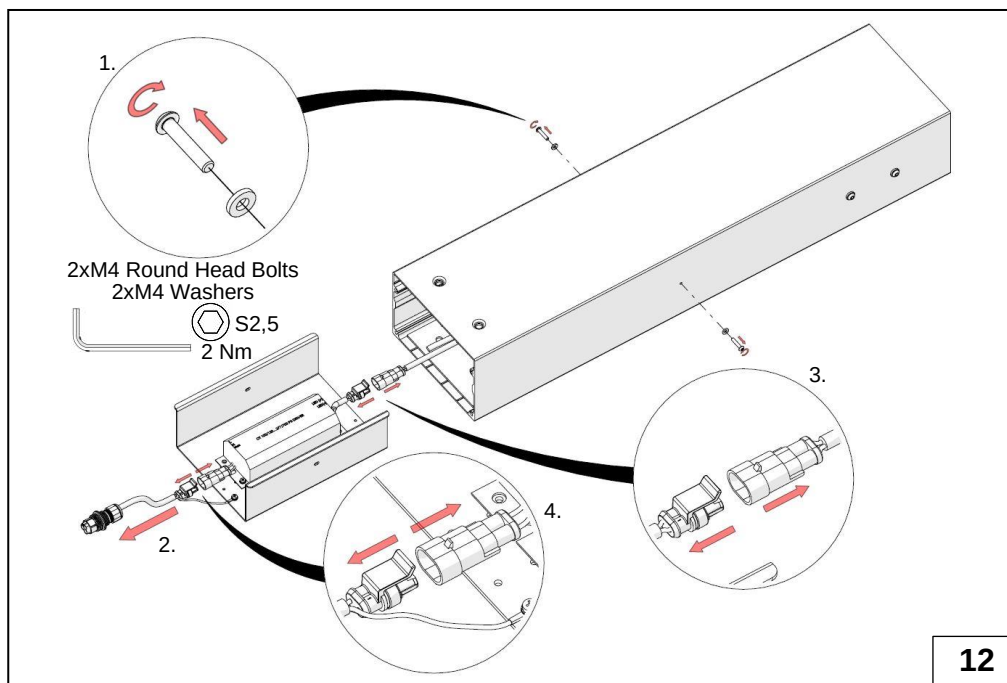
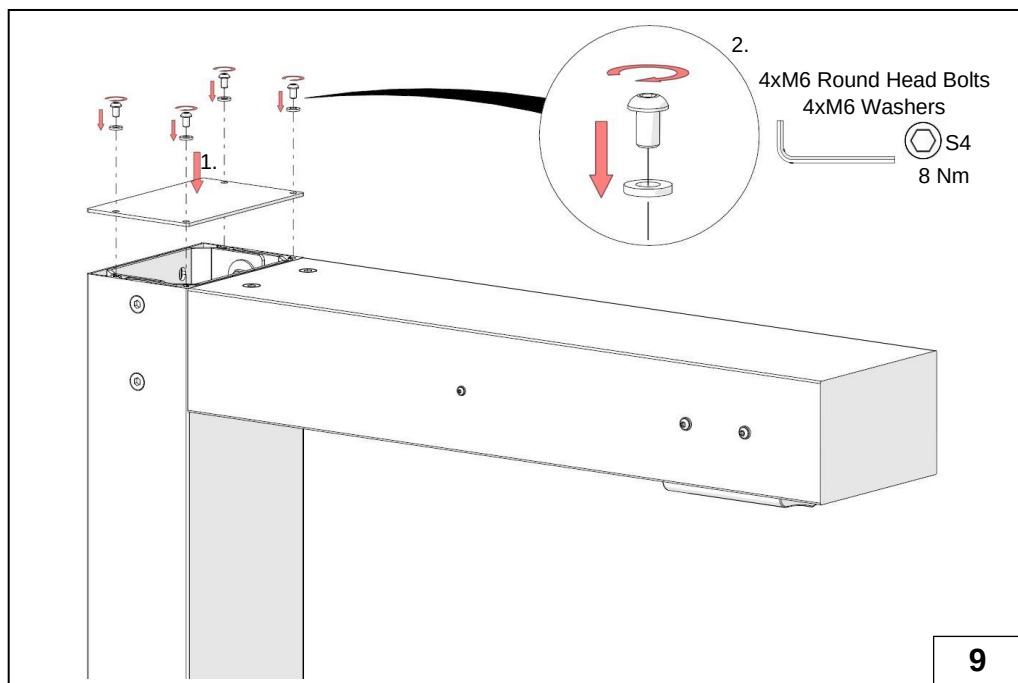
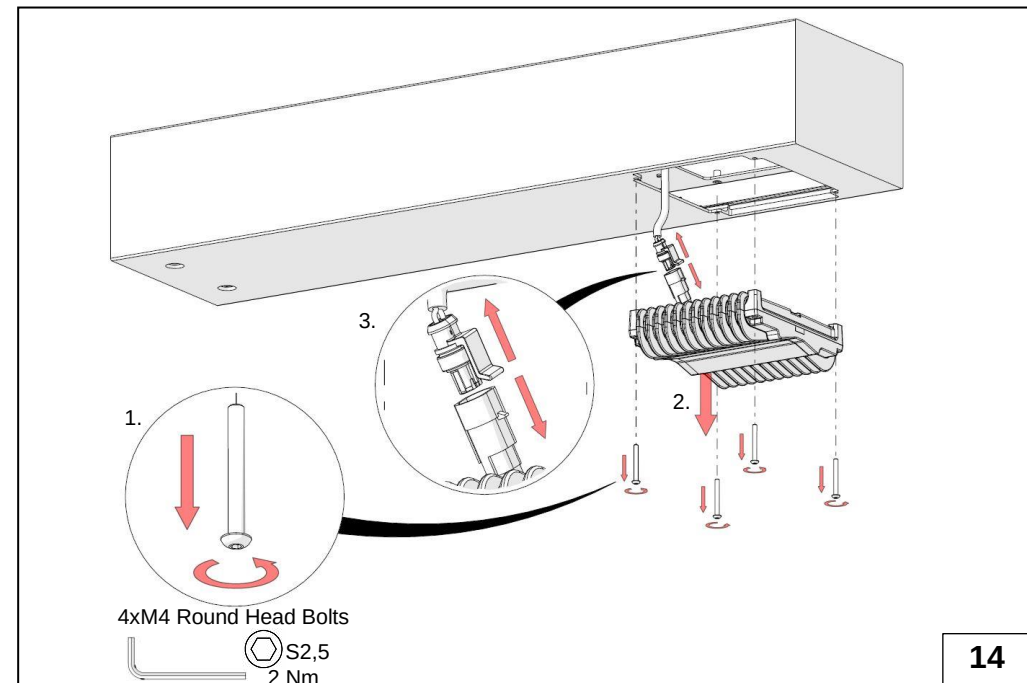
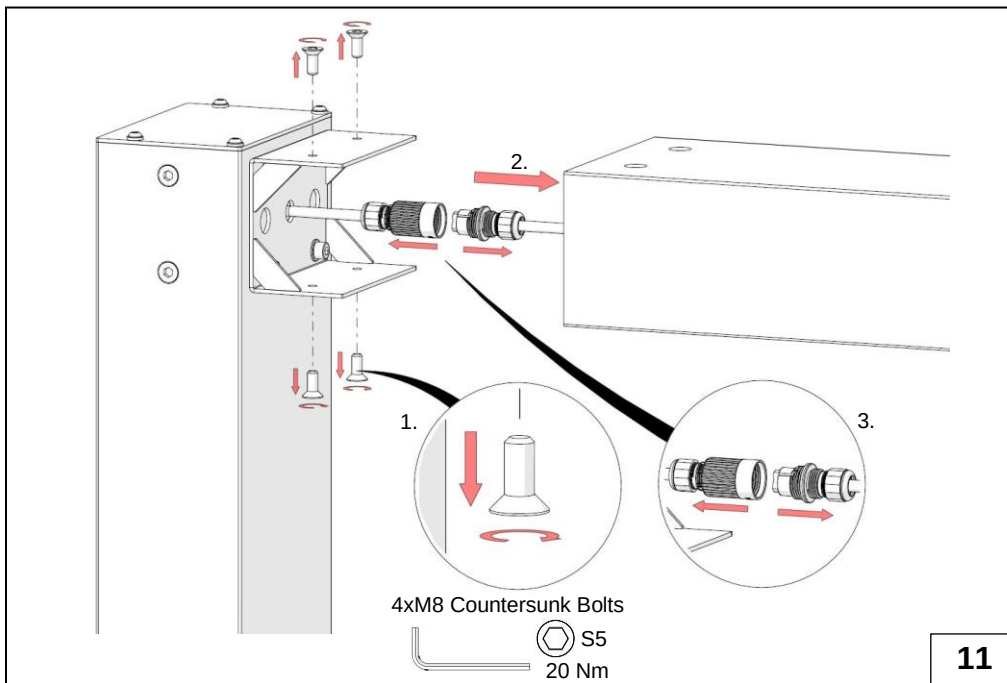
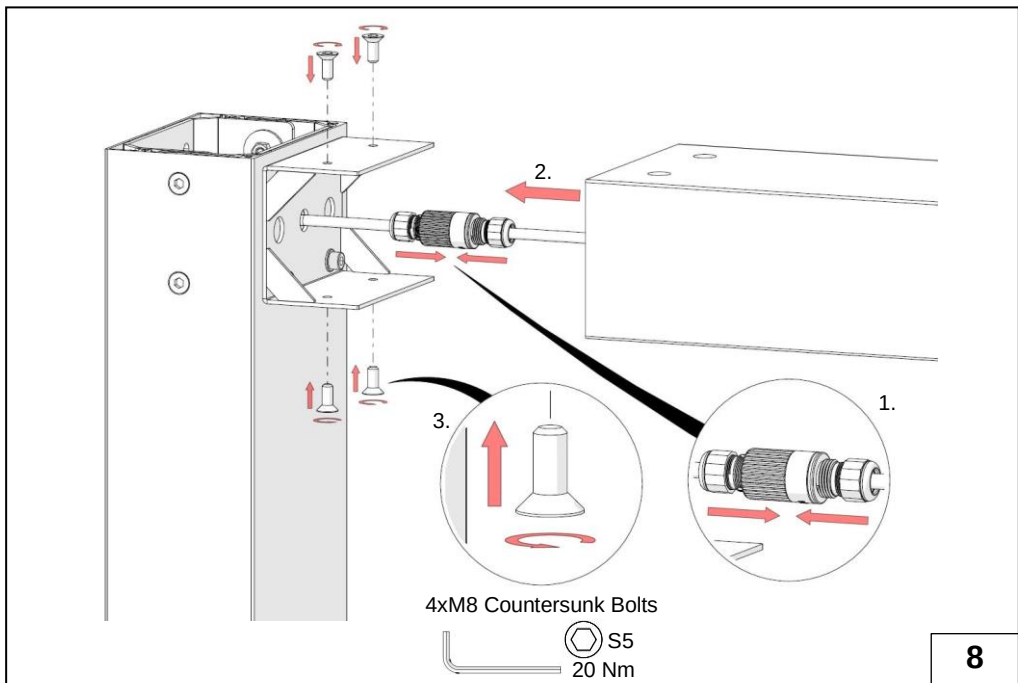
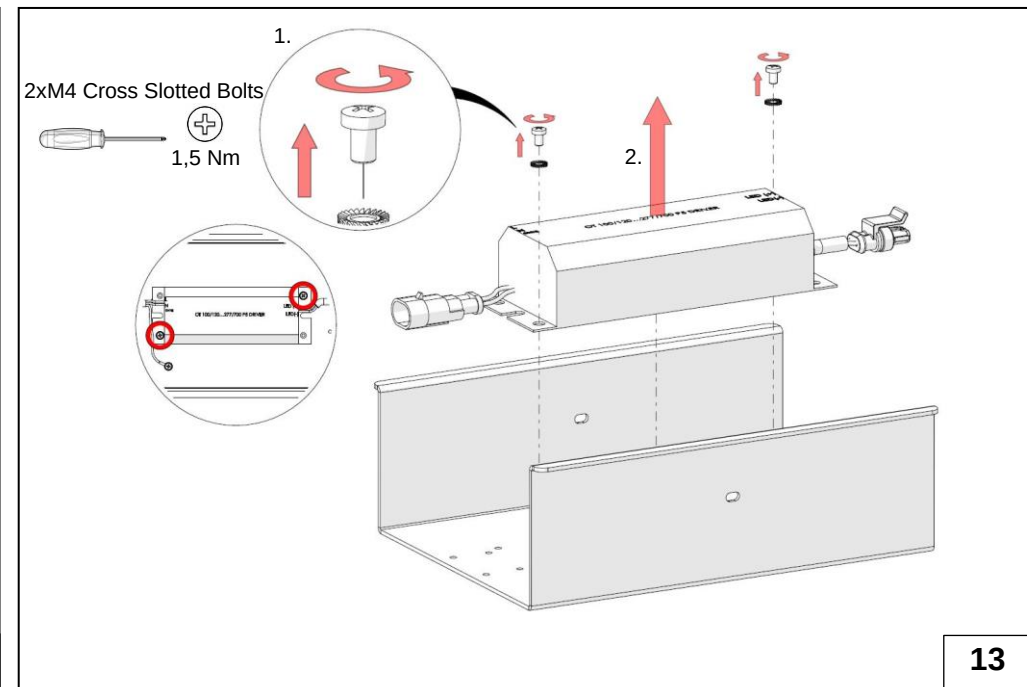


DOMINO


Installation&Maintenance Instructions
Montaj&Bakım Kılavuzu

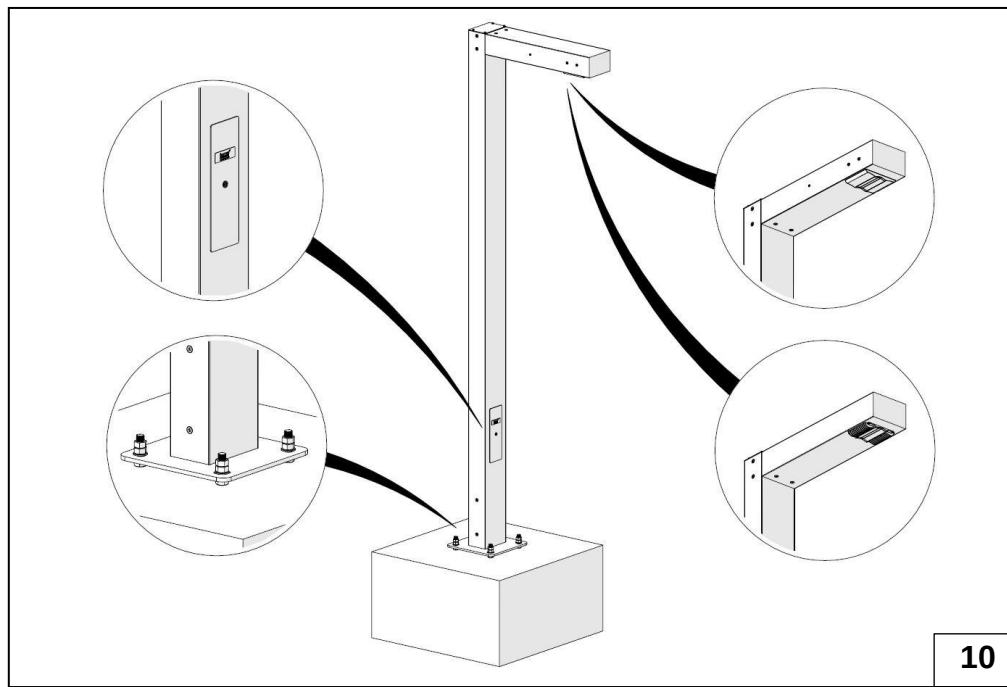

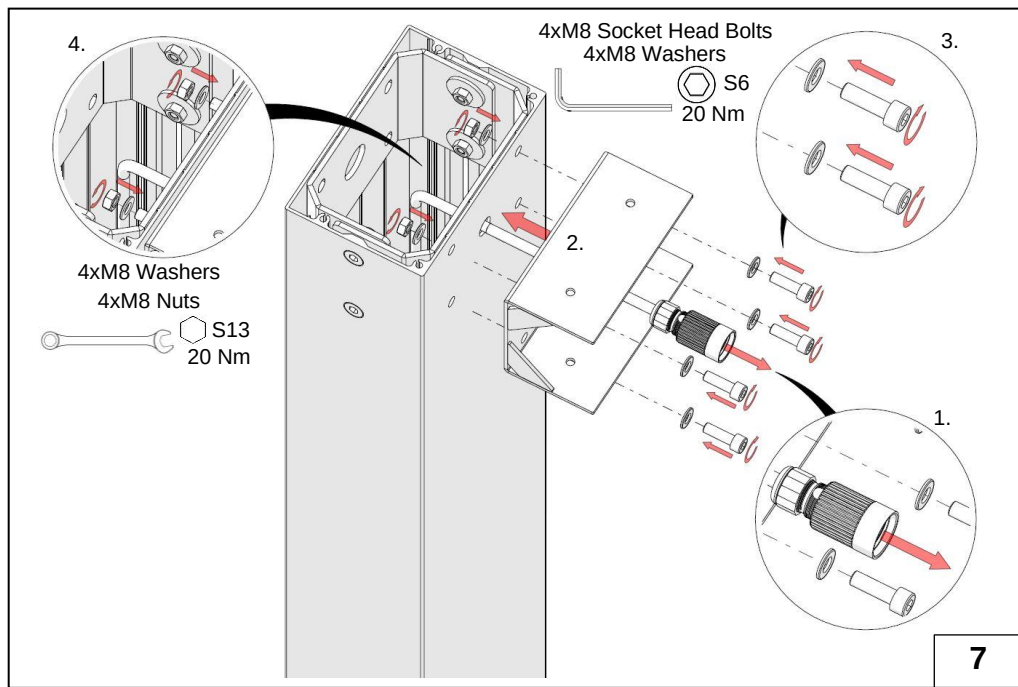

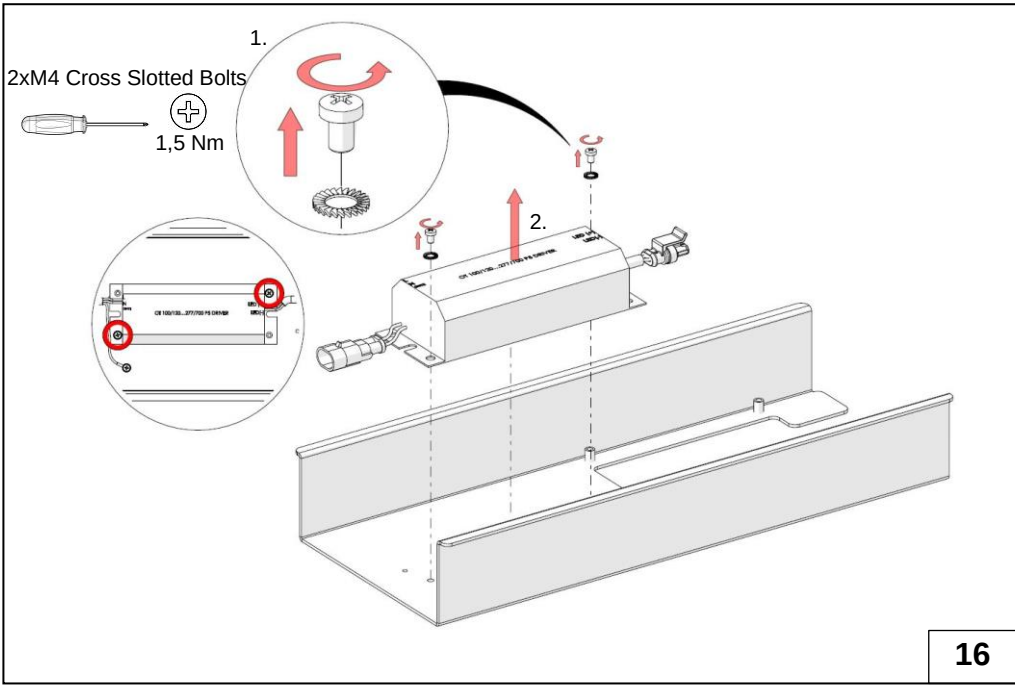

16

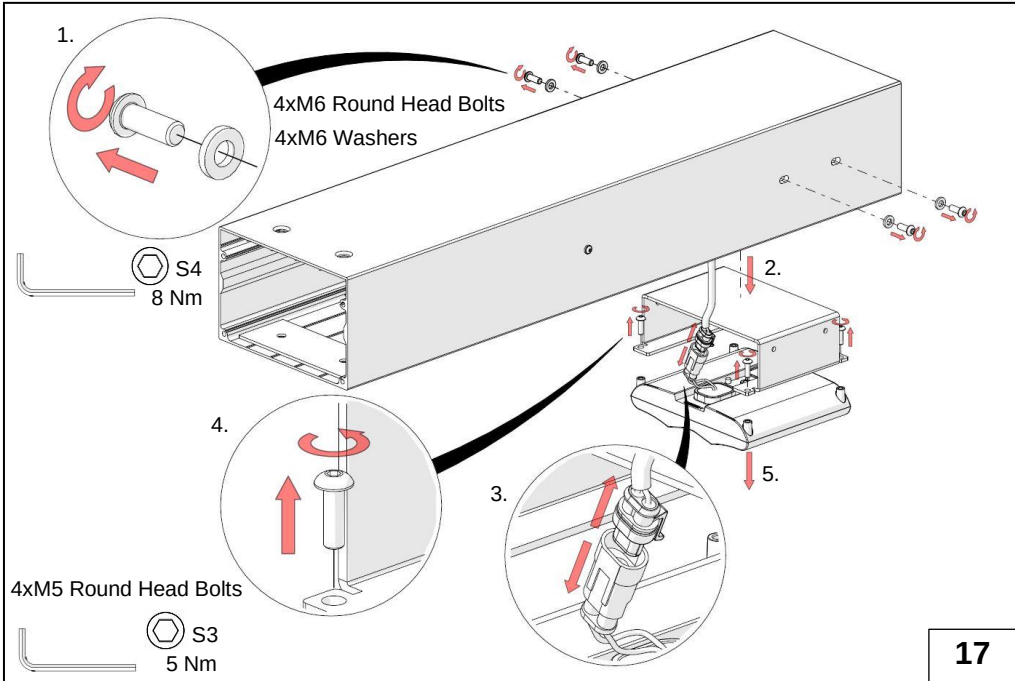

17

H (mm) (Inch)	A (mm) (Inch)	B (mm) (Inch)	C (mm) (Inch)	D (mm) (Inch)	AĞIRLIK WEIGHT (kg) (lb)	DİREK KODU POLES KODE	ARMATÜR KODU LUMINAIRE CODE	PAFD.R01.T003	
3000 118 ⁷ / ₆₄	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	37 kg 81,6 lb		LP4034.671 LP4034.681		
3000 118 ⁷ / ₆₄	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	37,5 kg 82,7 lb		LP4034.672 LP4034.682		
3000 118 ⁷ / ₆₄	186 7 ²¹ / ₆₄	1123 44 ¹ / ₃₂	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	38 kg 83,8 lb		LP4034.673 LP4034.683		
4000 157 ³¹ / ₆₄	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	43 kg 94,8 lb		LP4034.671 LP4034.681		
4000 157 ³¹ / ₆₄	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	43,5 kg 95,9 lb		LP4034.672 LP4034.682		
4000 157 ³¹ / ₆₄	186 7 ²¹ / ₆₄	1123 44 ¹ / ₃₂	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	44 kg 97 lb		LP4034.673 LP4034.683		
5000 196 ²¹ / ₃₂	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	60 kg 132,3 lb		LP4034.671 LP4034.681		
5000 196 ²¹ / ₃₂	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	60,5 kg 133,4 lb		LP4034.672 LP4034.682		
5000 196 ²⁷ / ₃₂	186 7 ²¹ / ₆₄	1123 44 ¹ / ₃₂	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	61 kg 134,5 lb		LP4034.673 LP4034.683		
6000 236 ⁷ / ₃₂	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	76,5 kg 168,7 lb		LP4034.671 LP4034.681		
6000 236 ⁷ / ₃₂	186 7 ²¹ / ₆₄	870 34 ¹ / ₄	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	77 kg 169,8 lb		LP4034.672 LP4034.682		
6000 236 ⁷ / ₃₂	186 7 ²¹ / ₆₄	1123 44 ¹ / ₃₂	120 4 ²³ / ₃₂	120 4 ²³ / ₃₂	77,5 kg 170,9 lb		LP4034.673 LP4034.683		

Türkçe

MONTAJ TALİMATLARI

Ürününün zemine montajını yapmak için;

1. Ürünün montaj yapılacağı zemin düz olmalıdır.
2. Verilen beton ölçülerine göre zemindeki boşluk ayarlanır.
- 2.1. Ürünün bağlantı deliklerini hizalamak için, şablon plakası görseldeki gibi yerleştirilir.
- 2.2. Ankraj saplamaları beton yüzeyinden 90 mm yukarı çıkacak şekilde ayarlanır ve şablon plakası betonndan çıkan saplamalara düz pullar ve somunlar yardımıyla sabitlenir. (8 Adet, M18 Düz Pul, 8 Adet, M18 Somun). Daha sonra ankraj saplamalarının şablon plakasının altında kalan kısım betona gömülür.
Not : Beton atıldıktan sonra saplamalar sabitlenince hizalamaya yarayan şablon plakası sökülür.
3. Direğin zemine montajının yapılması;
- 3.1. Direğe elektrik verecek olan kablonun zeminden geldiğinden emin olunur.
- 3.2. Direğin diklik ayarını yapmaya yarayan düz pullar ve somunlar yerlerine sıkılır (4 Adet,M18 Düz Pul, 4 Adet, M18 Somun).
- 3.3. Direk, betondan çıkan saplamalara göre hizalanarak diklik ayar elemanlarının üzerine yerleştirilir.
- 3.4. Direk, betondan çıkan saplamalara düz pullar ve somunlar yardımıyla 178 Nm tork ile montajlanır. (4 Adet, M18 Düz Pul, 8 Adet, M18 Somun).
4. Dış hattan gelen enerji kablosunun montajı;
Not: Bu işleme başlamadan önce ürüne gelen elektrik bağlantısı kesilmelidir.
- 4.1. Sigorta kapağı üzerindeki M6 civata ok yönünde yaklaşık 90 derece döndürülerek sigorta kapağı boşa çıkartılır.
Not: Sigorta kapağının düşmemesine dikkat ediniz.
- 4.2. Sigorta kapağı, direk üzerindeki yerinden çıkartılır.
- 4.3. Ana şebeke kablosunun kartuş grubu üzerindeki klemense bağlantısı yapılır.
Not: Kartuş grubu üzerindeki klemens bağlantısı yapıldıktan sonra sigorta kapağı direk üzerindeki yerine oturtulur ve M6 civata ok yönünün tersinde yaklaşık 90 derece çevirilerek sigorta kapağı sabitlenir.

Armatürün yerine montajını yapmak için;

5. Armatürün direğe bağlantı parçasının sökülmesi ;
- 5.1. Armatürün direğe bağlantı parçasını tutan havşa başlı imbus civatalar sökülür (4 Adet, M8 Havşa Başlı İmbus Cıvata).
- 5.2. Armatürün direğe bağlantı parçası yerinden alınır.
6. Direğin üst kapağının sökülmesi ;
- 6.1. Direğin üst kapağını tutan düz pullar ve bombe başlı İmbus civatalar sökülür (4 Adet, Düz Pul, 4 Adet, M6 Bombe Başlı Cıvata).
- 6.2. Direğin üst kapağı yerinden alınır.
7. Armatürün direğe bağlantı parçasının yerine montajının yapılması.
- 7.1. Sigortadan gelen kablonun ucuna montajlı olan soket armatürün direğe bağlantı parçasından geçirilir.
- 7.2. Armatürün direğe bağlantı parçası yerine yerleştirilir.
- 7.3. Armatürün direğe bağlantı parçasını yerine montajlamaya yarayan düz pullar ve imbus civatalar yerlerine yerleştirilir (4 Adet, M8 Düz Pul, 4 Adet, M8 İmbus Cıvata).
- 7.4. Armatürün direğe bağlantı parçasını yerine montajlamaya yarayan düz pullar ve somunlar imbus civatalar karşılatılarak 20 Nm tork ile sıkılır (4 Adet, M8 Düz Pul, 4 Adet, M8 Somun).
8. Armatürün direğe montajının yapılması;
- 8.1. Sigortadan gelen kablo ile armatürden çıkan kablonun birleştiren soketler birbirine montajlanır.
- 8.2. Armatür yerine yerleştirilir.
- 8.3. Armatürün, bağlantı plakasına sabitlemeye yarayan havşa başlı imbus civatalar 20 Nm tork ile yerlerine sıkılır (4 Adet, M8 Havşa Başlı İmbus Cıvata)
9. Direğin üst kapağının yerine montajlanması ;
- 9.1. Direğin üst kapağı yerine yerleştirilir.
- 9.2. Direğin üst kapağını sabitlemeye yarayan düz pullar ve bombe başlı imbus civatalar 8 Nm tork ile yerlerine sıkılır (4 Adet, Düz Pul,4 Adet, M6 Bombe Başlı İmbus Cıvata).
10. Direk ve armatür kullanıma hazırdır.

LED sürücüyü değiştirmek için;

Not: Bu işleme başlamadan önce ürüne gelen elektrik bağlantısı kesilmelidir.

11. Armatürün direktan sökülmesi;
- 11.1.Armatürün, bağlantı plakasına sabitlenmesine yarayan havşa başlı imbus civatalar sökülür (4 Adet, M8 Havşa Başlı İmbus Cıvata).
Not: LED sürücü değişimi tamamlandıktan sonra bu civatalar yerlerine 20 Nm tork ile sıkılır (4 Adet, M8 Havşa Başlı İmbus Cıvata).
- 11.2.Armatür yavaşça ileri doğru çekilir.
Not: Bu işlemi yaparken direktan gelen kablonun zarar görmemesine dikkat ediniz.
- 11.3.Sigortadan gelen kablo ile üründen çıkan kabloyu birleştiren soketler birbirinden ayrılır.

Eğer armatürde Milestone EVO LED aydınlatma modülleri kullanılıyorsa sırasıyla 11, 12 ve 13 numaralı adımlar takip edilmelidir.

12. Kartuş grubunu çıkarmak için;
- 12.1.Kartuş grubunu tutan pullar ve bombe başlı imbus civatalar sökülür (2 Adet, M4 Pul, 2 Adet, M4 Bombe Başlı İmbus Cıvata).
Not: Değişim işlemi bittikten sonra pullar ve bombe başlı imbus civatalar 2 Nm tork ile yerlerine sıkılır (2 Adet, M4 Pul, 2 Adet, M4 Bombe Başlı İmbus Cıvata).

- 12.2.Kartuş gurubu yavaşça yerinden alınır.
Not: Bu işlemi yaparken LED modüllerden gelen kablonun zarar görmemesine dikkat ediniz.
- 12.3.LED modüliden gelen kablo ile LED sürücüden çıkan kabloyu birleştiren soket birbirinden ayrılır.
- 12.4.Sigortadan gelen kablonun bağlantısını sağlayan soketi taşıyan kablo ile LED sürücüden çıkan kabloyu birleştiren soket birbirinden ayrılır.
Not: Değişim işlemi süresince toprak kablosunun kartuş sacına olan bağlantısının zarar görmediğinden emin olunuz.
13. LED sürücünün yerinden alınması;
- 13.1.LED sürücüyü tutan tırtıllı pullar ve yıldız silindirik başlı civatalar sökülür.
Not : LED sürücü değişimi bittikten sonra tırtıllı pullar yerleştirilir ve yıldız silindirik başlı civatalar 1,5 Nm tork ile yerlerine sıkılır (2 Adet, M4 Tırtıllı Pul ve 2 Adet, M4 Yıldız Silindirik Başlı Cıvata).
- 13.2.LED sürücü yerinden alınır.
Not : Kartuş gurubu yerinden çıkarılırken ürünün içindeki elektrik bağlantılarının zarar görmemesine dikkat edilmelidir bu işlem hassas bir şekilde yapılmalıdır.

Eğer armatürde Milestone LED aydınlatma modülleri kullanılıyorsa sırasıyla 11, 14, 15 ve 16 numaralı adımlar takip edilmelidir.

14. LED aydınlatma modülünü yerinden almak için;
- 14.1.LED aydınlatma modülünü tutan bombe başlı imbus civatalar sökülür (4 Adet, M4 Bombe Başlı İmbus Cıvata).
Not: LED aydınlatma modülü değişimi tamamlandıktan sonra bombe başlı imbus civatalar yerlerine 2 Nm tork ile sıkılır (2 Adet, M4 Bombe Başlı İmbus Cıvata).
Not: Kablolara zarar vermemesi için, LED aydınlatma modülünü boşa çıkarırken tutarak önlem alınız.
- 14.2.LED aydınlatma modülünü yavaşça yerinden aşağıya çekiniz.
Not: Bu işlemi yaparken kabloların zarar görmemesi için hassas olunuz.
- 14.3.LED sürücünden gelen kablo ile LED aydınlatma modülünden çıkan kabloyu birleştiren soketi ayırınız.
15. Kartuş grubunu çıkarmak için;
- 15.1.Kartuş gurubu yavaşça yerinden alınır.
Not: Bu işlemi yaparken LED modüllerden gelen kablonun zarar görmemesine dikkat ediniz.
- 15.2.LED modüliden gelen kablo ile LED sürücüden çıkan kabloyu birleştiren soket birbirinden ayrılır.
- 15.3.Sigortadan gelen kablonun bağlantısını sağlayan soketi taşıyan kablo ile LED sürücüden çıkan kabloyu birleştiren soket birbirinden ayrılır.
Not: Değişim işlemi süresince toprak kablosunun kartuş sacına olan bağlantısının zarar görmediğinden emin olunuz.
16. LED sürücünün yerinden alınması;
- 16.1.LED sürücüyü tutan tırtıllı pullar ve yıldız silindirik başlı civatalar sökülür.
Not : LED sürücü değişimi bittikten sonra tırtıllı pullar yerleştirilir ve yıldız silindirik başlı civatalar 1,5 Nm tork ile yerlerine sıkılır (2 Adet, M4 Tırtıllı Pul ve 2 Adet, M4 Yıldız Silindirik Başlı Cıvata).
- 16.2.LED sürücü yerinden alınır.
Not : Kartuş gurubu yerinden çıkarılırken ürünün içindeki elektrik bağlantılarının zarar görmemesine dikkat edilmelidir bu işlem hassas bir şekilde yapılmalıdır.

LED aydınlatma modülünü değiştirmek için;

Not: Bu işleme başlamadan önce ürüne gelen elektrik bağlantısı kesilmelidir.

Eğer armatürde Milestone LED aydınlatma modülleri kullanılıyorsa 14 numaralı adım takip edilmelidir.

Eğer armatürde Milestone EVO LED aydınlatma modülleri kullanılıyorsa 17 numaralı adım takip edilmelidir.

17. LED aydınlatma modülünü yerinden almak için;
- 17.1.LED aydınlatma modülü grubunu tutan düz pullar ve bombe başlı imbus civatalar sökülür (4 Adet, M6 Düz Pul, 4 Adet, M6 Bombe Başlı İmbus Cıvata).
Not: LED aydınlatma modülü değişimi tamamlandıktan sonra düz pullar yerleştirilir ve bombe başlı imbus civatalar yerlerine 2 Nm tork ile sıkılır (4 Adet, M6 Düz Pul, 4 Adet, M6 Bombe Başlı İmbus Cıvata).
Not: Kablolara zarar vermemesi için, LED aydınlatma modülü grubunu boşa çıkarırken tutarak önlem alınız.
- 17.2.LED aydınlatma modülü grubunu yavaşça yerinden aşağıya çekiniz.
Not: Bu işlemi yaparken kabloların zarar görmemesi için hassas olunuz.
- 17.3.LED sürücünden gelen kablo ile LED aydınlatma modülünden çıkan kabloyu birleştiren soketi ayırınız.
- 17.4.LED aydınlatma modülü ile bağlantı sacını sabitleyen bombe başlı imbus civataları sökünüz (4 Adet, M5 Bombe Başlı İmbus Cıvata).
Not: LED aydınlatma modülü değişimi tamamlandıktan sonra modül bağlantı sacı yerine yerleştirilir ve bombe başlı imbus civatalar yerlerine 5 Nm tork ile sıkılır (4 Adet, M5 Bombe Başlı İmbus Cıvata).
- 17.5.LED aydınlatma modülü ile modül bağlantı sacı birbirinden ayrılır.

ASSEMBLY INSTRUCTIONS

To mounting the product on the floor;

The floor must be flat which the product will be mounted.
The space on the floor is adjusted according to given concrete dimensions.
2.1. Anchor flange plate is used to align the connection holes of the product.
(Hole center: 250 mm)
2.2. The anchor studs are fixed into the concrete at a minimum of 90 mm from the floor to anchor flange. The anchor studs are embed to concrete.(8 Pieces M18 Washer, 8 Pieces M18 Nuts)
Note:After concrete, when the anchor stud fix the anchor flange that is used to align is removed.

To mounting the pole to the floor;
3.1. Make sure that the cable that will give electricity to the pole comes from the ground.
3.2. The washers and nuts that providing the pole steep adjustment are tightened to its place. (4 Pieces, M18 Flat Washer, 4 Pieces, M18 Nut).
3.3. The pole is placed on the pole steep adjust materials by aligning with studs coming out of concrete.
3.4. The pole is mounted with torque of 178 Nm to with the plain washers and nuts to studs coming out of concrete. (4 Pieces, M18 Flat Washer, 8 Pieces, M18 Nut).

Installation of the power cable coming from the external line;
Note: The electrical connection coming to the product must be disconnect before starting to this process.
4.1.The M6 bolt on the fuse cover is rotated approximately 90 degrees in the direction of the arrow, it is free.
Note:Care should be taken not to drop the fuse cover.
4.2. The fuse cover is removed its place from on the pole.
4.3. The main supply cable is connected to the connector on the cartridge group.
Note: After the connecting to the connector on the cartridge group, the fuse cover is placed to its place of on the pole and M6 bolt is rotated approximately 90 degrees and it is fixed.

To remove the pole connecting part of luminaire;
5.1. The Countersunk Bolts that hold the pole connection part of luminaire are removed (4 Pieces, M8 Countersunk Bolts).
5.2. The pole connection part of the luminaire is removed from its place.
6. Removing the top cover of the luminaire;
6.1. The flat washers and the round head bolts that is provide to fix the top cover of luminaire are removed. (4 Pieces, Flat Washer, 4 Pieces, M6 Round head bolt).
6.2. The top cover of pole is removed from its place.
7. To mounting pole connection part of luminaire to its place.
7.1. The socket fixture mounted on the end of the cable coming from the fuse is passed through the pole connection part.
7.2. The connection part of luminaire to pole is placed to its place.
7.3. The flat washers and round head bolt that mounting the connection to pole of the luminaire are placed to its places. (4 Pieces, M8 Flat Washer, 4 Pieces, M8 Round head bolt).
7.4. Flat washers and nuts for mounting the fixture to the pole connection part are tightened with a torque of 20 Nm by comparing the round head bolts.

8. To mounting of the luminaire to the pole;
8.1. The sockets that is combining the cable coming from the fuse and the cable coming from the luminaire to each other are assembled.
8.2. The luminaire is placed to its place.
8.3. The countersunk head bolts that is fixing to connection plate are tightened with torque of 20 Nm to its place. (4 Pieces, M8 The countersunk head bolt).
9. To mounting the top cover of the luminaire to its place;
9.1. The top cover of the pole is placed to its place.
9.1. The top cover of the pole is placed to its place.
9.2. The flat washers and round head bolts which is providing to fix to top cover of pole are tightened with torque of 8 Nm to its places. (4 Pieces Flat Washer, M6 Round Head Bolt.)
10. The pole and luminaire ready to use.
To change LED driver;
Note: The electrical connection coming to the product must be disconnect before starting to this process.
11. To removing the luminaire from pole;
11.1 Countersunk head bolts which is providing fix to connection plate are removed. (4 Pieces, M8 Countersunk Head Bolt.)
Note: The bolts are tightened with torque of 20 Nm to its places after the LED driver replacement is complete. (4 Pieces, M8 Round Head Bolt.)
11.2. The luminaire is pulled slowly forward.

Note: Care should be taken not to damage the cable coming from the pole when doing this process.

11.3. The sockets which is the cable coming from the fuse and the cable coming out of product are separated to each other.

If Milestone EVO LED lighting modules are used in the luminaire, step 11, 12 and 13 should be followed.

12. To remove the cartridge group;
12.1. The washers and round head bolts which holds the cartridge group are removed. (2 Pieces, M4 Washer, 2 Pieces, M4 Round Head Bolt.) Note: After the replacement process is completed, the washers and round head bolts are tightened with 2 Nm torque. (2 Pieces, M4 Washer, 2 Pieces, M4 Round Head Bolt.)
12.2. The cartridge group is taken slowly from its place.

Note: Care should be taken not to damage the cable coming from the pole when doing this process.

12.3. The sockets which is the cable coming from LED module and the cable coming out of LED driver are separated to each other. (2 Pieces, M4 Washer, 2 Pieces, M4 Round Head Bolt.)

12.4. The cable carrying the socket providing the connection of the cable coming from the fuse and the socket connecting the cable coming out of the LED driver are separated.

Note: Make sure that the ground cable's connection to the cartridge plate is not damaged during the replacement process.

13. Taking the LED driver from its place;
13.1. The lock washer and cheese-head bolts which holds LED driver are removed.

Note: The LED lighting module replacement is complete,

13.2. LED driver is removed from its place.

Note: While removing the cartridge group, care should be taken not to damage the electrical connections inside the product. This should be done sensitively.

14. To remove the LED lighting module;
14.1. The round head bolts which is hold the LED lighting module are removed. (4 Pieces, M4 Round Head Bolt).

Note: After the LED lighting module replacement process is completed, round head bolts are tightened with torque of 2 Nm to its places. (2 Pieces, M4 Round Head Bolt.)
Note: In order not to damage the cables, take precautions by holding the LED lighting module while the product is released.

If Milestone LED lighting modules are used in the luminaire, step 11, 14, 15 and 16 should be followed.

14.2. LED lighting module is pulled slowly down.

Note: Care should be taken not to damage the cables when doing this process.

14.3. The sockets which is the cable coming from LED driver and the cable coming out of LED module are separated.

15. To remove the cartridge group;

15.1. The cartridge group is removed from its place.

Note: Care should be taken not to damage the cables which is coming from LED module when doing this process.

15.2. The sockets which is the cable coming from LED module and the cable coming out of LED driverare separated to each other.

15.3. The sockets which is the cable coming from fuse which is providing to connect and the cable coming out of LED driver are separated to each other.

Note: Make sure that the ground cable's connection to the cartridge plate is not damaged during the replacement process.

16. To remove the LED driver from its place;

16.1. The lock washer and cheese-head bolts which holds LED driver are removed.

Note: After the LED driver replacement is finish, lock washers and cheese-head bolts are tightened with torque of 1,5 Nm to its places. (2 Pieces, M4 Lock Washer and 2 Pieces, M4 Cheese-head bolts.)

16.2. The LED driver is removed from its place.

Note: While removing the cartridge group, care should be taken not to damage the electrical connections inside the product. This should be done sensitively.

To change the LED lighting module;

Note: The electrical connection coming to the product must be disconnecting before starting to this process.

If Milestone LED lighting modules are used in the luminaire, step 14 should be followed.

If Milestone EVO LED lighting modules are used in the luminaire, step 14 should be followed.

17. To remove the LED lighting module from its place;

17.1. Flat washers and round head bolts which is hold the LED lighting module group are removed. (4 Pieces, M6 Flat Washer, 4 Pieces, M6 Round Head Bolt.)

Note: After the LED lighting module replacement is finish, flat washers and round head bolts are tightened with torque of 2 Nm to its places. (4 Pieces, M6 Flat Washer, 4 Pieces, M6 Round Head Bolt.)

Note: In order not to damage the cables, take precautions by holding the LED lighting module group while product is released.

17.3. The combining socket which is cable coming from LED driver and the cable coming out of LED module are separated.

17.4. The round head bolts which is fix to LED lighting module with connection plate are removed. (4 Pieces, M5 Round Head Bolt.)

WARNINGS AND REMARKS FOR INSTALLATION AND MAINTENANCE

Safety Instructions ⚠

- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. Always switch off the power prior to installation, maintenance or repair activities.
- The manufacturer is then discharged from liability when damage is caused by improper use or installation.
- If any luminaire is subsequently modified, the persons responsible for the modification shall be considered as manufacturer.
- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts, abrasions and other hazards, please read all warnings and instructions included with the luminaire, on the luminaire's packaging and affixed to the luminaire itself..

Installation ⚙

- LEDs are high-quality electronic components! Please avoid contacting the light output opening of the LED directly during installation or relamping.

IMPORTANT ⚠

- To ensure secure connection, the luminaire housing must be positioned precisely in relation to the mounting plate.

Cleaning And Maintenance

- Clean luminaire regularly with solvent-free cleaners from dirt. Please do not do not clean the luminaire with using high-pressure liquids.

