




TECHNOLOGY

USER MANUAL



T-ART/G2+ TELEPHONE

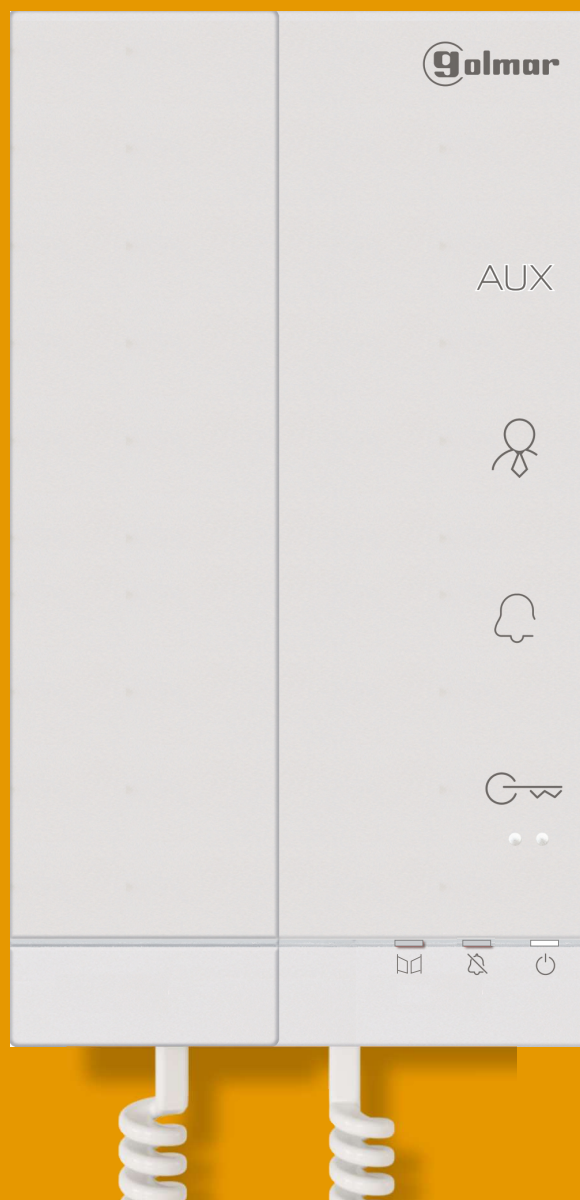

INTRODUCTION

First of all, we thank and congratulate you for purchasing this product.

Our commitment to achieving the satisfaction of customers like you is manifested through our ISO-9001 certification and the manufacture of products like the one you have just purchased.

Its advanced technology and strict quality control will ensure that customers and users enjoy the numerous features that this device offers. To get the most out of them and ensure proper operation from day one, we recommend that you read this instruction manual.

CONTENTS

Introduction.....	2
Contents.....	2
Safety precautions.....	2
Characteristics.....	3
System operation.....	3
Description of the T-ART/G2+ telephone.....	
Description.....	4
Function buttons.....	4
Status LED.....	4
Label product.....	4
Connection terminals.....	4
DIP switch.....	5
Configuration of telephone address codes (up to 128 addresses).....	5-8
Autoswitch-on function.....	9
Intercom function.....	9
Automatic door opening mode.....	9
Light activation function (staircase light).....	9
Setting audio volume in the telephone.....	9
Setting call tone volume & 'Do not disturb' mode function.....	9
Configuration & selection of the call tone.....	10
Tones & volume call tones to 'default value'.....	10
Cancel the 'call forwarding' process.....	10
T-ART/G2+ telephone installation.....	
In wall mounting connector.....	11
In embedding box.....	12
Wiring diagrams.....	13
Cleaning the monitor.....	14
Notes.....	15
Compliance.....	16

SAFETY PRECAUTIONS

- **Always disconnect the power supply** before making modifications to the device.
- The fitting and handling of these devices must be carried out by **authorised personnel**.
- The wiring must run at least **40cm away from any other wiring**.
- Do not overtighten the screws on the connector.
- Install the T-ART/G2+ telephone in a dry protected location free from the risk of dripping or splashing water.
- Do not place in humid, dusty or smoky locations, or near sources of heat.
- Before connecting the device to the mains, check the connections between the door panel, power supply & T-ART/G2+ telephones.
- Always follow the instructions contained in this manual.


CHARACTERISTICS

- T-ART telephone with simplified installation (non-polarised 2 wire bus).
- Up to 4 T-ART telephones/monitors per apartment (master, slave 1, slave 2 and slave 3).
- Up to 32 apartments/T-ART telephones in mixed installations with monitors (**EL632 G2+ SE module**).
- Up to 128 apartments/T-ART telephones per installation (**EL642 G2+ sound module required**).
- Completely private conversation.
- Call reception volume control: min, med, max and off (do not disturb).
- Audio volume control during communication process (4 different levels).
- "HZ" input for calls from apartment front door.
- Output to auxiliary call repeater (maximum 50mA/12Vdc).
- Up to 6 different ringtones to identify the origin of the call (door panel, intercom, guard monitor or front door of the apartment).
- Button  for lock release 1 activation/ activate/ deactivate "Doctor mode".
- Button **AUX** for lock release 2 activation/ staircase light activation (SAR-G2+ & SAR-12/24 modules required)/ "intercom" calls (within the same apartment) and "autoswitch-on" function.
- Button  for tone call volume control, "do not disturb" mode/ configuring ringtones/ communication call volume control (T-ART speaker).
- Button  for guard monitor calls (if exist).
- DIP switches for setting the telephone's address (call code), master/slave and end of line.


SYSTEM OPERATION

- To make a call, the visitor needs to press the button for the apartment, an audible tone indicates that the call is being made and LED  on the door panel illuminates. If vocal synthesis is enabled, a 'Call is in progress' message appears indicating that a call is being made. At this moment, the apartment's telephone(s) receives the call. If another apartment is called by mistake, press the button for the correct apartment and the first call will be cancelled.
- Upon receiving the call, the telephone's LED  will blink white. If the call is not answered within 40 seconds, the door panel's LED  will turn off, the telephone's LED  switch on (white color) and the channel will be freed.
- To establish communication, lift the handset on any telephone in the apartment. Door panel's LED  will turn off, the LED  will turn on and the telephone's LED  switch on (white color).
- Communication will last for one and a half minutes or until the handset is replaced. When communication has finished, door panel's LED  will turn off and the channel will be freed. If vocal synthesis is enabled, a 'Communication is finished' message will indicate that the call is over.
- To open the door, press button  (if it exists and, to open the second door, press button **AUX**) during the call or communication processes: one press activates the lock release for 3 seconds and LED  on the door panel will also illuminate for 3 seconds. If vocal synthesis is enabled, a 'Door is open' message will be indicated on the door panel.
- Description of the function buttons can be found on p. 4.

TELEPHONE DESCRIPTION:

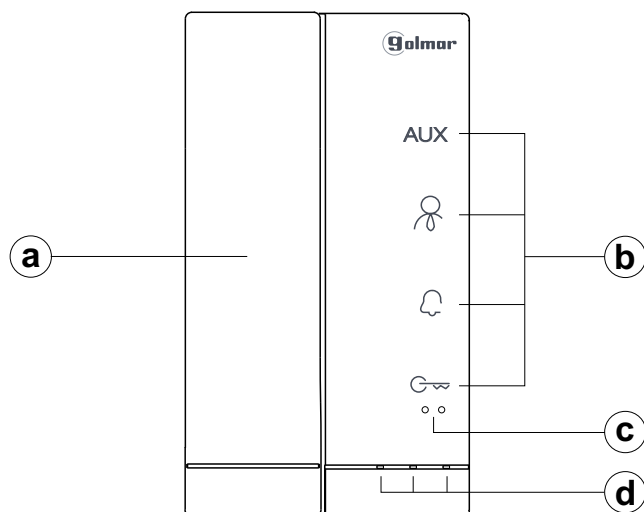Description:

- a. Handset.
- b. Function push buttons.
- c. Raised dots for the visually impaired people.
In call/ communication:
●● Above these raised dots is the "Door opening" button.
- d. Status Leds.

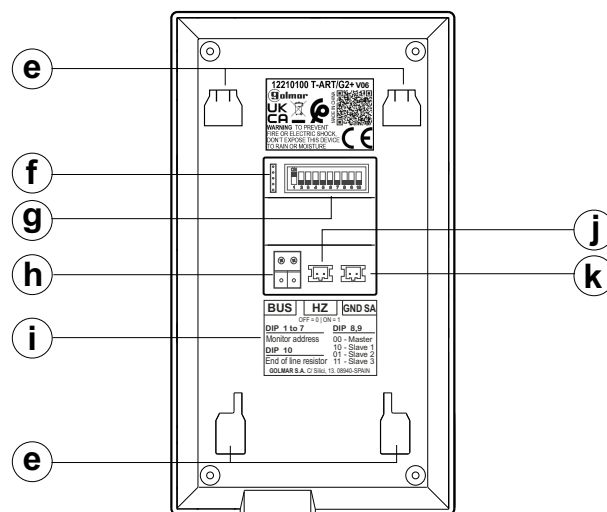


- e. Wall mounting connector fixing (x4).
- f. Golmar use.
- g. Configuration switches.
- h. Bus connection terminals.
- i. Label.
- j. Apartment front door button input "HZ".
- k. Auxiliary call repeater output (máx. 50mA/12Vdc).

Function push button:

- In standby (handset off the hook): one short press for guard monitor calls (if exist). See pages 9-10.
- AUX** During the call or communication processes: one press will activate the lock release 2. In standby (handset on the hook): press the button for 3 sec. to activate the staircase light (the SAR-G2+ & SAR-12/24 modules required). With V05 and later, 5 short press to default tones & tones volume (led switch on for 2 sec.). In standby (handset off the hook): 2 short press to "intercom" call (within the same apartment) and press for 3 sec. to "autoswitch-on" function. See pages 9-10.
- During the call or communication processes: one press will activate the lock release 1. In standby (handset on or off the hook): **Note:** With V05 or later, press the button for 8 sec. to activate/deactivate the "Doctor mode" function. See pages 9-10.
- In standby (handset on the hook): short press, it allows to change tone call volume, on every short press telephone reproduces the selected volume (cyclic min/ med/ max/ off "do not disturb"). In communication: on every short press, it allows to change the speaker of the T-ART audio volume (cyclic 4 audio levels). See pages 9-10.

Function status LED:

- During call door panel, guard or intercom process: Led will blink (white color). telephone in communication: Led switch on (white color).
- "Do not disturb" mode: Led switch on (red color). (Call forwarding) smartphone communication with the door panel from G2call+ App (with ART 7W monitor): Led blink (red color). "Default tones, tones volume & doctor mode": Led switch on for 2 sec. (red color).
- "Doctor mode": Led switch on (red color).

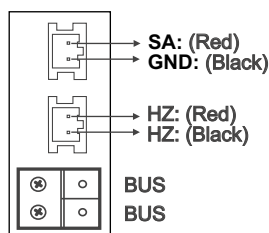Label product:**Description connection terminals:**

BUS, BUS: Communication BUS (non-polarised).

SA, GND: Auxiliary call repeater output (max 50mA/12Vdc), relay SAR-12/24.

HZ, HZ: Apartment front door button input:

Connect only on the master monitor. The signal received is then transmitted to the slave monitors in the same apartment through the BUS.

Note: HZ push button function mode: When HZ push button is pressed will be call tone and activate the output of auxiliary call repeater with standby telephone, call process, communication process (HZ tone with lower audio level), intercom process and "Do not disturb" mode. **Important:** Up to 8 telephones/ apartments with push button "HZ" activated at the same time (with system and telephones in standby).

TELEPHONE DESCRIPTION:**Description of the DIP switch and configuration of the T-ART/G2+ telephone address (code):****Edificio / Chalet (Placa Nexa)**

Dip1-Dip7: Sets the telephones address (addresses 1 to 128). **Note:** Mixed installations with monitors (addresses 1 to 32). The switches set to OFF have a zero value. The values of the switches set to ON are shown in the table below. The telephone code is the sum of the values of the switches set to ON.

Important:**Table of values**

Apartment 1 (Dip1 to ON & Dip2-Dip7 to OFF) Switch number: 1 2 3 4 5 6 7
 Apartment 128 (Dip1-Dip7 to OFF) Value when ON: 1 2 4 8 16 32 64



Example: $0 + 0 + 4 + 0 + 16 + 0 + 0 = 20$

Dip8-Dip9: These define whether the telephone is master or slave. Each apartment must have only one master telephone.

Master**Slave 1****Slave 2****Slave 3**











Dip10: Configures the end of line. In installations with telephones only, it must always be in the OFF position. In mixed installations of monitors with T-ART/G2+ telephones in the same apartment, set to ON for the telephones in which the BUS cable ends and leave in the OFF position for intermediate telephones.

IMPORTANT: T-ART/G2+ telephone in **Villa installation with SOUL door panel**, see corresponding Kit Soul user manual for Kit features as maximum number of apartments and monitors/ART 1 G2+ telephone.

Configuration of T-ART/G2+ telephone address codes (up to 128 addresses):**Important:**

- Up to 32 apartments/T-ART telephones in mixed installations with monitors (**EL632 G2+ SE module**).
- Up to 128 apartments/T-ART telephones per installation (**EL642 G2+ sound module required**).

Dip1 a Dip7: To configure the T-ART/G2+ telephone/apartment address (up to 128 addresses).

Apartment code 1**Apartment code 2****Apartment code 3****Apartment code 4****Apartment code 5****Apartment code 6****Apartment code 7****Apartment code 8****Apartment code 9****Apartment code 10****Apartment code 11****Apartment code 12****Apartment code 13****Apartment code 14****Apartment code 15****Apartment code 16****Apartment code 17****Apartment code 18****Apartment code 19****Apartment code 20**


Continued overleaf

Continued from previous page.

Apartment code 24



Apartment code 28



Apartment code 32



Apartment code 36



Apartment code 40




Apartment code 44



Apartment code 48




Apartment code 52



Apartment code 56



Apartment code 60



Apartment code 64



Continued overleaf

TELEPHONE DESCRIPTION:

Continued from previous page.

Apartment code 65



Apartment code 66



Apartment code 67



Apartment code 68



Apartment code 69



Apartment code 70



Apartment code 71



Apartment code 72



Apartment code 73



Apartment code 74




Apartment code 75




Apartment code 76



Apartment code 77



Apartment code 78



Apartment code 79



Apartment code 80



Apartment code 81



Apartment code 82



Apartment code 83



Apartment code 84



Apartment code 85



Apartment code 86



Apartment code 87



Apartment code 88



Apartment code 89




Apartment code 90




Apartment code 91




Apartment code 92




Apartment code 93



Apartment code 94



Apartment code 95




Apartment code 96



Apartment code 97




Apartment code 98



Apartment code 99




Apartment code 100




Apartment code 101



Apartment code 102



Apartment code 103



Apartment code 104



Apartment code 105




Apartment code 106



Apartment code 107




Apartment code 108



Continued overleaf

TELEPHONE DESCRIPTION:

Continued from previous page.

Apartment code 109 	Apartment code 110 	Apartment code 111 	Apartment code 112 
Apartment code 113 	Apartment code 114 	Apartment code 115 	Apartment code 116 
Apartment code 117 	Apartment code 118 	Apartment code 119 	Apartment code 120 
Apartment code 121 	Apartment code 122 	Apartment code 123 	Apartment code 124 
Apartment code 125 	Apartment code 126 	Apartment code 127 	Apartment code 128 

TELEPHONE DESCRIPTION:**Autoswitch-on function:**

With the T-ART/G2+ telephone in standby mode and the handset off the hook, you can establish an audio communication with the master door panel. It is only operative if there is no communication in progress.

With the telephone in standby mode and handset off the hook, press the button **AUX** for 3 seconds, a confirmation tone will sound on the telephone, indicating that audio communication has been established with the master door panel.

The communication will last for one and a half minutes or until the handset is replaced.

Intercom function:

Intercom functionality between two points in the same apartment comes as standard with the T-ART/G2+ telephone.

The telephone must be in standby and the handset off the hook to make intercom calls.

To make an intercom call, press button **AUX** two short times, the led  of the telephone that makes the intercom call and the telephones that receive the call will blink and some tones in the apartment telephones will confirm that the call is being made.

The call needs to be answered within 40 seconds.

To establish communication, pick up the handset of any called telephone of the apartment (if there is more than one slave telephone), the led  of the telephones in communication and the rest of the telephones of the apartment will turn on.

Communication will last for one and a half minutes or until the handset is replaced.

"Automatic door opening" mode:

The T-ART/G2+ telephone allows you to activate/deactivate the "automatic door opening" mode.

Activate "automatic door opening" mode:

Note: With V05 or later, with the telephone in standby mode (handset on or off the hook), press the button  for 8 sec., a confirmation tone will sound and the led  on the telephone will turn on (red), indicating that the "automatic door opening" mode has been activated, (3 seconds after a call from the door panel).

Deactivate "automatic door opening" mode

Note: With V05 or later, with the telephone in standby mode (handset on or off the hook), press the button  for 8 sec., a confirmation tone will sound and the led  on the telephone will turn off, indicating that the "automatic door opening" mode has been deactivated.

Light activation function:

The T-ART/G2+ telephone must be in standby (handset off the hook) for light activation (requires SAR-G2+ and SAR-12/24 module). **Important:** For connection and configuration, see TSAR-G2+ and TSAR-12/24 manual.

To activate the light (e.g. "staircase light"), press the button **AUX** for 3 seconds until you hear a confirmation tone indicating that the light has been activated.

Setting audio volume in the telephone:

The telephone allows you to change the volume of the audio in the speaker of the communicating telephone (between 4 levels from minimum to maximum in carousel mode) through the function button .

The telephone must be in communication, a short press on the button , allows to change the audio volume on the telephone speaker, each short press reproduces the selected volume (between 4 levels from minimum to maximum and in carousel mode), stop pressing once the desired volume level is selected on the telephone. When communication has finished, the selected volume will be saved in the telephone.

Setting call tone volume & 'Do not disturb' mode function:

The telephone must be in standby (handset off the hook) to adjust the volume of the call tone or to activate/deactivate the "do not disturb" mode.

A short press on the button  allows you to change the volume of the call tone, each short press reproduces the selected volume (minimum/ medium/ maximum and no volume in "do not disturb" mode), stop pressing once the "do not disturb" mode has been selected (the LED on the button  turn on in red) or the volume of the desired call tone.

If the "do not disturb" mode has been selected, the LED on the button  will turn on (red), indicating that the "do not disturb" mode is active. The telephone will not sound the ring tone when a call is received (see note "HZ" on page 4).

To deactivate the "do not disturb" mode, press the button , each short press reproduces the selected volume (minimum/ medium/ maximum and no volume "do not disturb" mode), stop pressing once the volume (minimum/ medium or maximum) of the desired call tone has been selected; the LED  will turn off indicating that the "do not disturb" mode is deactivated.

Continued overleaf

TELEPHONE DESCRIPTION:

Continued from previous page.

Configuration & selection of the call tone:

The telephone must be in standby (handset off the hook) for the configuration and selection of the desired call tone.

To modify the call tones, press the button  for 3 seconds until you hear 2 confirmation tones that indicate that the telephone is in configuration mode. Once in configuration mode, press the corresponding button to change the call tone (between 6 different ring tones and in carousel mode):

- To change the "apartment front door button" (HZ) call tone, press the button **AUX**.

Each short press on the button **AUX** reproduces a different call tone, stop pressing once you have selected the desired "apartment front door button" call tone on the telephone.

- To change the "intercom" call tone, press the button .

Each short press on the button  reproduces a different call tone, stop pressing once you have selected the desired "intercom" call tone on the telephone.

- To change the "guard monitor" call tone, press the button .

Each short press on the button  reproduces a different call tone, stop pressing once you have selected the desired "guard monitor" call tone on the telephone.

- To change the door panel call tone, press the button .

Each short press on the button  reproduces a different call tone, stop pressing once you have selected the desired door panel call tone on the telephone.

To exit and save the selected call tone in the telephone, press the button  for 3 seconds until you hear 2 confirmation tones indicating that the telephone has saved and left the configuration mode.

Make a call to check that the telephone has been configured with the desired call tones.

Tones, volume call tones & doctor mode default value:

The T-ART/G2+ telephone allows you to restore the tones, volume of the call tones and doctor mode to "default value".

With the telephone in standby (handset off the hook), 5 short presses on the button **AUX**, some confirmation tones and the led  of the telephone will switch on for 2 seconds, indicating that the tones, volume of the call tones and doctor mode in the telephone have been restored to their default value.

Cancel the 'call forwarding' process or 'communication' with door panel from G2Call+ App:

-If a call is made from the door panel to an apartment of a mixed video door entry system (ART 7W/G2+ monitors and T-ART/G2+ telephones in the same apartment) and the ART 7W/G2+ monitor has "call forwarding" configured and activated; from an T-ART/G2+ telephone in the same home, you can cancel the process of "call forwarding" to an smartphone by picking up the telephone handset (information about this function, see the TART 7W G2+ manual).


-If smartphone is in communication with door panel from G2Call+ App, you can cancel the communication process to an smartphone by pressing the button  on the telephone for more than 3 seconds (information about this function, see the TART 7W G2+ manual).

INSTALLING THE TELEPHONE IN A WALL MOUNTING CONNECTOR:

Avoid dusty or smoky environments or locations near sources of heat.


Positioning the wall mounting connector:

The top of the wall mounting connector should be located at a height of 1.60m from the ground. The minimum distance between the wall mounting connector and the closest object must be 5 cm.

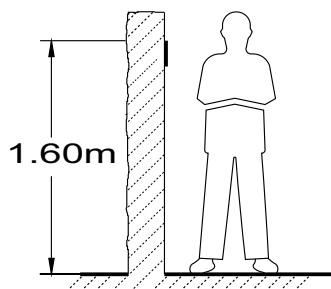

Fixing the telephone's wall mounting connector to the wall:


Fix the telephone's wall mounting connector to the wall by drilling two 6mm diameter holes and using the screws and plugs supplied with the telephone.

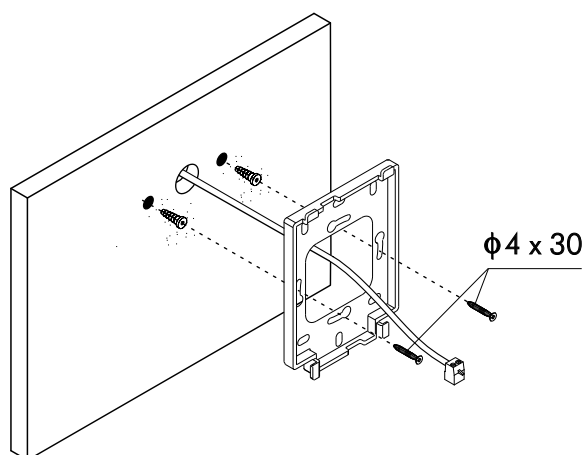

Positioning the telephone:

Connect the cables to the telephone (see p. 4), position the telephone in front of the wall mounting connector, ensuring that the holes in the base of the telephone line up with those on the connector ①, and then move the telephone downwards ② until the telephone is securely fixed to the connector ③.

Remember to remove the protective covering from the front of the telephone once installation has been completed.

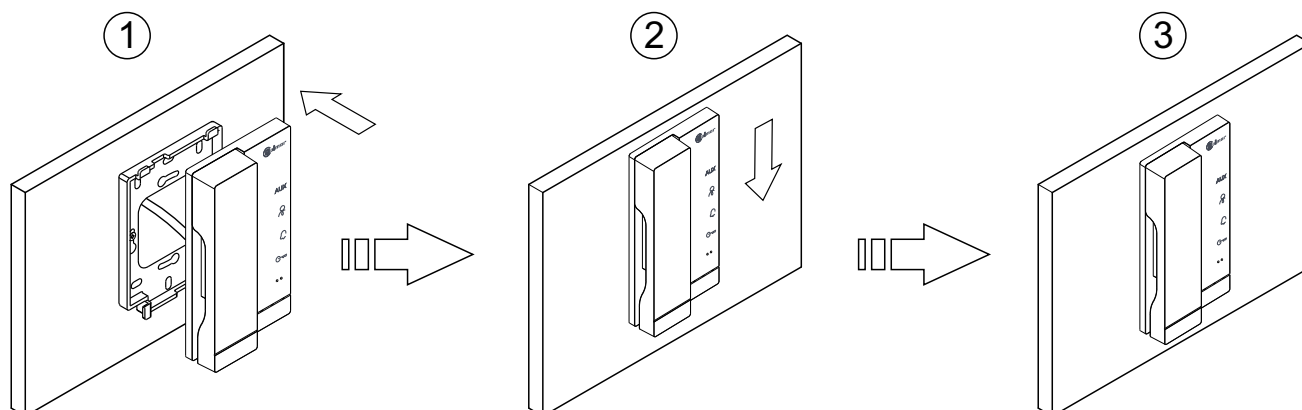


INSTALLATION OF THE TELEPHONE IN AN EMBEDDING BOX:

Avoid dusty or smoky environments or locations near sources of heat.


Positioning the embedding box:

Make a hole in the wall to position the top of the universal embedding box at a height of 1.60 m from the ground. The minimum distance between the sides of the embedding box and the closest object must be 5 cm.

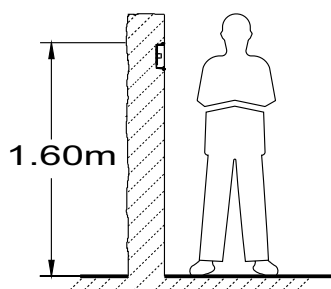

Positioning the embedding box and fitting the wall mounting connector:


Pass the cable through the hole made in the embedding box. Embed the box and ensure that it is level and flush. Fix the wall mounting connector of the telephone to the embedding box with the screws supplied.

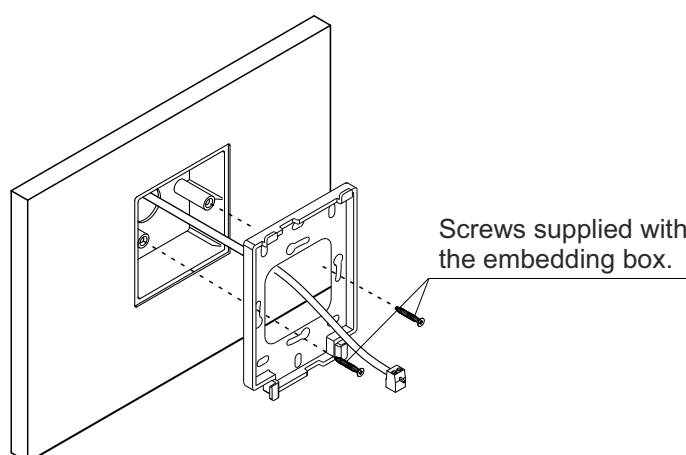


Positioning the telephone:

Connect the cables to the telephone (see p. 4), position the telephone in front of the wall mounting connector, ensuring that the holes in the base of the telephone line up with those on the connector ①, and then move the telephone downwards ② until the telephone is securely fixed to the connector ③.

Remember to remove the protective covering from the front of the telephone once installation has been completed.

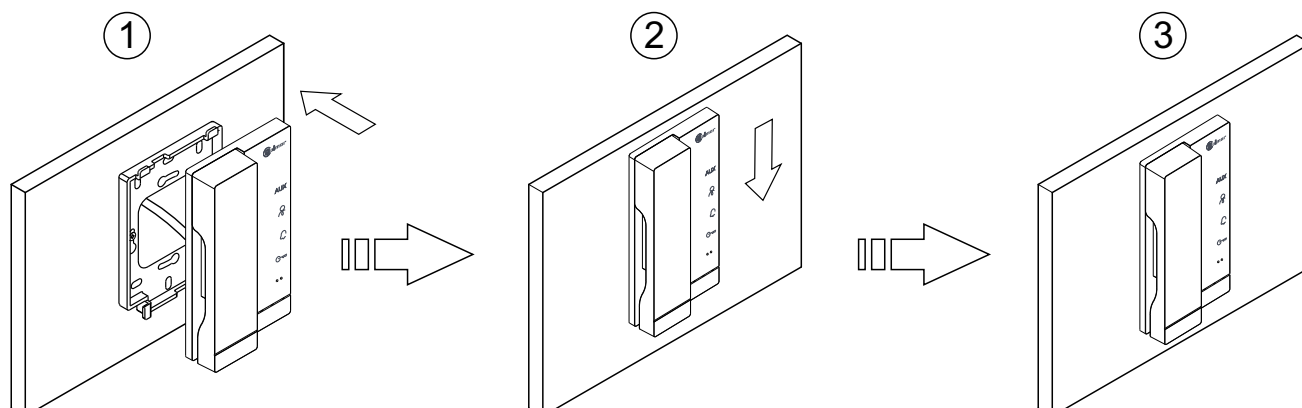

WIRING DIAGRAMS:

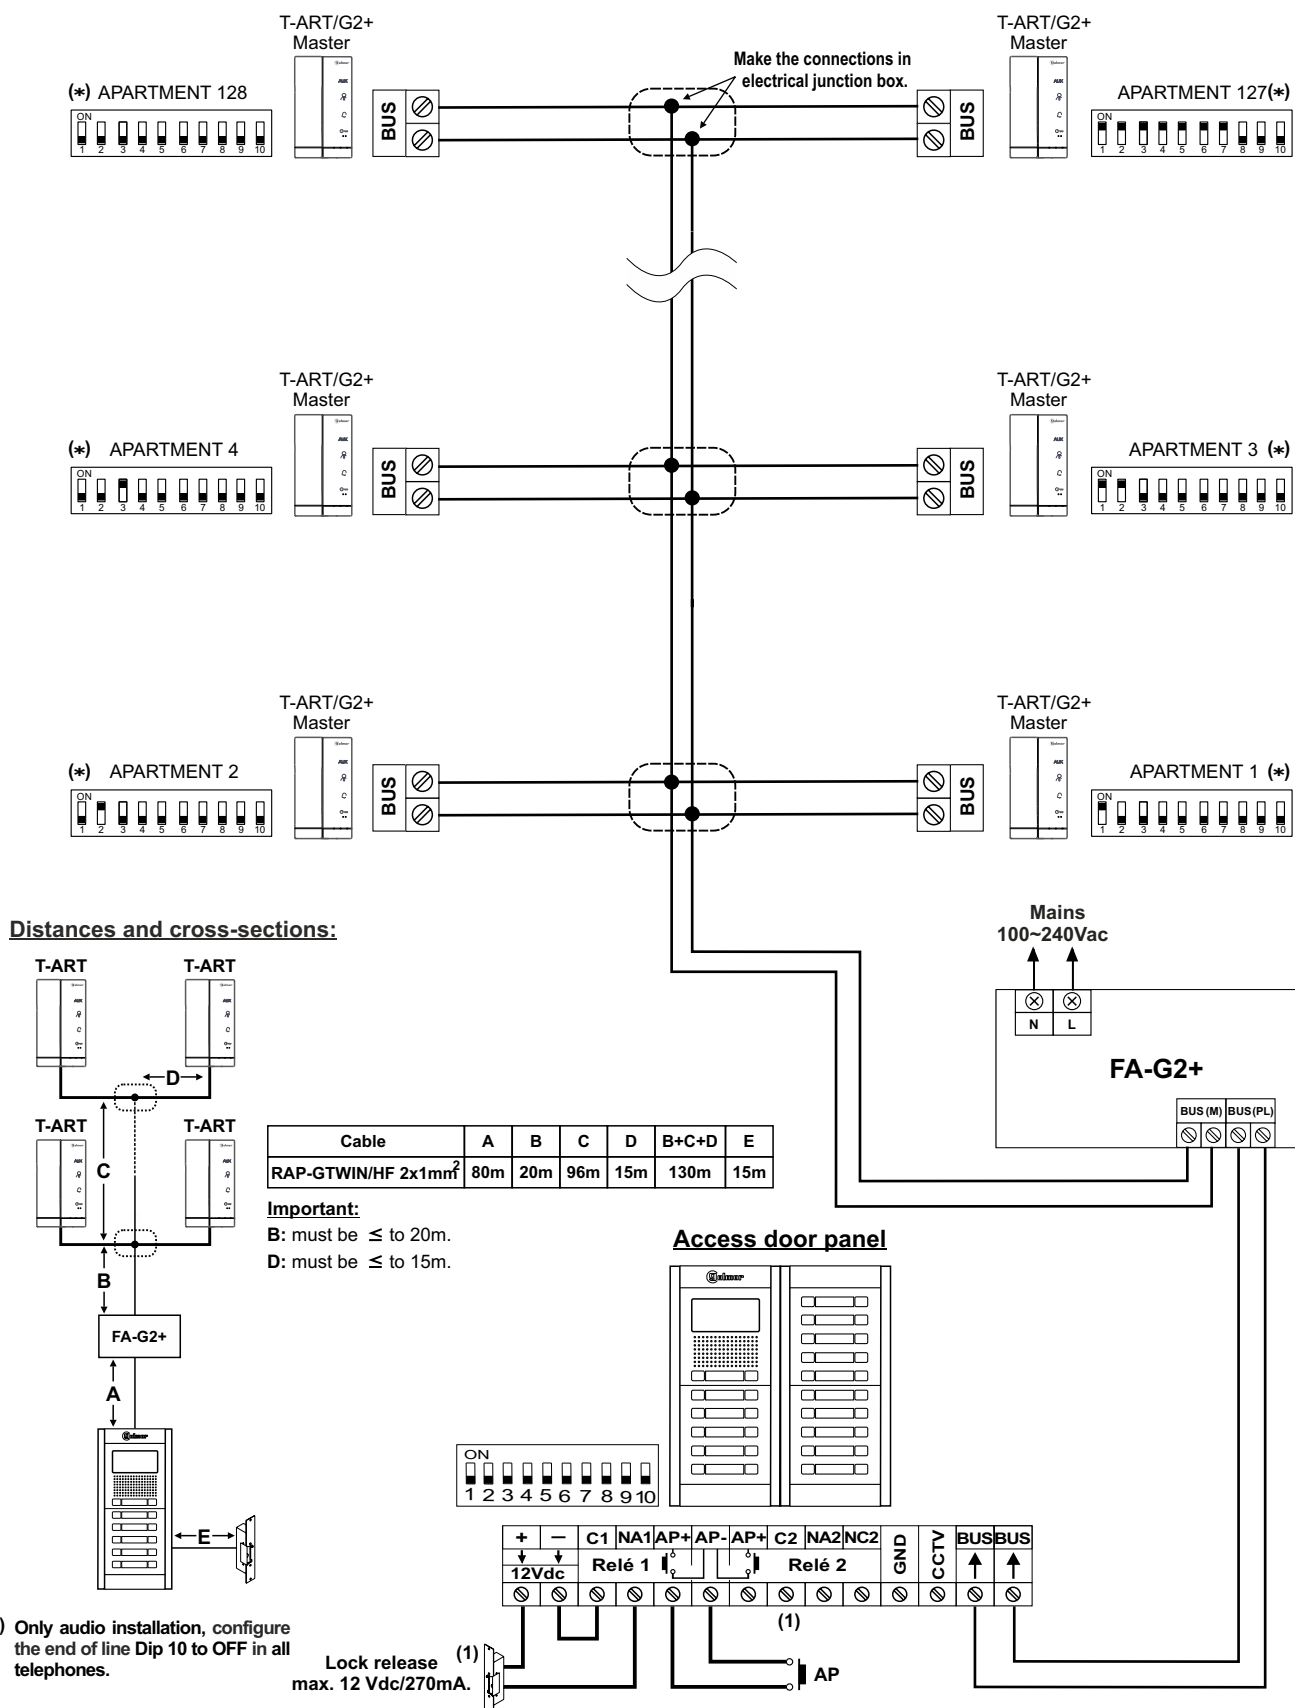Audio door entry system with 128 apartments / T-ART-G2+ telephones and Golmar d.c lock release.


(1) For more information about the door panel, installation, configuration, connection of an AC lock release, 2nd lock release, mixed installation with monitors and T-ART/G2+ telephones and other wiring diagrams, (see the corresponding door panel manual).

CLEANING THE TELEPHONE:

- Do not use solvents, detergents or cleaning products that contain acids, vinegar or abrasive components.
- Use a soft damp lint-free cloth with water.
- Always wipe the telephone in the same direction, from top to bottom.
- After cleaning the telephone, remove any moisture with a soft dry lint-free cloth.

Cleaning mode: The T-ART/G2+ phone with V06 and later, allows "cleaning mode".

- With the phone in standby, press the button  4 times in 2 seconds to start the "cleaning mode", the status led  will flash confirming that the T-ART/G2+ phone is in "cleaning mode" allowing to pass a cloth over the phone avoiding that the buttons activate any function when pressed.
- The "cleaning mode" has a duration of 30 seconds, at the end of this time the T-ART/G2+ phone exits the "cleaning mode", the status LED  will turn off and the T-ART/G2+ phone returns to the standby, now the buttons again have a function when pressed.
- If during the "cleaning mode" of the T-ART/G2+ telephone a call is received, the "cleaning mode" will end and the call will be received.

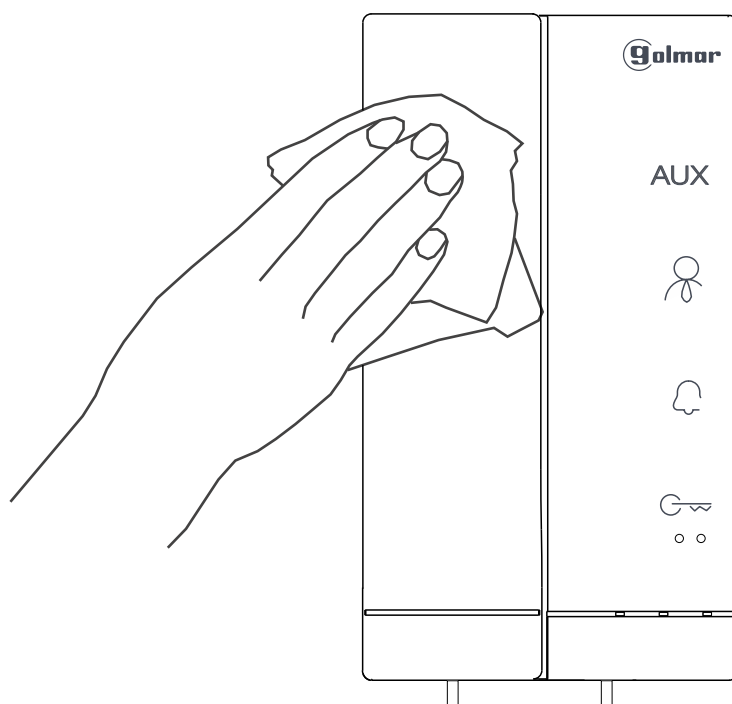

NOTES:

[illegible]

COMPLIANCE:

Este producto es conforme con las disposiciones de las Directivas Europeas aplicables respecto a la Compatibilidad Electromagnética **2014/30/CEE**.

*This product meets the essentials requirements of applicable European Directives regarding Electromagnetic Compatibility **2014/30/ECC**.*



NOTA: El funcionamiento de este equipo está sujeto a las siguientes condiciones:

(1) Este dispositivo no puede provocar interferencias dañinas, y (2) debe aceptar cualquier interferencia recibida, incluyendo las que pueden provocar un funcionamiento no deseado.

NOTE: Operation is subject to the following conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any received interference, including the ones that may cause undesired operation.



golmar@golmar.es
www.golmar.es

GOLMAR S.A.
C/ Silici, 13
08940- Cornellá de Llobregat
SPAIN



Golmar se reserva el derecho a cualquier modificación sin previo aviso.
Golmar se réserve le droit de toute modification sans préavis.
Golmar reserves the right to make any modifications without prior notice.