


USER MANUAL



Art 4/G2+ monitor
Hands-free
2-wire installation

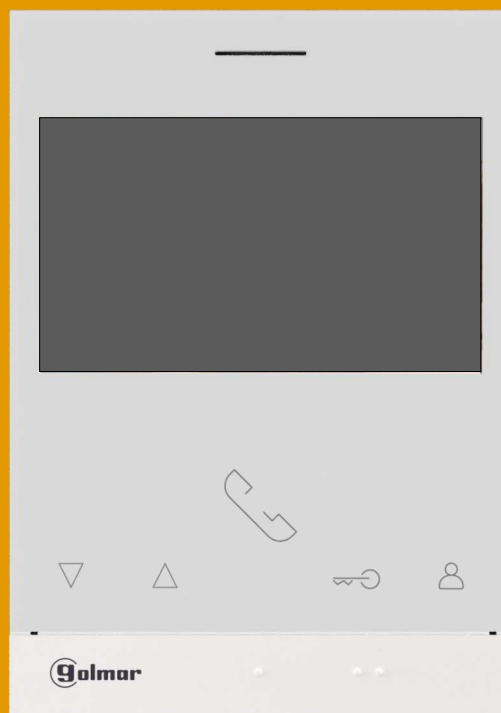

CONTENTS

Contents	2
Recommendations.....	2
System operation	2
Art 4/G2+ monitor.....	3 to 21
Description	3
Installation	4
Installation terminals	4
Configuration switches.....	4
Main menu	5
Settings menu.....	6 to 9
Settings screen ('Do not disturb' / 'Automatic door opening' and 'Enable/disable intercom').....	10
Recording mode settings screen	11
Door panel call screen.....	12
Communication screen	13
Image and communication settings	14 to 16
Intercom menu.....	17 to 18
Recordings menu	19 to 21
Special codes	22 to 23
Cleaning the monitor	24
Notes	25

RECOMMENDATIONS

- Preferably use a Golmar **RAP-GTWIN/HF** cable (2x1mm²).
- The wiring must run at least **40cm away from any other wiring.**
- **Always disconnect the power supply** before making modifications to the device.
- The installation and handling of these devices must be carried out by **authorised personnel.**
- Check all connections before starting the device.
- Always follow the instructions contained in this manual.

SYSTEM OPERATION

To make a call, the visitor needs to press the door panel button: an audible tone will indicate that the call is being made and LED  on the door panel will illuminate. At this moment, the apartment's monitor(s) receive(s) the call.

In systems with two access doors, the other door panel will automatically disconnect; if another visitor attempts to call, a number of telephone tones will indicate that the system is busy and LED  on the door panel will illuminate.

Upon receiving the call, the image will appear on the screen of the master monitor (and slave 1, if it exists) without the visitor knowing and icon  displayed on the screen will blink green. To view the image from slave monitors 2 or 3, press one of the buttons of the monitor to display the image. If the call is not answered within 45 seconds, door panel LED  will turn off and the system will become free.


To establish communication, press the button below off-the-hook icon  shown on the screen. Door panel LED  will illuminate. Communication will last for 90 seconds or until the button below on-the-hook icon  shown on the screen is pressed. When communication has ended, door panel LED  will turn off and the system will become free.

To open door  or activate auxiliary output  of the door panel, press the button below the corresponding icon displayed on the screen. A single press activates the lock release or auxiliary output for 3 seconds, and LED  on the door panel illuminates.

Detailed operation of the monitor is described on pp. 5-21.

The owner of the apartment can activate the lock release by holding the proximity key over the reader. If the proximity key is held for three seconds, the auxiliary relay output will be activated.

DESCRIPTION

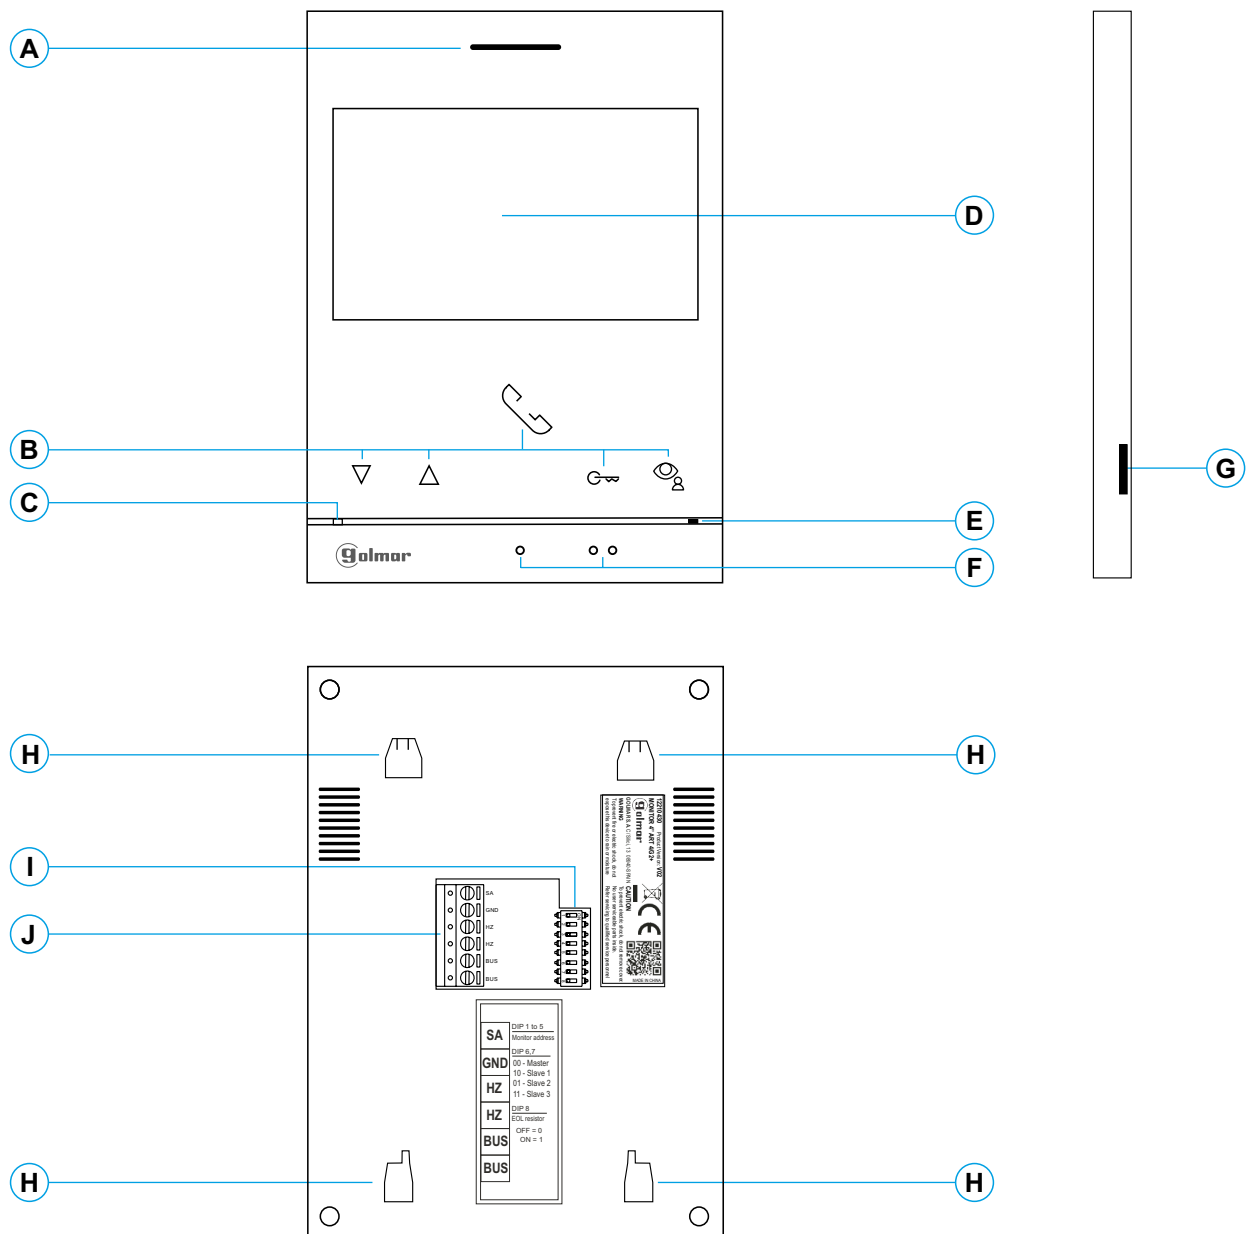

A. Speaker.

B. Function buttons to access and select menu functions.

The function of each button is shown on the monitor screen with an icon located just above each button (see pp. 5-21).

C. Monitor status LED:

Fixed yellow: In standby without notification.

Fixed red: 'Do not disturb' mode activated.

Blinking red:

- Photo/video pending viewing.
- 'Automatic door opening' enabled.

D. 4.3" TFT colour screen.

E. Microphone.

F. Raised dots for the visually impaired.

In call/communication:

- Above this raised dot is the 'Start/end communication' button.

- Above this raised dot is the 'Door opening' button.

G. Slot for MicroSD card (not included).

Type: MicroSD Class 10 from 4GB to 128GB.

H. Wall mounting connector fixing (x4).

I. Configuration switches.

J. Installation terminals.

INSTALLATION


Avoid dusty or smoky environments or locations near sources of heat.

For proper installation, use the template supplied with the product.

1. Position the top of the template at a height of 1.65m.
2. If you are going to use an embedding box to pass the wiring through, make sure that it is in line with the holes corresponding to the box model chosen and fix the connector. If you prefer to fix the connector directly to the wall, make four 6mm holes at the points indicated (A), insert the wall plugs supplied and screw in the connector.
3. Pass the installation wires through the middle hole and connect them to the removable terminals as shown in the wiring diagrams. Before connecting the removable terminals to the monitor, configure the switch as indicated below.
4. Connect the removable terminals to the monitor and place the monitor in front of the connector, making sure the fixings line up. Move the monitor downwards to secure it.

INSTALLATION TERMINALS (J)

For ease of installation, the installation terminals are removable and supplied in a separate bag. Once the terminals are wired, place them in position.

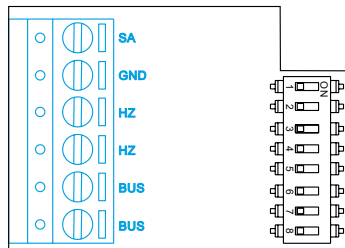

BUS, BUS: Communication BUS (non-polarised).

SA, GND: Auxiliary call repeater output (max 50mA/12V), relay SAR-12/24.

HZ, HZ: Apartment front door button input:


Connect only on the master monitor. The signal received is then transmitted to the slave monitors in the same apartment through the BUS.

CONFIGURATION SWITCHES (I)

Switches 1 to 5.





These assign the address of the corresponding monitor to its call button on the door panel. Switches 3 to 5 must remain in the OFF position.

*** Note: The ART 4/G2+ monitor mounted with the SOUL S5110/ART 4 1P KIT only allows 1 apartment.**

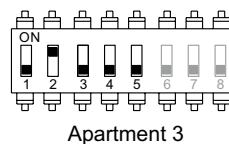

Switches 6 and 7.

These define whether the monitor is master or slave. Each apartment must have one master monitor, and only one.

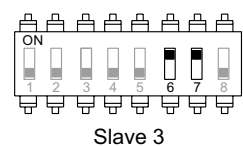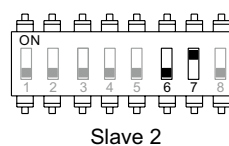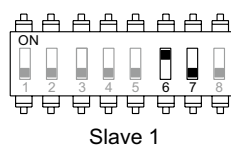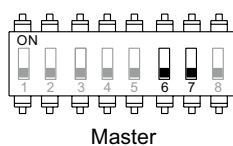

Switch 8.

This activates the end-of-line resistance in the ON position. Activate it in monitors where the bus cable ends. Deactivate it only in intermediate monitors.

MAIN MENU



If the device is in standby (screen switched off), to access the main menu, press any of the buttons of the monitor. Then press the button located just below the corresponding icon. The device will return to standby mode after 10 seconds without activity.



Press the button below icon  to make changes to the system settings (see pp. 6-9).



Press the button below icon  to enable or disable the 'Do not disturb' function: If the monitor is in 'Do not disturb' mode, the status LED will illuminate (red) and the ringtone on the monitor will not sound when a call is received.

Press the button below icon  for 3 seconds to access the settings screen and set a period of time for 'Do not disturb' mode and 'automatic door opening' (see p. 10).



'Do not disturb' mode (disabled).



'Do not disturb' mode (enabled).



Press the button below icon  to access the menu of the intercom between other monitors in the same apartment or other apartments (see pp. 17-18).



Press the button below icon  to display the list of images recorded in the memory of the device. If a MicroSD card is inserted in the monitor, images/videos will be recorded on the MicroSD card (see p. 11 and pp. 19-21).



There are no images/videos pending viewing.



There are images/videos pending viewing.




Indicates that the inserted MicroSD card must be formatted from the monitor. Access this function by pressing the button below icon  to access the MicroSD card formatting menu, then press the button below icon  to start formatting the MicroSD card. To exit without formatting, press the button below icon .



Press the button below icon  to display the image from the main door panel. Note: This enables the door panel camera to be changed, the audio on the corresponding door panel to be activated and the door to be opened (see p. 12).

SETTINGS MENU

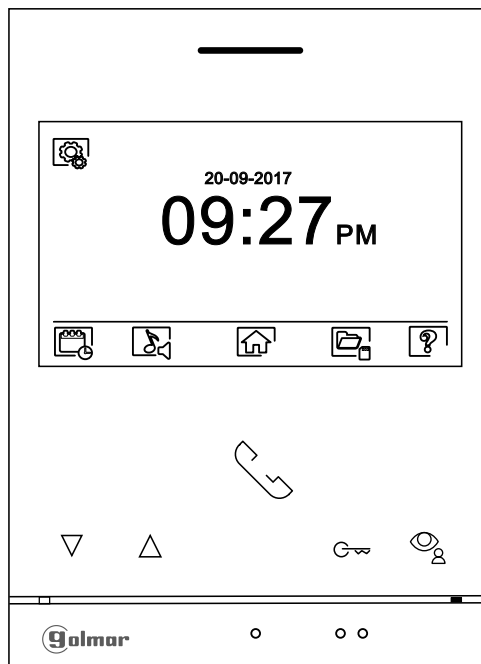


Returning to the main menu: Press the button below icon  to return to the main menu.




Setting the monitor's date and time, as well as the presentation format: Press the button below icon  to access the settings screen. Go to the option to be modified by pressing the buttons below corresponding icons  / , then select the option to modify by pressing the button below icon .

Settings menu

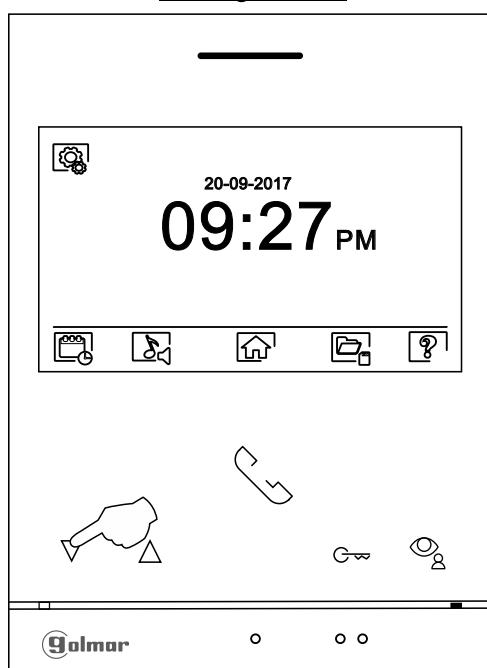

Option selection screen

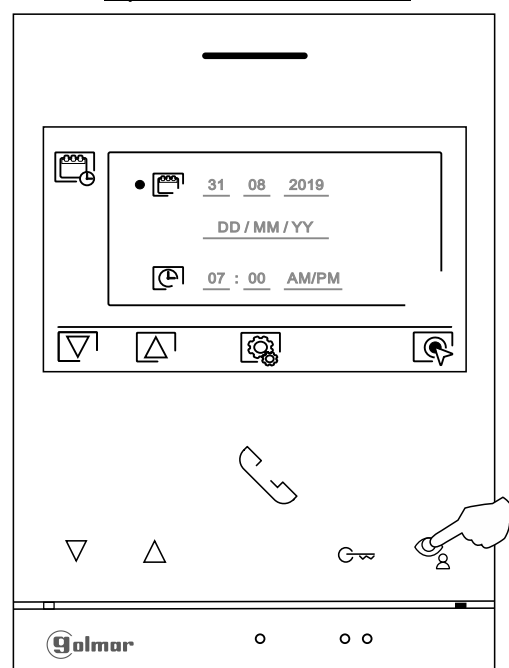


Continued overleaf

Continued from previous page.


SETTINGS MENU

Select the field to be modified by pressing the buttons below corresponding icons ▽ / ▲, then press the buttons below corresponding icons + / = to adjust the value/format. Validate the changes made by pressing the button below icon ◀. After setting the desired values, press the button below icon ⚙ to return to the settings menu.

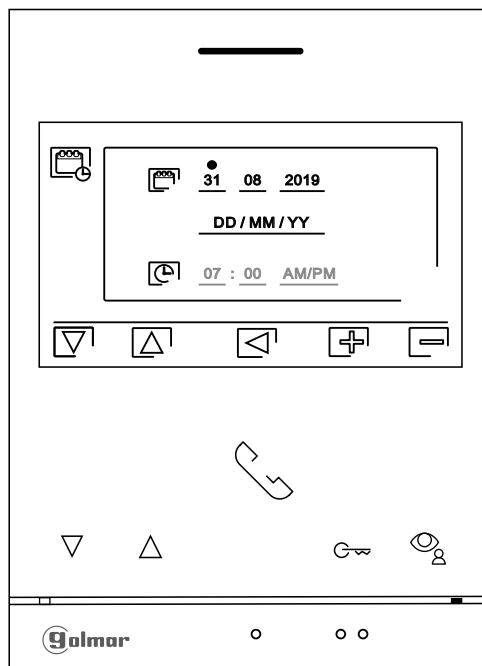


Selecting the melody and call volume: Press the button below icon  to access the settings screen. In order to identify the origin of the calls when you are not in front of the monitor, select different melodies and the desired call volume. Go to the option to be modified by pressing the buttons below corresponding icons ▽ / ▲, then press the buttons below corresponding icons + / = to select the melodies and desired call volume. Press the button below icon  to return to the settings menu.

Settings menu

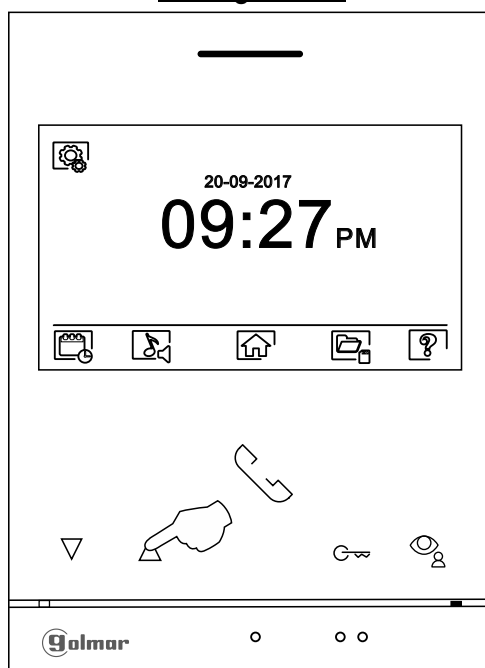

Option selection screen

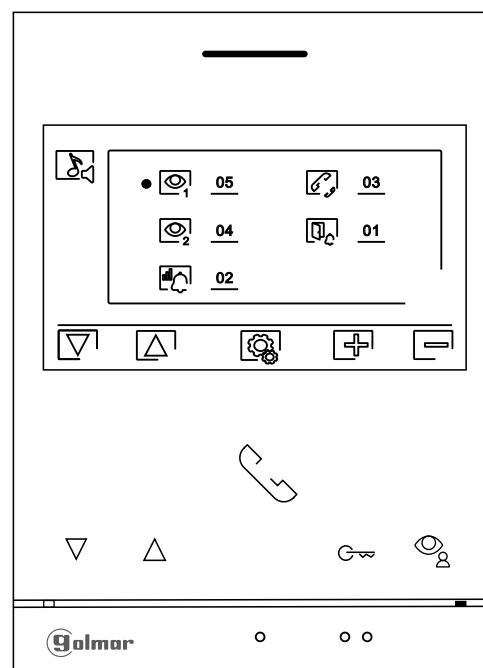

SETTINGS MENU




Automatic deletion of images/videos, internal memory and MicroSD card: Press the button below icon to access the selection screen. In some countries, the law does not permit the storage of images or videos for more than 30 days after recording. The automatic deletion function performs this task for you. You can disable this function if your country's legislation does not require it, or under your responsibility.

If you have not inserted a MicroSD card into your monitor, only still images can be recorded in the internal memory of the monitor (up to 100). If you have inserted one, the images and videos will always be recorded on the card, and the images in the internal memory cannot be displayed until you copy them to the card.


From this menu, you can select delete contents, copy from the internal memory to the MicroSD card and format the card. Any of these actions (copy/delete) will require confirmation.

Press the button below icon to return to the settings menu.

Settings menu

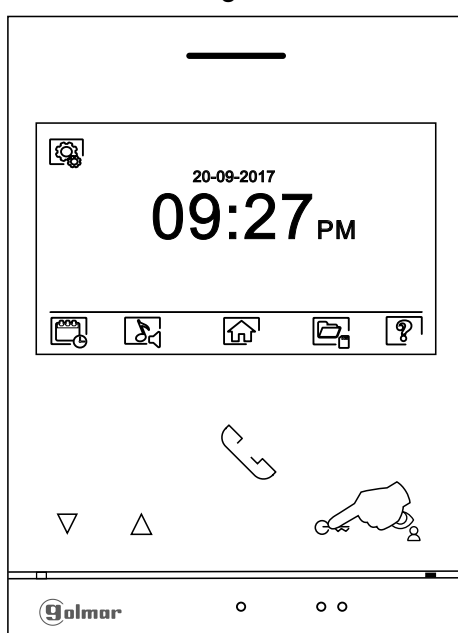

Option selection screen

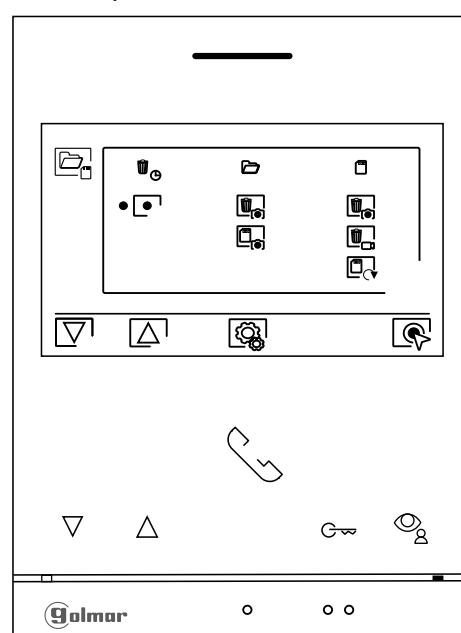

In some countries, the law does not permit the storage of images or videos for more than 30 days after recording. The automatic deletion function performs this task for you. You can disable this function if your country's legislation does not require it, or under your responsibility. To disable this function, go to the option to be modified by pressing the buttons below corresponding icons / , then press the button below icon to enable/disable the automatic deletion function. Press the button below icon to return to the settings menu.



If you have inserted a MicroSD card into the monitor, you can copy previously recorded still images on the monitor to the new MicroSD card and then delete the still images from the internal memory of the monitor. Press the button below icon to return to the settings menu.



To copy the still images recorded on the monitor to the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons / . Press the button below icon to access the menu for copying images to the card, then press the button below icon to perform this function. To exit without copying the images, press the button below icon .



To delete the still images recorded in the internal memory of the monitor, go to the option with icon by pressing the buttons below corresponding icons / . Press the button below icon to access the image deletion menu, then press the button below icon to perform this function. To exit without deleting the images, press the button below icon .

Continued from previous page.

SETTINGS MENU



If you have inserted a MicroSD card into the monitor, you can delete the still images and videos recorded on the MicroSD card. The monitor has the option to format the MicroSD card. Press the button below icon to return to the settings menu.



To delete the still images recorded on the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons /. Press the button below icon to access the still image deletion menu, then press the button below icon to perform this function. To exit without deleting the images, press the button below icon .



To delete the videos recorded on the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons /. Press the button below icon to access the video deletion menu, then press the button below icon to perform this function. To exit without deleting videos, press the button below icon .



To format the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons /. Press the button below icon to access the card formatting menu, then press the button below icon to perform this function. To exit without formatting the card, press the button below icon .




The 'About' screen provides information about the monitor, such as the software version, address and whether it is master or slave (M, S1, S2 or S3).

It enables updated versions of the manual to be downloaded to a mobile or tablet, for which it is necessary to have a QR code scanner app installed.


It enables the monitor to be restored to factory settings, such as melodies, call volume, etc.

Press the button below icon to return to the settings menu.

Settings menu

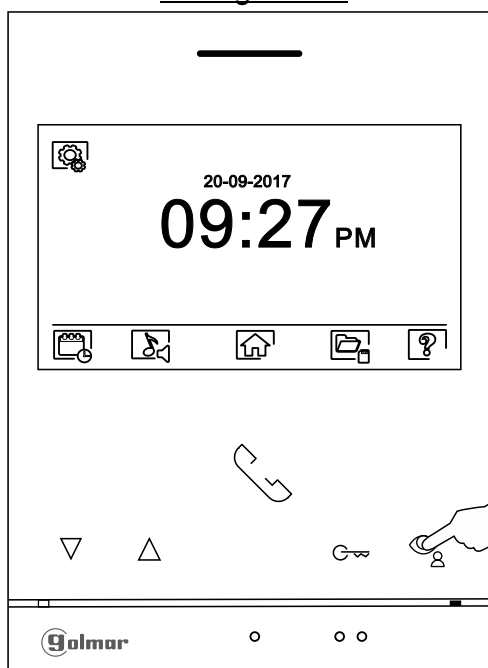

'About' screen

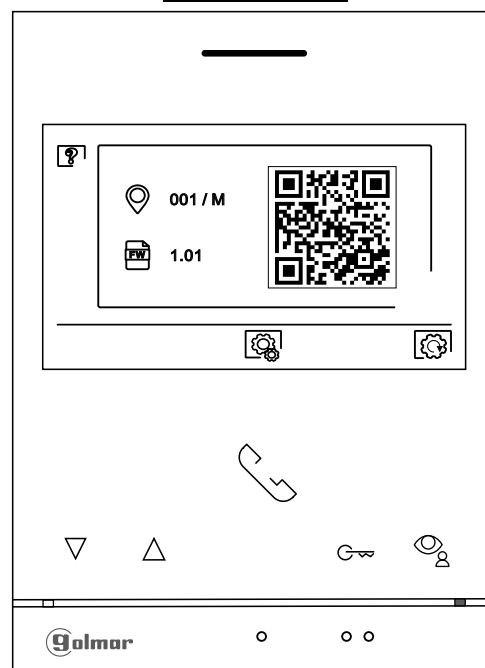

To restore the monitor to factory settings, press the button below icon to access the factory reset menu, then press the button below icon to perform this function. Press the button below icon to return to the 'About' screen. Press the button below icon to return to the settings menu.



Press the button below icon to return to the settings menu.

SETTINGS SCREEN: 'Do not disturb' / 'Automatic door opening' and 'Enable intercom'.




'Do not disturb' / 'Automatic door opening' and 'Enable/disable intercom' settings: Access the main menu as described on p. 5. Then press the button below icon  for 3 seconds to access the settings screen and select the option to be modified.

You can set a period of time during which the monitor will not sound when receiving calls. To do so, enable the timer function and choose the time period. From the main menu, you can enable and disable the 'Do not disturb' function regardless of the timer status.


You can set a period of time for automatic door opening when receiving a call, activate the timer function and choose the period of time (see pp. 22-23 to activate 'Automatic door opening' mode).

It enables the intercom function between apartments to be enabled/disabled.

Main menu

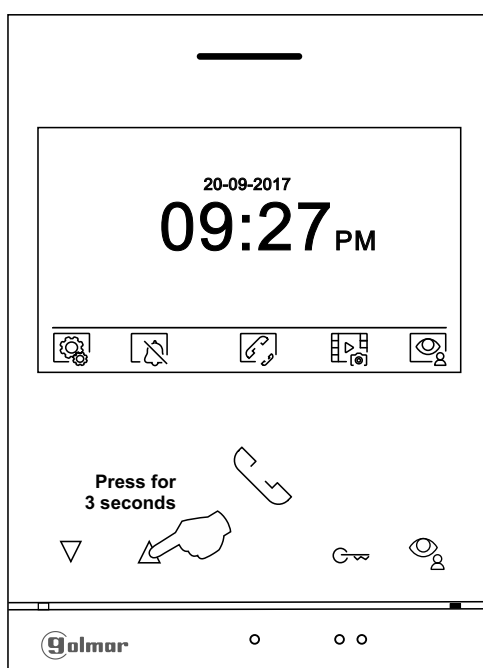

Option selection screen

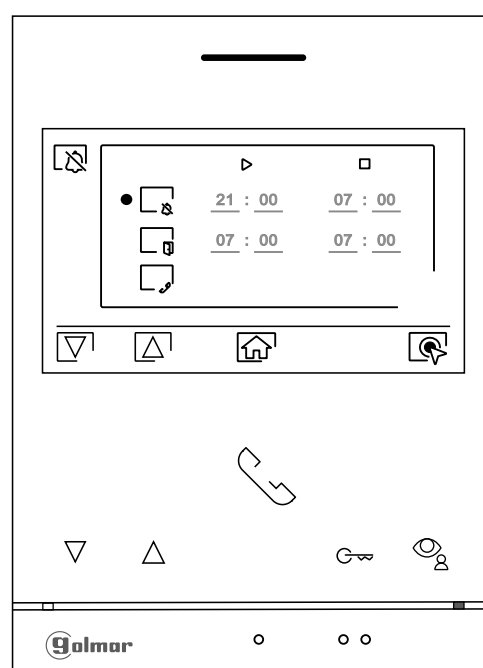

To set a period of time in which the monitor will not sound when receiving calls, go to the option with icon  by pressing the buttons below corresponding icons  /  and select the option to be modified by pressing the button below icon . Then select the field to be modified by pressing corresponding buttons  / , modify the desired period of time by pressing the buttons below corresponding icons  /  and validate the changes made by pressing the button below icon . Press the button below icon  to return to the main menu.



To set a period of time for the automatic opening of door  (by default after 3 seconds of receiving a call from the door panel), go to the option with icon  by pressing the buttons below corresponding icons  /  and select the option by pressing the button below icon . Then you can set a period of time for opening the door, select the field to be modified by pressing corresponding buttons  / , modify the desired period of time by pressing the buttons below corresponding icons  / and validate the changes made by pressing the button below icon . Press the button below icon to return to the settings menu.

(This function is disabled by default. To enable it, see pp. 22-23).



To enable/disable the intercom function between apartments, go to the option with icon  by pressing the buttons below corresponding icons  / . Then press the button below icon  to enable/disable this function. Press the button below icon to return to the main menu. **(This function is disabled by default).**

Note: The ART 4/G2+ monitor mounted with the SOUL S5110/ART 4 1P KIT does not allow this function.

Continued from previous page.




'RECORDING MODE' SETTINGS SCREEN




Recording mode settings: Access the recordings menu as described on p. 5. Then press the button below icon to access the settings screen.

Press the buttons below icons / to select image recording mode during call reception: no recording , still image or video . The latter is only available when a MicroSD card is inserted. To return to the recordings menu, press the button below icon . Then, to return to the main menu, press the button below icon .

Recordings menu

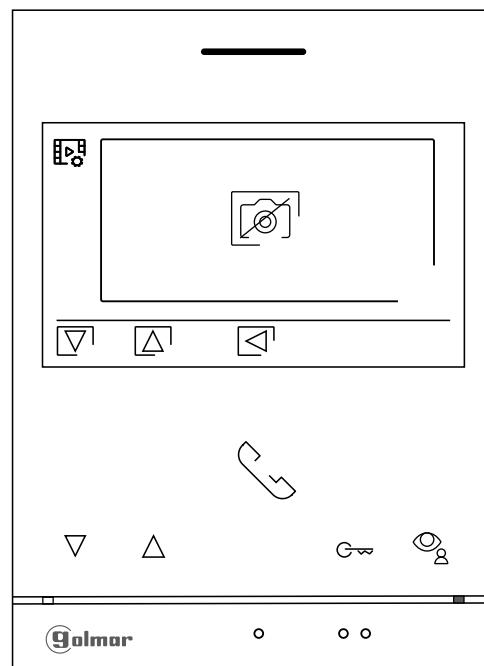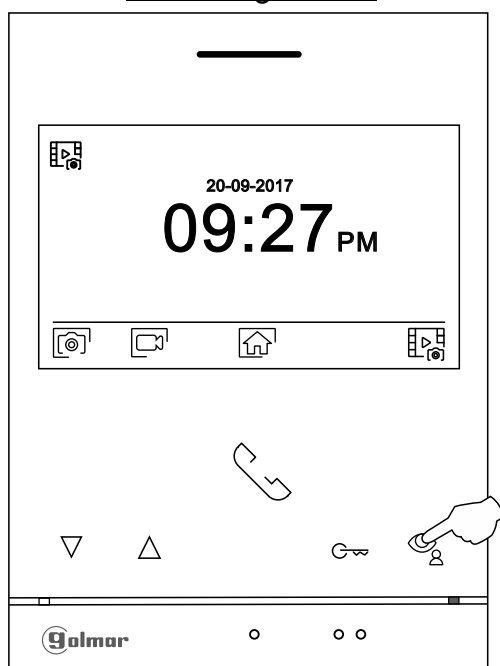

DOOR PANEL CALL SCREEN

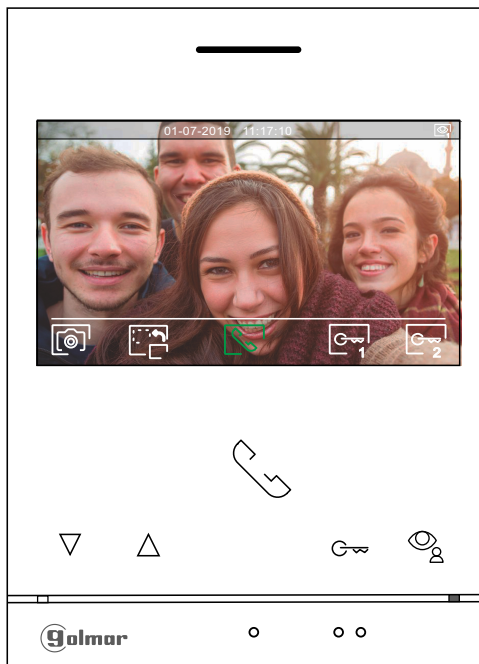

This screen is displayed when receiving a call or pressing the button below icon  of the main menu. During a call, icon  displayed on the screen will blink green (during the call process). In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed (door panel 1, door panel 2, camera 1 or camera 2). The call has a duration of 45 seconds.



Press the button below icon  for 3 seconds to access the image and monitor in communication volume settings menu. Select the option to be modified by pressing the buttons below corresponding icons /, change to the desired level by pressing the buttons below corresponding icons / and validate the changes made by pressing the button below icon , (see pp. 14-16).



Press the button below icon  to change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see pp. 22-23). It is possible to make the change during display, call and communication processes.



Press the button below icon / to start or end audio communication with the door panel displayed respectively. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.



Press the button below icon  to activate the lock release (or device connected to the CV output of the door panel) for 3 seconds (factory setting, programmable by the installer; see pp. 22-23).




Press the button below icon  to activate the lock release (or device connected to the relay output of the door panel) for 3 seconds (factory setting, programmable by the installer; see pp. 22-23).



A few seconds after receiving a call, it automatically takes a photograph. In the top left of the screen, icon  is displayed. Press the button below icon  to take a photograph.

If a MicroSD card is inserted, a 15-second video automatically starts recording a few seconds after receiving the call. In the top left of the screen, icon  is displayed (see p. 11 to configure video recording mode). Then a short 1-second press on the button below icon  will take a photograph or a long 2-second press will record a video.

COMMUNICATION SCREEN

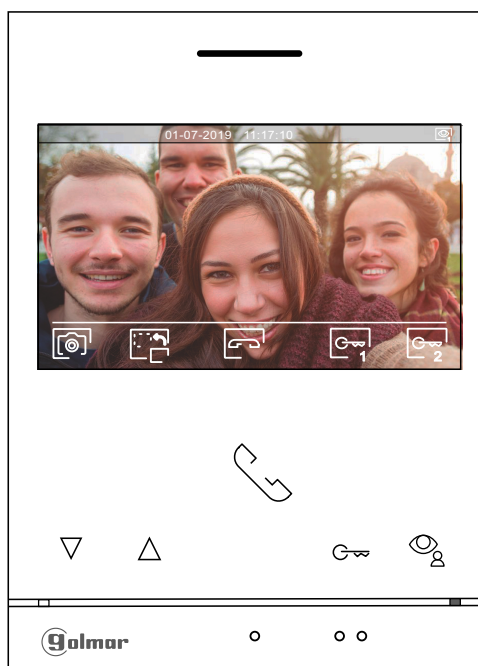

This screen is displayed during a communication process. In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed (door panel 1, door panel 2, camera 1 or camera 2).



Press the button below icon  for 3 seconds to access the image and monitor in communication volume settings menu. Select the option to be modified by pressing the buttons below corresponding icons  / , change to the desired level by pressing the buttons below corresponding icons  and  and validate the changes made by pressing the button below icon  (see pp. 14-16).



Press the button below icon  to change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see pp. 22-23). This enables the door panel camera to be changed, the audio of the corresponding door panel to be activated and the door to be opened.



Press the button below icon  /  to start or end audio communication with the door panel displayed respectively. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.



Press the button below icon  to activate the lock release (or device connected to the CV output of the door panel) for 3 seconds (factory setting, programmable by the installer; see pp. 22-23).



Press the button below icon  to activate the lock release (or device connected to the relay output of the door panel) for 3 seconds (factory setting, programmable by the installer; see pp. 22-23).




Press the button below icon  to take a photograph. In the top left of the screen, icon  is displayed.


Note: If a MicroSD card is inserted, a 15-second video automatically starts recording a few seconds after **receiving the call**. In the top left of the screen, icon  is displayed (see p. 11 to configure video recording mode). Then a short 1-second press on the button below icon  will take a photograph or a long 2-second press will record a video.

IMAGE AND COMMUNICATION SETTINGS

During a call/communication process, press the button below icon  for 3 seconds to access the image and monitor in communication volume settings menu.

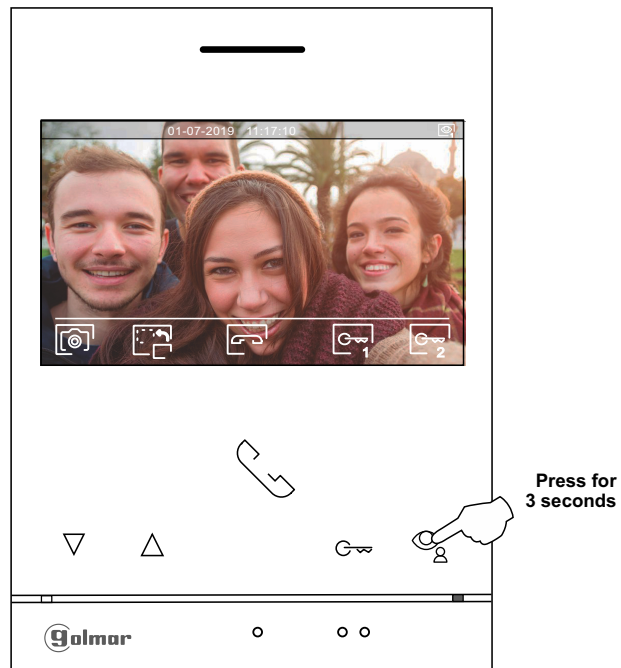


The following brightness control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons . To access the contrast control, press the button below icon . To exit the image and communication settings menu, press the button below icon .

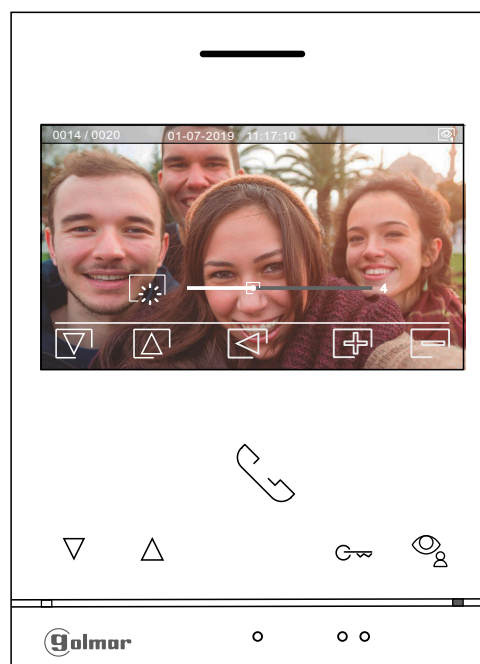


Continued from previous page.

IMAGE AND COMMUNICATION SETTINGS

The following contrast control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the colour control, press the button below icon . To exit the image and communication settings menu, press the button below icon .

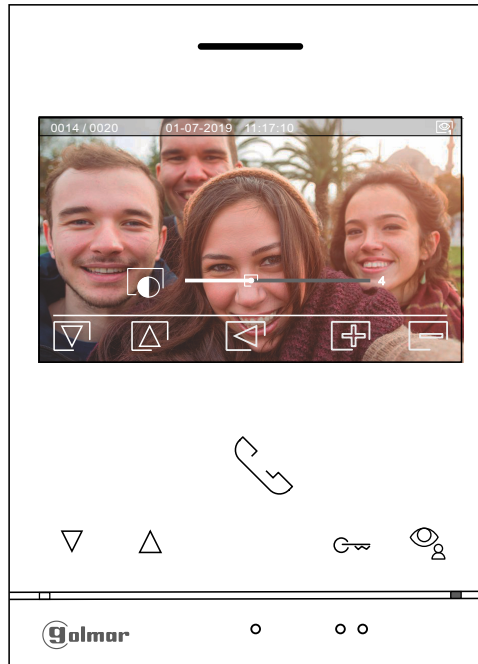

The following colour control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the monitor communication volume control, press the button below icon . To exit the image and communication settings menu, press the button below icon .

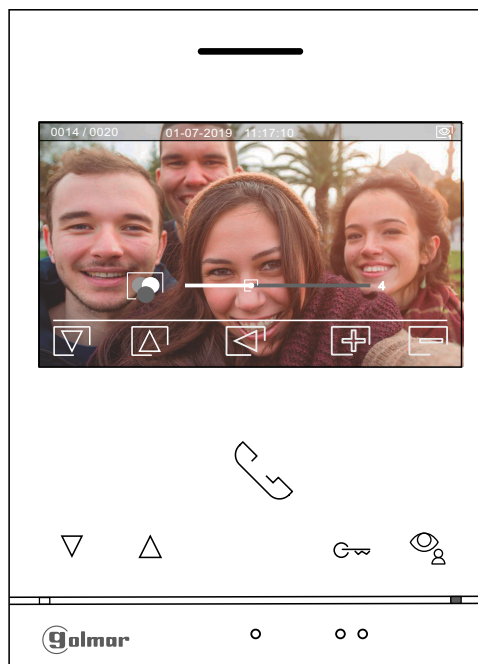


Continued overleaf

Continued from previous page.


IMAGE AND COMMUNICATION SETTINGS

The following monitor communication volume control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To return to the brightness control (carousel mode), press the button below icon .

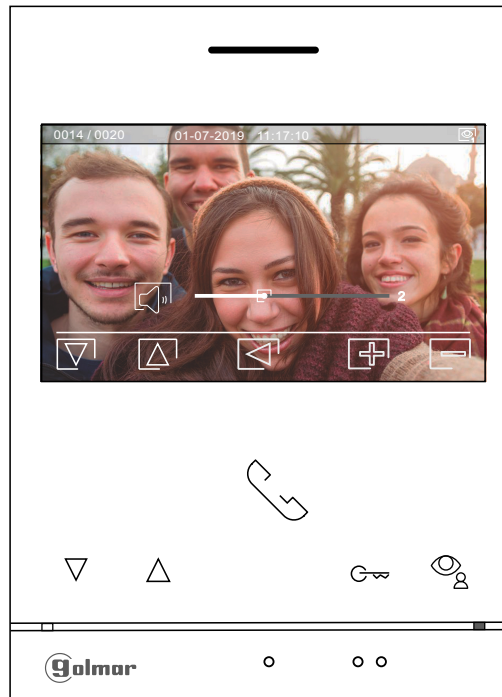

To exit the image and communication settings menu, press the button below icon .

Communication screen

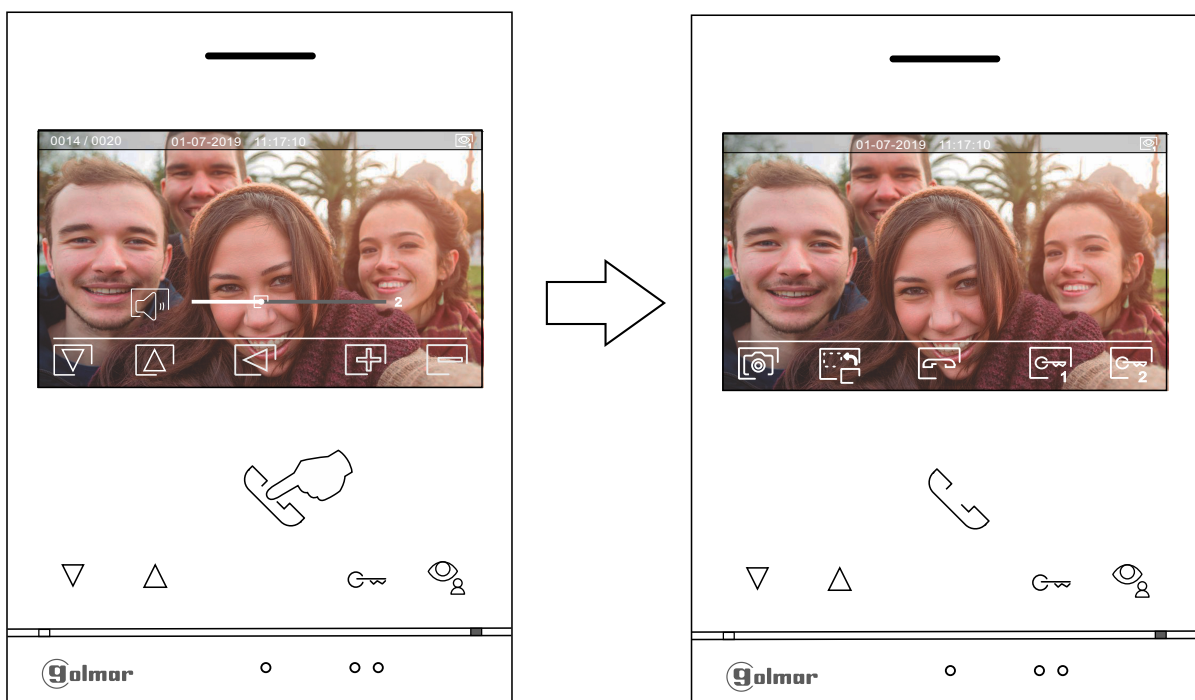

INTERCOM MENU

Access the intercom menu as described on p. 5. From this menu, you can contact another monitor(s) in your apartment (internal intercom) or other apartments (external intercom). For external intercom, the monitor(s) of the apartment that makes the call and the monitor(s) of the apartment that receives the call must have the intercom function enabled (see p. 10).


Select option  or  to perform an internal or external intercom call.

If during an intercom process with another monitor a call is received from the door panel, the intercom process will be terminated, and the door panel call will be received on the corresponding monitor.


Press the button below icon  to return to the main menu.



To make an internal intercom call (to another monitor(s) in the same apartment), go to the option with icon  by pressing the buttons below corresponding icons / and press the button below icon  to access the monitor selection menu (in the same apartment). Note: You will find information about the monitor itself with the address, Master, Slave 1 to Slave 3 of the monitor in the 'About' menu, (see p. 9).

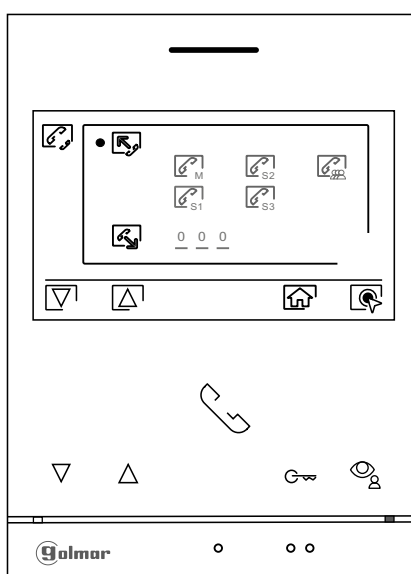

Then press the buttons below icons / to select the monitor to be called and press the button below icon  to make the call. The monitor making the call will play a confirmation melody and indicate with a blink the code of the apartment called. To cancel the call, press the button below icon . Press the button below icon  to return to the intercom menu. The monitor receiving the call will play a confirmation melody showing on screen with a blink the monitor making the call. Press the button below icon  to establish communication and press the button below icon  to end communication.

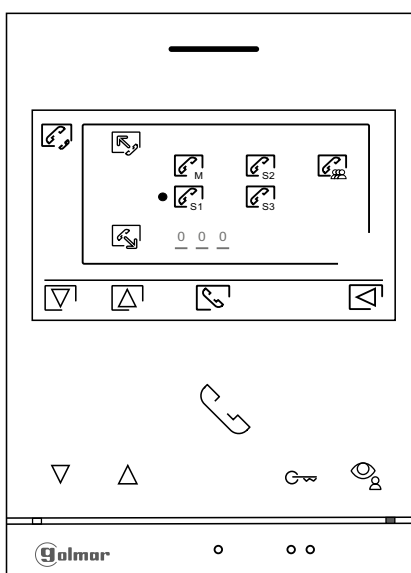

Continued overleaf


Continued from previous page.

INTERCOM MENU




To make an external intercom call (to other apartments), go to the option with icon by pressing the buttons below corresponding icons / and press the button below icon to access the code selection menu of the apartment with which you wish to communicate. (Intercom calls to other apartments are disabled by default, see p. 10).

Note: The ART 4/G2+ monitor mounted with the SOUL S5110/ART 4 1P KIT does not allow this function.

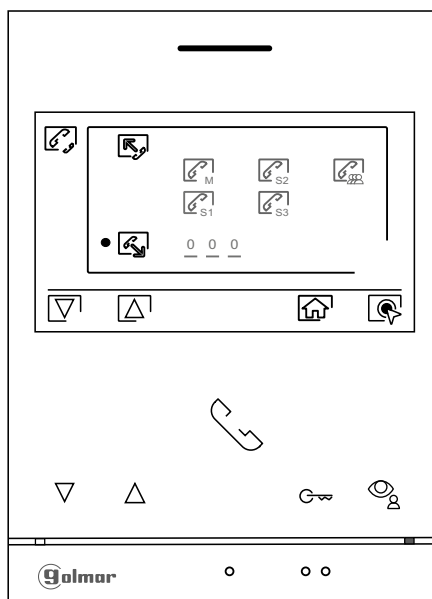


Press the button below icon to select the apartment code field to be modified, then press the buttons below icons / to modify with the apartment code to be called and press the button below icon to make the call. The monitor making the call will play a confirmation melody and indicate with a blink the code of the apartment called. To cancel the call, press the button below icon . Press the button below icon to return to the intercom menu. The apartment receiving the call will play a confirmation melody showing on screen with a blink the apartment making the call. Press the button below icon to establish communication and press the button below icon to end communication.

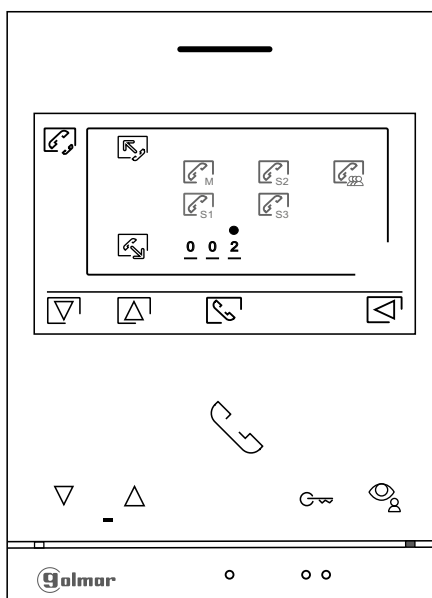


RECORDINGS MENU

Access the recordings menu as described on p. 5. This menu displays the list of images saved in the memory of the device. If a MicroSD card is inserted in the monitor, images/videos will be recorded on the MicroSD card. Press the button below icon  to access the list of videos saved on the MicroSD card. To return to the recordings menu, press the button below icon . To access the list of images, press the button below icon . In the list of recorded images/videos, those that have not been viewed are highlighted in white. There are 10 recordings per page and the number of pages is shown in the bottom right of the screen. Press the buttons below icons  /  to scroll through the images/videos shown on the page and press the button below icon  to go to the next page (in carousel mode). On the screen containing the list of images, press the button under icon  to display the selected image.

Recordings menu

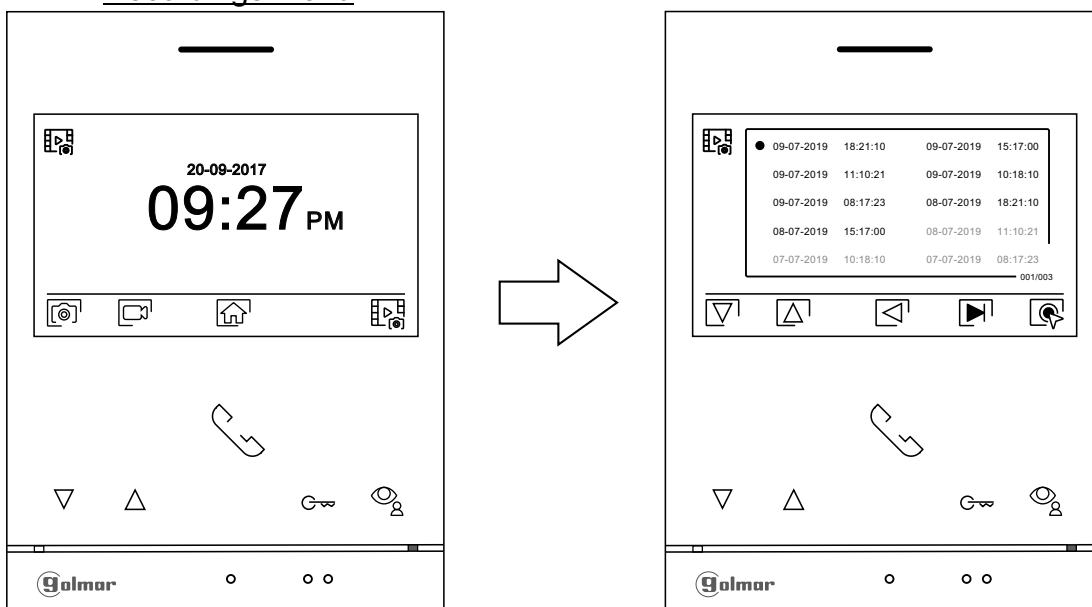

The image is then displayed in full screen, the number of recordings is indicated in the top left and the recording source is shown on the right (door panel 1, door panel 2, camera 1 or camera 2). Press the buttons below icons  /  to show the next or previous recording respectively. To delete the recording shown on screen, press the button below icon  and then from the delete menu confirm the deletion of the recording by pressing the button below icon  or press the button below icon  to exit without deleting. To return to the list of images, press the button below icon .

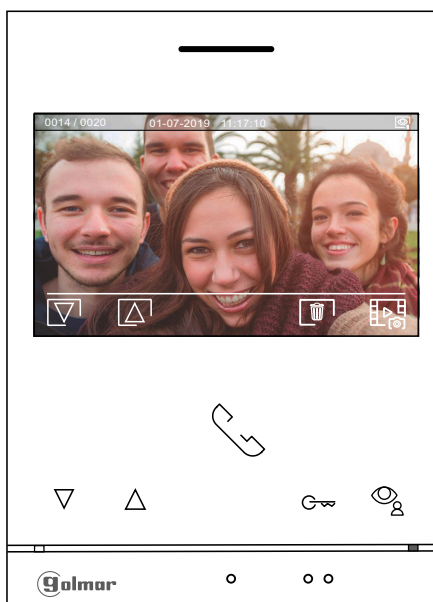


Continued overleaf


Continued from previous page.

RECORDINGS MENU

If a MicroSD card is inserted in the monitor, press the button below icon  to access the list of videos. In the list of recorded videos, those that have not been viewed are highlighted in white. There are 10 recordings per page and the number of pages is shown in the bottom right of the screen. Press the buttons below icons  /  to scroll through the videos on the page shown and press the button below icon  to go to the next page (in carousel mode). On the screen containing the list of videos, press the button below icon  to display the video selected.

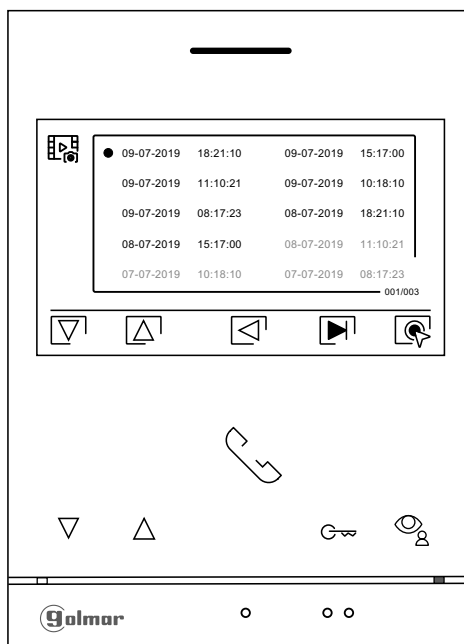

The video is then displayed in full screen, the number of recordings is indicated in the top left and the recording source is shown on the right (door panel 1, door panel 2, camera 1 or camera 2). Press the buttons below icons  /  to show the next or previous recording respectively. To view the video shown on screen, press the button below icon  and, to stop video viewing, press the button below icon . To delete the recording shown on screen, press the button below icon  and then from the 'delete screen' confirm the deletion of the recording by pressing the button below icon or press the button below icon to exit without deleting. To return to the list of videos, press the button below icon .


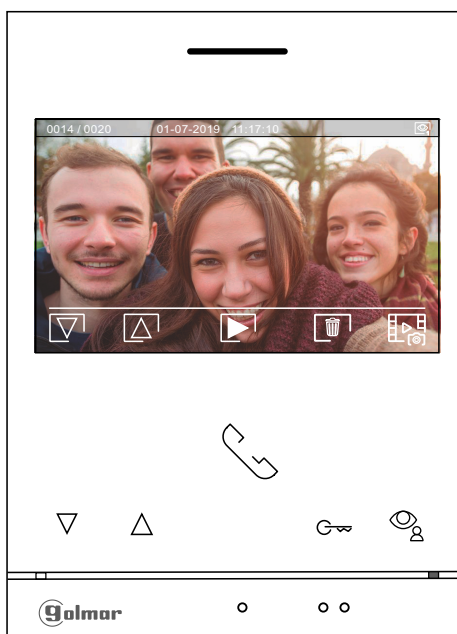


Continued overleaf


Continued from previous page.

RECORDINGS MENU


To return to the recordings menu, press the button below icon . Then, to return to the main menu, press the button below icon .

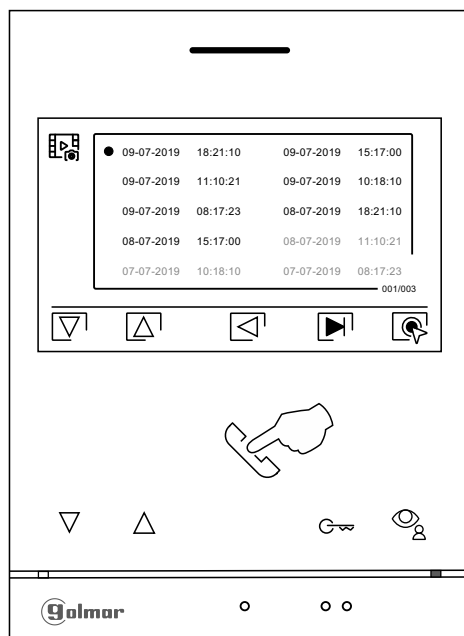

Recordings menu

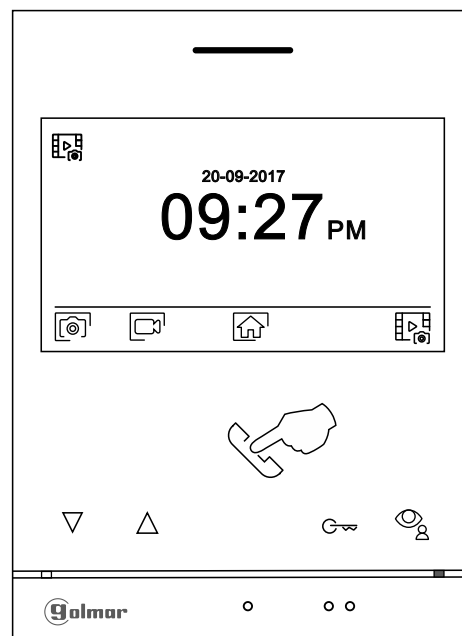


Main menu

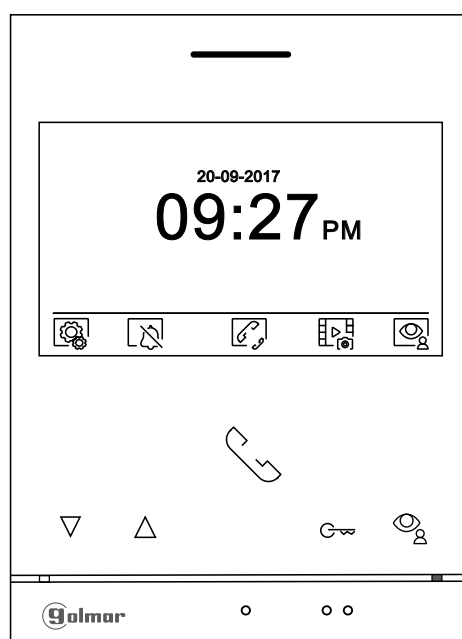

SPECIAL CODES

The enabling of some functions, as well as the modification of some factory parameters, can be carried out by entering special codes. To do so, the installer menu must be accessed from the monitor. Go to the 'About' screen in the Settings menu (p. 9) and press five times on button ▽ of the monitor.

'About' screen

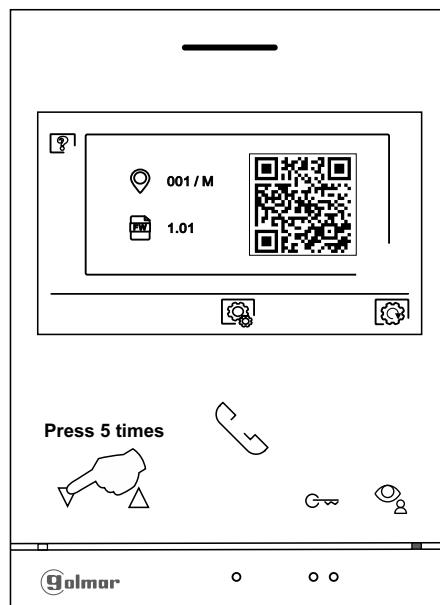


The 'special codes' screen will then be displayed. Press the button below icon ▽ to select the field to be modified and press the buttons below icons + / = to enter the desired code. Once the code has been entered, press the button below icon ✓ to validate it. If the code entered is valid, icon ✓ will be displayed; if it is not, icon ✗ will be shown.

When a door panel parameter is modified, it will take effect in all door panels. Parameters modified on one monitor do not affect the rest of the monitors.

Press the button below icon ◀ to return to the 'About' screen.

'Special codes' screen

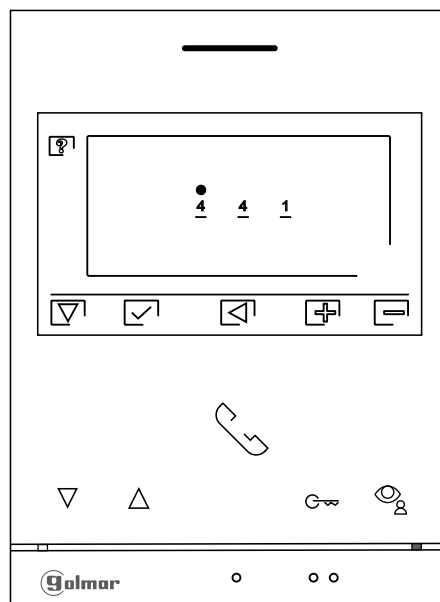

Continued overleaf

Continued from previous page.

SPECIAL CODES

Video sources available on a monitor.

	<u>Visible</u>	<u>Not visible</u>	<u>Factory setting</u>
Door panel 1	111	110	111
Door panel 2	121	120	120
Camera 1	141	140	140
Camera 2	181	180	180

Automatic door opening upon reception of a call on a monitor.

<u>Activated</u>	<u>Deactivated</u>	<u>Factory setting</u>
441	440	440

Activation times of the outputs (Door panel).

		<u>Factory setting</u>
Lock release	From 200 (0.5s) to 219 (10s)	205 (3s)
Relay	From 300 (0.5s) to 319 (10s)	305 (3s)

LED lights for night viewing (Door panel) 'always ON' or 'automatic mode' during a call or communication processes.


		<u>Factory setting</u>
Always ON	451	
Automatic	450	450 (automatic)

Setting the remote activation button (Door panel).

		<u>Factory setting</u>
Delay	From 400 (0.5s) to 419 (10s)	405 (3s)
Output	430 (lock release) o 431 (relay)	430 (lock release)

CLEANING THE MONITOR

- Do not use solvents, detergents or cleaning products that contain acids, vinegar or abrasive components.
- Use a soft damp lint-free cloth with water.
- Always wipe the monitor in the same direction, from top to bottom.
- After cleaning the monitor, remove any moisture with a soft dry lint-free cloth.

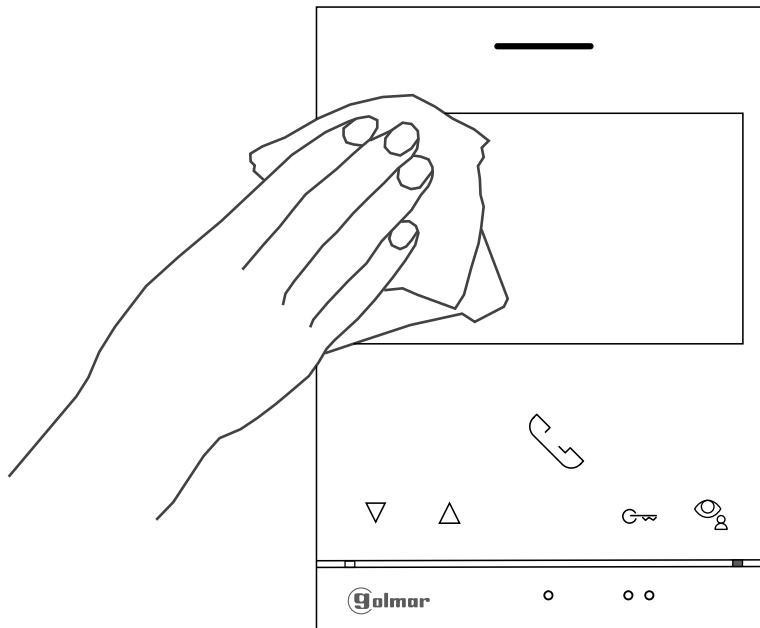

NOTES



golmar@golmar.es
www.golmar.es

GOLMAR S.A.
C/ Silici, 13
08940- Cornellà de Llobregat
SPAIN



Golmar se reserva el derecho a cualquier modificación sin previo aviso.
Golmar se réserve le droit de toute modification sans préavis.
Golmar reserves the right to make any modifications without prior notice.