

### Standard Installation

# ALPINE

## WALL MOUNT DUAL - COLOR TUNING - LED



Flammable



Warning



Low Voltage



Hot Surface

#### TOOLS NEEDED:



- 1/8" Allen Wrench
- Waterproof Wire Connectors
- Mounting Hardware
- iOS Device with Inspiration App

### INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

#### Lighted fixture is HOT!

#### WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

**SAVE THESE INSTRUCTIONS**

### IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS

- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens. Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

### IMPORTANT LISTINGS AND CERTIFICATIONS

- Suitable for wet locations

### ⚠ Device Requirements

⚠ iOS device with installed Inspiration Control System App is required for Bluetooth® Wireless Control.

Bluetooth® version 4.0 or higher required.

#### iOS Devices:

- iPhone - iPhone 4s or newer
- iPad - 3rd Gen iPad or newer  
iPad Mini  
iPad Air
- iPod - iPod Touch 5th Gen or newer

### ⚠ REMOTE WIRING

#### LED Driver

Remote driver installations require inter-connected wiring between the LED and driver (not included). Drivers have specific wiring requirements between these components. Driver manufacturers regularly recommend the following wiring details for such installations:

- Do not exceed 50 foot overall wiring distance using 12 gauge copper wire.

**Failure to comply with specific wiring requirements will void product warranty.**

#### ⚠ DRIVER HOUSING REQUIRED


Please refer to specified remote driver housing documentation for detailed installation instructions.

#### REMOTE DRIVER HOUSINGS:


- PM3DRM - Universal Power Module 3 Dual Remote
- DRM - Dual Remote Wall Mount



PM3DRM

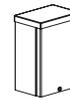

DRM

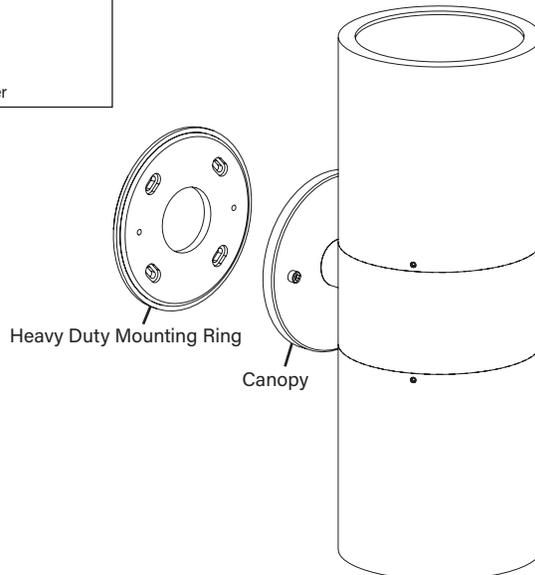

### AP - ALPINE WALL MOUNT DUAL

### IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS


# B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
02/08/2024

REFERENCE NUMBER  
INS-2313-01

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF B-K LIGHTING, INC. AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF B-K LIGHTING, INC. IS STRICTLY FORBIDDEN.

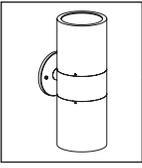


Standard Installation

**⚠️ iOS device (Not Included) with installed B-K Lighting Inspiration Application required for use.**

**Phase 1 - Rough In**

Installation of Back box

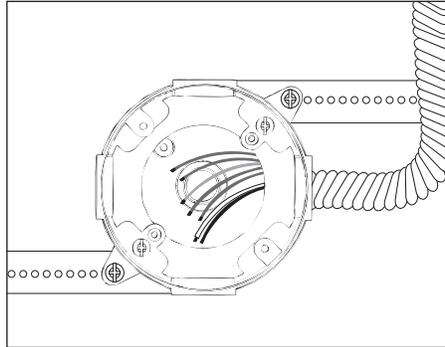


**Additional Info**


- Please follow National and Local electrical codes for your area.
- Suitable for through wire.
- Suitable for installation into combustible materials.
- Rated for 90° C.
- Use appropriate size junction box for specified canopy.
- Junction box, universal mounting ring screws, box mounting hardware and gaskets (not included).

1. Install conduit (not included) to be used with this product.
2. Install junction box (not included) so that front face is flush with finished wall. Seal building envelope as per NEC.
3. Connect box to conduit and pull wires for connections (**See wiring diagram**).


**Phase 2 - Finish Installation of Fixture**

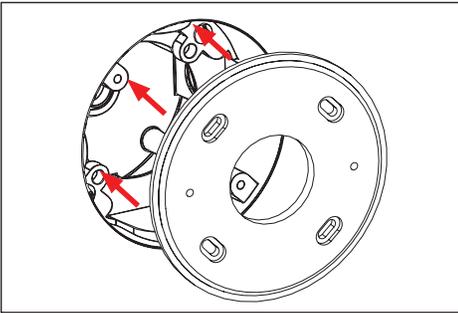

1. Install mounting ring (mounting ring included with fixture) using mounting hardware (not included) onto back box. Align fixture mounting holes to final mounting position.

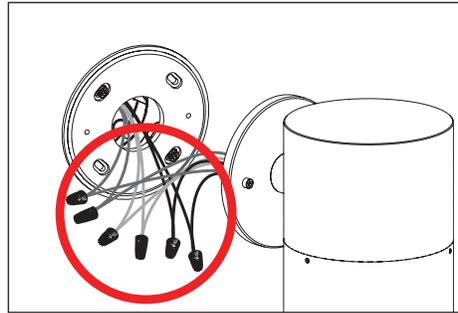


2. Make connections from remote driver and external dimming controls to fixture and module leads using proper wire connectors (not included). Number of wires and connections varies with wiring as per lighting plan. **See wiring diagrams.**

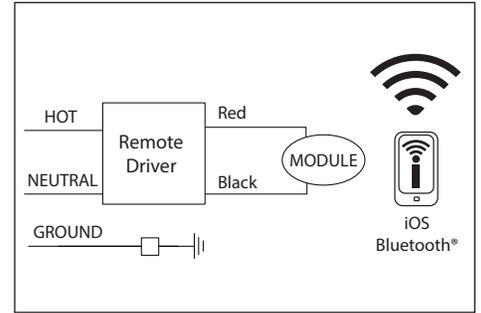

**WIRING DIAGRAM - Wireless Bluetooth® Controls with Inspiration Application on iOS device**

iOS device controls dimming, CCT, Saturation, and Hue using Bluetooth® wireless controls and the application.


**⚠️ iOS device must be within 5ft of fixture for wireless operation.**

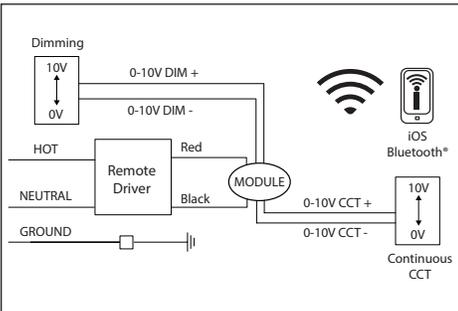

**WIRING DIAGRAM - Hybrid**

Secondary wiring from remote driver connects to fixture leads. 0-10V dimming connects to module. 0-10V Continuous CCT connects to module. iOS device controls Saturation and Hue.


**⚠️ iOS device must be within 5ft of fixture for wireless operation.**

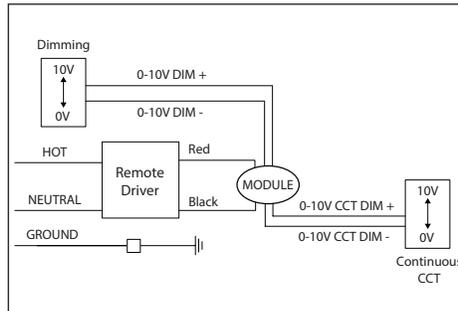

**WIRING DIAGRAM - 0-10V Wired**

Secondary wiring from remote driver connects to fixture leads. 0-10V dimming connects to module. 0-10V Continuous CCT connects to module and controls CCT.


**⚠️ iOS device must be within 5ft of fixture for wireless operation.**

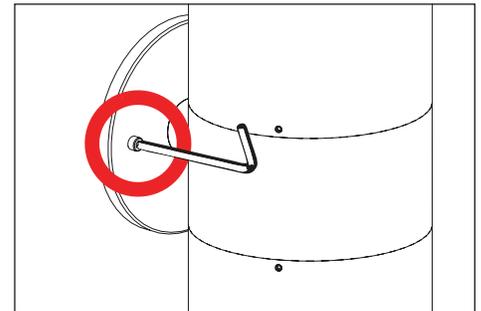

4. Place connections in back box, then mount fixture using two (2) #10-24 screws to installed back box using a 1/8" allen wrench. **Seal building envelope as per NEC. Do not overtighten.**

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE  
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**



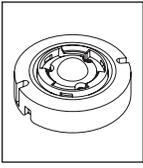

## Module Replacement

# LED MODULE/OPTICS

5-1/2" DIAMETER - SURFACE MOUNT



Flammable



Warning



Low Voltage




Hot Surface


### TOOLS NEEDED:

-  3/32" & .050" Allen Wrench
-  Thermal Paste (Included)
-  Phillips Screwdriver


## To Replace Components

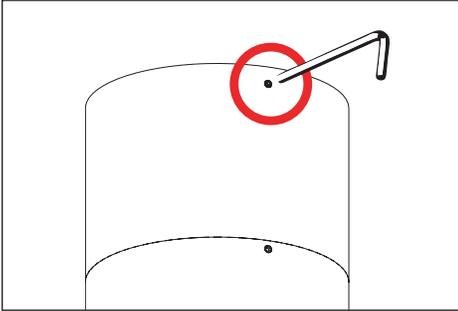

- Loosen three (3) #10-32 set screws on base with a 3/32" allen wrench. Retain screws in fixture. Gently slide down fixture from mounting base to access ACV™ valve. **Do not pull on install tether or leads.**

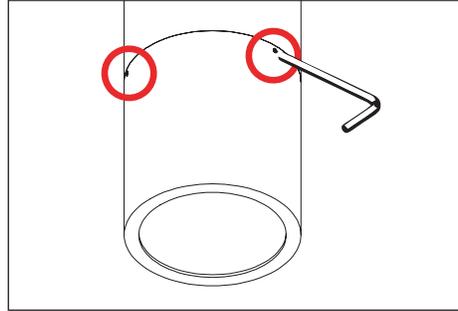


- Loosen three (3) #10-32 stainless steel set screws on cap with a 5/32" allen wrench. Retain screws in cap.

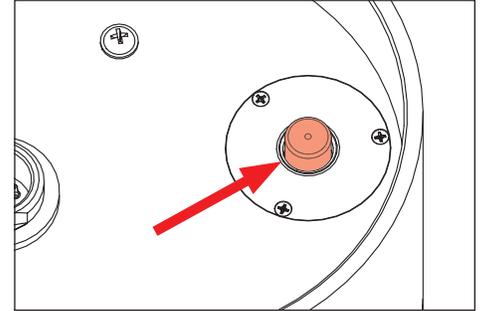


- Press patented Anti-Condensation Valve (ACV™) to release vacuum created inside the fixture during normal use. The valve is spring-loaded, by depressing it, air is allowed to re-enter the chamber and the pressure is then equalized. When the air-pressure equalizes the cap will release from body to allow service.


**⚠ NOTE: Installation tether supplied is designed as an installation aid and NOT a safety cable. Do not add weight to, or drop fixture.**

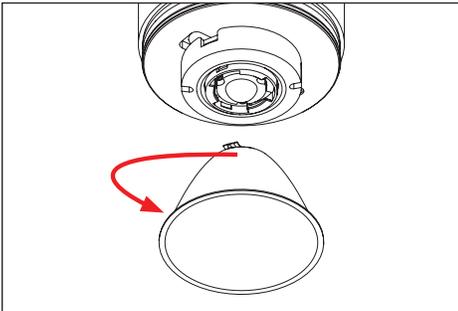


- Gently twist optic to the left so optic tabs are clear of optic holder and carefully pull away.

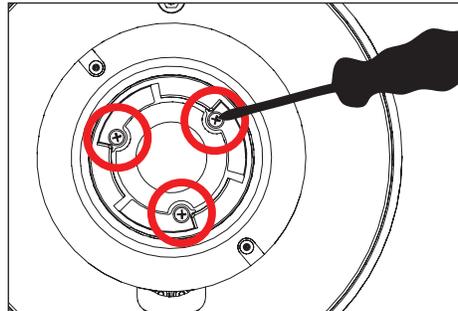


- Loosen, then remove three (3) #2-28 screws from optic module using a phillips screwdriver. Remove optic holder from module.

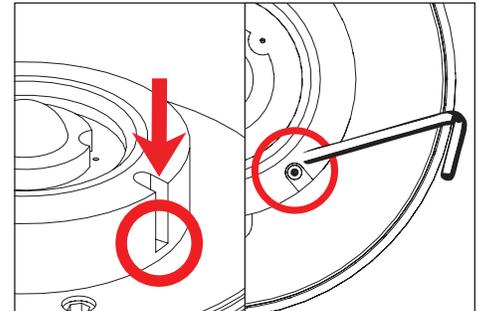


- Loosen and remove two (2) #2-56 screws holding LED module to heatsink using a 0.050" allen wrench.

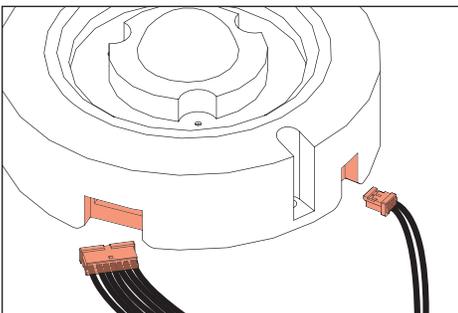

- Carefully remove LED module from heatsink, then disconnect the quick disconnects for the wiring and the control wiring from the fixture to the LED module.

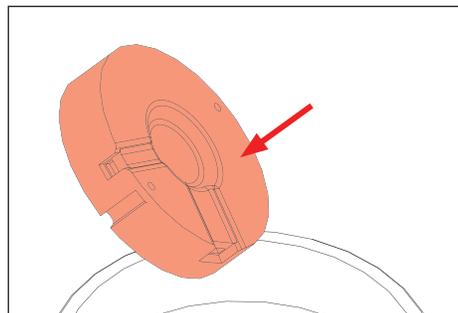

- Spread thin, even layer of thermal paste on back of new LED module.

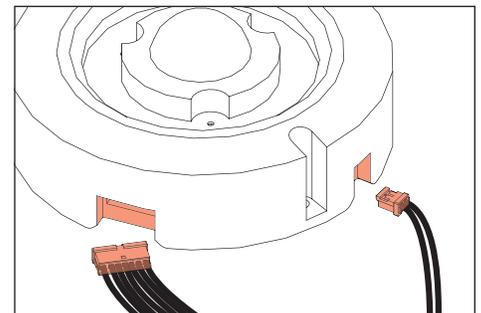

- Connect new LED module to fixture via quick disconnects for wiring and for control wiring.

**⚠ Do not pull on connectors or wiring. Handle with care.**

**IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS**

**B-K LIGHTING**


40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
02/08/2024


REFERENCE NUMBER  
INS-2321-06

# LED MODULE/OPTICS


5-1/2" DIAMETER - SURFACE MOUNT

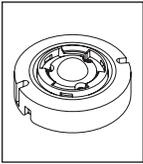


## Module Replacement

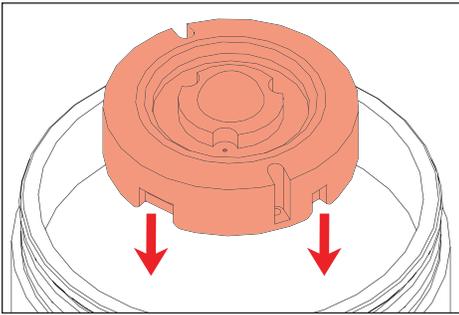


10. Place new LED module onto heatsink, lining up module with holes for screws.

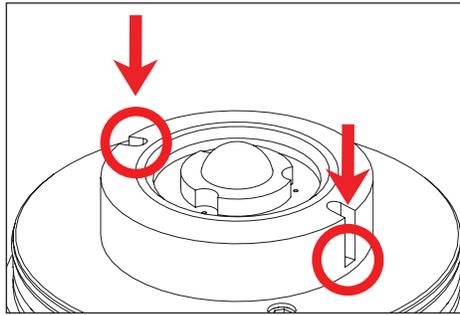


11. Secure LED module to heatsink with two (2) #2-56 screws using a 0.050" allen wrench.

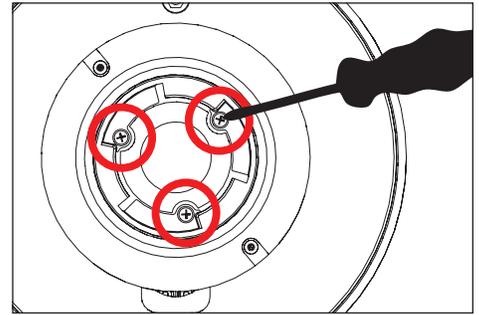


12. Place optic holder back on module. Tighten three (3) #2-28 screws on optic module using a phillips screwdriver to secure.

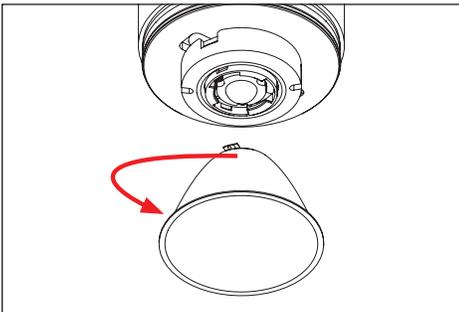

13. Line up optic tabs in the optic holder, then gently twist to the right.

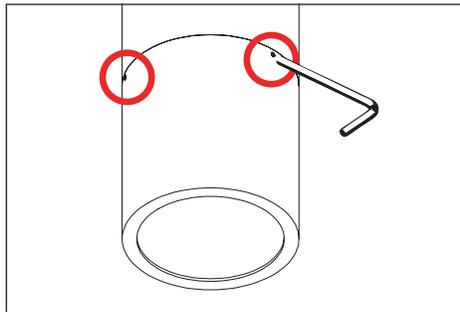

14. Place cap on fixture and tighten three (3) #10-32 set screws with a 3/32" allen wrench. Tighten screws to 1/2 in-lbs. Top of screws should sit flush with fixture cap.

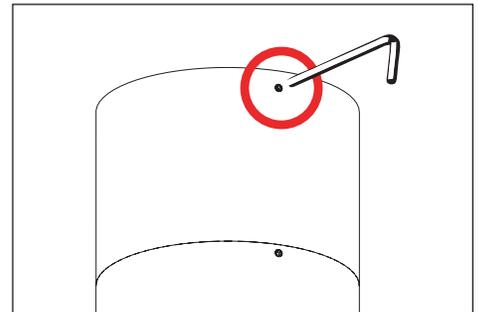

15. Place connections through wireway into junction box. Mount fixture over mounting plate, then secure with three (3) #10-32 screws using a 3/32" allen wrench. **Do not overtighten.**

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE  
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**



**B-K LIGHTING**

40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
02/08/2024

REFERENCE NUMBER  
INS-2321-06