



PRO.TECT Black Diamond® (GA013*)

silicone free · diamond textured · chemical tested
 black · heavy weight · nitrile single use gloves

Physical Specifications:

Material: Nitrile (latex free)
 Colour: Black
 Length: 240 mm
 Weight: 7.6 g
 Thickness:
 0.13 mm (flat area)
 0.22 mm (raised area)
 Finish: Powder free, chlorinated
 Fit: Ambidextrous
 Sterile: No

Order Codes and Size Information:

GA0133 | Medium
 GA0134 | Large
 GA0135 | Extra large

Packaging:

Each dispenser box contains 100 gloves
 Each case contains 10 dispenser boxes

Classification:



For more about the PRO.TECT range, please click on the image



Features


- Free from silicone
- Tested to EN374
- AQL 1.5 and EN455 parts 1-4
- Ambidextrous
- Nitrile formulation conforms to the hand during use
- Beaded cuff
- Manufactured with diamond textured palms and fingers (and back of hand)
- Ultra-heavyweight construction
- Touchscreen compatible

Benefits

- Silicone free formulation means no finger marks on metal and glass surfaces
- Resistant to a range of chemicals
- Meets medical standards including pinholes
- Ambidextrous fit means you don't have to split a pair to replace a damaged glove
- Nitrile formulation conforms to the hand during use for a more comfortable fit
- Beaded cuff provides extra strength during donning and helps prevent liquid roll back
- Diamond textured palms and fingers provides improved grip, particularly when working in wet or oily conditions
- Ultra-heavyweight construction is very tough, durable and long lasting
- Suitable for use with mobile and tablet displays without removing gloves

Sectors

- Automotive • Automotive maintenance and repair
- Chemical manufacture and use • Construction
- Electronics • Engineering • Floristry and gardening
- General assembly • Repair • Glass • Inspection
- Laboratory work • Light duty maintenance • Utility
- Maintenance • Manufacturing and assembly
- Painting and decorating

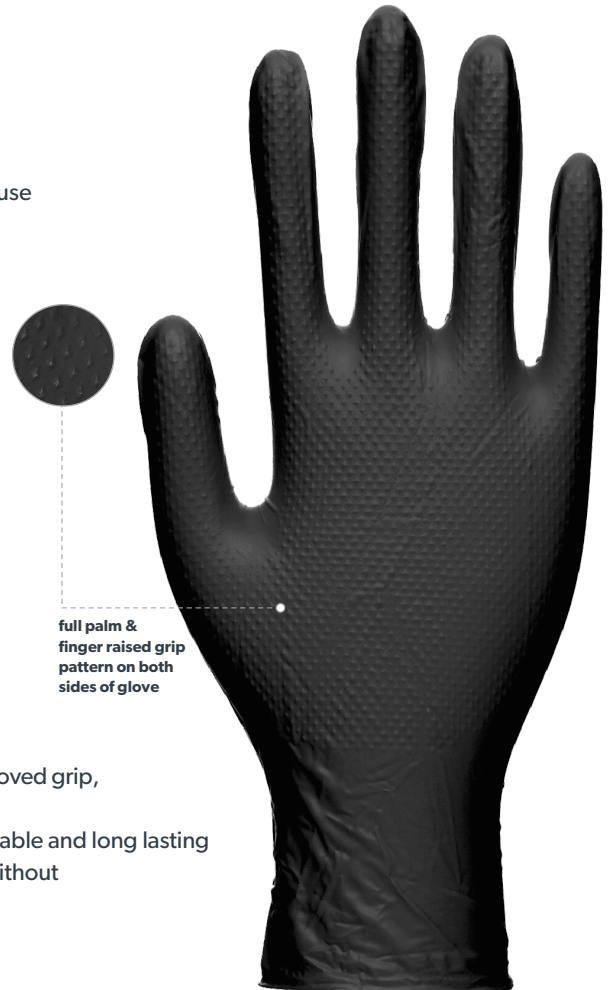

full palm & finger raised grip pattern on both sides of glove



UNIGLOVES UK
 Registered in England No: 4010200
 VAT registration 791817787

3 Ambley Green,
 Gillingham Business Park,
 Gillingham, ME8 0NJ, UK
 +44 (0)800 049 6602
 enquiries@unigloves.co.uk
 uk.unigloves.com

UNIGLOVES GERMANY
 Arzt- & Klinikbedarf
 Handelsgesellschaft mbH

Camp-Spich-Straße 71
 D-53842 Troisdorf,
 Germany
 +49 (0) 2241-9323-0
 unigloves@unigloves.de
 de.unigloves.com



Issue No. 3

Prepared at Gillingham
 on 07/11/25