


USER MANUAL



Art 4 LITE/G2+ monitor
Art 4H LITE/G2+ monitor
Hands-free
2-wire installation

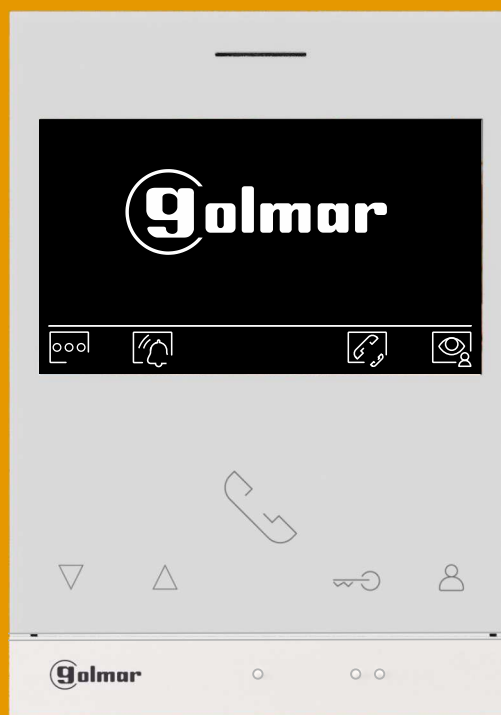

CONTENTS

Contents	2
VERY IMPORTANT (VILLA KIT: S5110 ART 4 LITE)	2
Set-up warnings	2
Characteristics	3
System operation	3
Communication with hearing aid (ART 4H LITE/G2+ monitor only)	3
Art 4 LITE/G2+ monitor	4 to 20
Description	4
Installation	5
Installation terminals	5
Configuration switches	5
Main menu	6
Settings menu	7 to 10
Door panel call screen	11
Communication screen	12
Image and communication settings	13 to 15
Period of time for 'Do not disturb' mode menu	16 to 17
Intercom menu	18 to 20
Special codes	21 to 23
Cleaning the monitor	24
Notes	25
Compliance	26

VERY IMPORTANT (VILLA KIT: S5110 ART 4 LITE)

If you have the “S5110 ART 4 LITE” villa kit with Soul door panel, download “TS5110 ART 4 LITE (cód. 50122625)” user manual from the next QR or in the link Golmar web: <https://doc.golmar.es/search/manual/50122625>



SET-UP WARNINGS

- **Always disconnect the power supply** before installing or making modifications to the devices.
- The fitting and handling of these devices must be carried out by **authorised personnel**.
- The wiring must run at least **40cm away from any other wiring**.
- Do not overtighten the screws of the monitor connector.
- Install the monitor in a dry protected location free from the risk of dripping or splashing water.
- Do not place in humid, dusty or smoky locations, or near sources of heat.
- Before connecting the device to the mains, check the connections between the door panel, power supply unit, distributors and monitors.
- Use the Golmar **RAP-GTWIN/HF** cable (2x1mm²).
- Always follow the instructions contained in this manual.


CHARACTERISTICS

- Hands-free monitor.
- 4,3" TFT colour screen
- Monitor with simple installation (non-polarised 2 wires bus).
- The ART 4H LITE monitor, interacts with hearing aids equipped with T-mode, making conversation between apartment and door panel easier.
- Push buttons for access and selection of menu function.
- User menu.
- Installer menu.
- Image and communication settings menu.
- Output to auxiliary call repeater (maximum 50mA/12Vdc).
- "HZ" input for calls from apartment front door. **Important:** Up to 8 monitors/ apartments with push button "HZ" activated at the same time (with system and monitors in standby).
- Push buttons for Door release 1 and 2.
- Notification leds.
- Configuration switches to assign the address and to define whether the monitor is master or slave .

SYSTEM OPERATION


- To make a call, the visitor must press the button of the apartment; an audible sound indicates that the call is being made and the door panel LED  will turn on. If vocal synthesis is enabled, a 'Call is in progress' message appears indicating that a call is being made. At this moment, the apartment's monitors receive the call. If another apartment is called by mistake, press the button for the correct apartment and the first call will be cancelled.
- Upon receiving the call, the image will appear on the screen of the master monitor (and slave 1, if it exists) without the visitor knowing and icon  displayed on the screen will blink green. To view the image from slave monitors 2 or 3, press one of the buttons of the monitor to display the image. If the call is not answered within 45 seconds, the door panel LED  will turn off and the system will become free.
- To establish communication, press the push button below off-the-hook icon  shown on the screen. Door panel LED  will turn off and the led  will turn on. If the monitor is an 'ART 4H LITE' with icon  on the front, make sure that the hearing aid is between 15 and 25 cm away from the monitor to ensure maximum audio quality during communication with the door panel.
- Connection will last for 90 seconds or until the push button below on-the-hook icon  shown on the screen is pressed. When communication ends, door panel LED  will turn off and the system will become free. If vocal synthesis is enabled, a 'Communication is finished' message will indicate that the call is over.
- To open door  or  of the door panel, press the push button below of corresponding icon displayed on the screen during the call or communication processes: one press will activate the lock release for 3 seconds and the door panel LED  will also turn on for 3 seconds. If vocal synthesis is enabled, a 'Door is open' message will be indicated on the door panel.
- Detailed operation of the monitor is described on pp. 6 to 20.

COMMUNICATION WITH HEARING AID (ART 4H LITE/G2+ MONITOR ONLY)

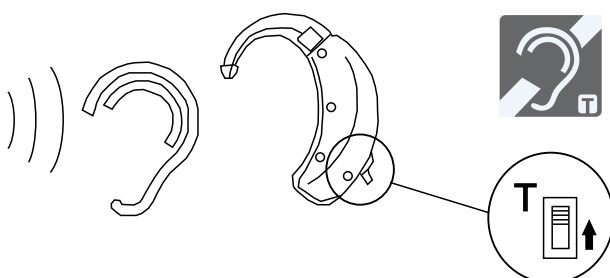

Make sure that the hearing aid is 15-25 cm away from the monitor to ensure maximum audio quality during communication with the door panel, (see page 4).

DESCRIPTION

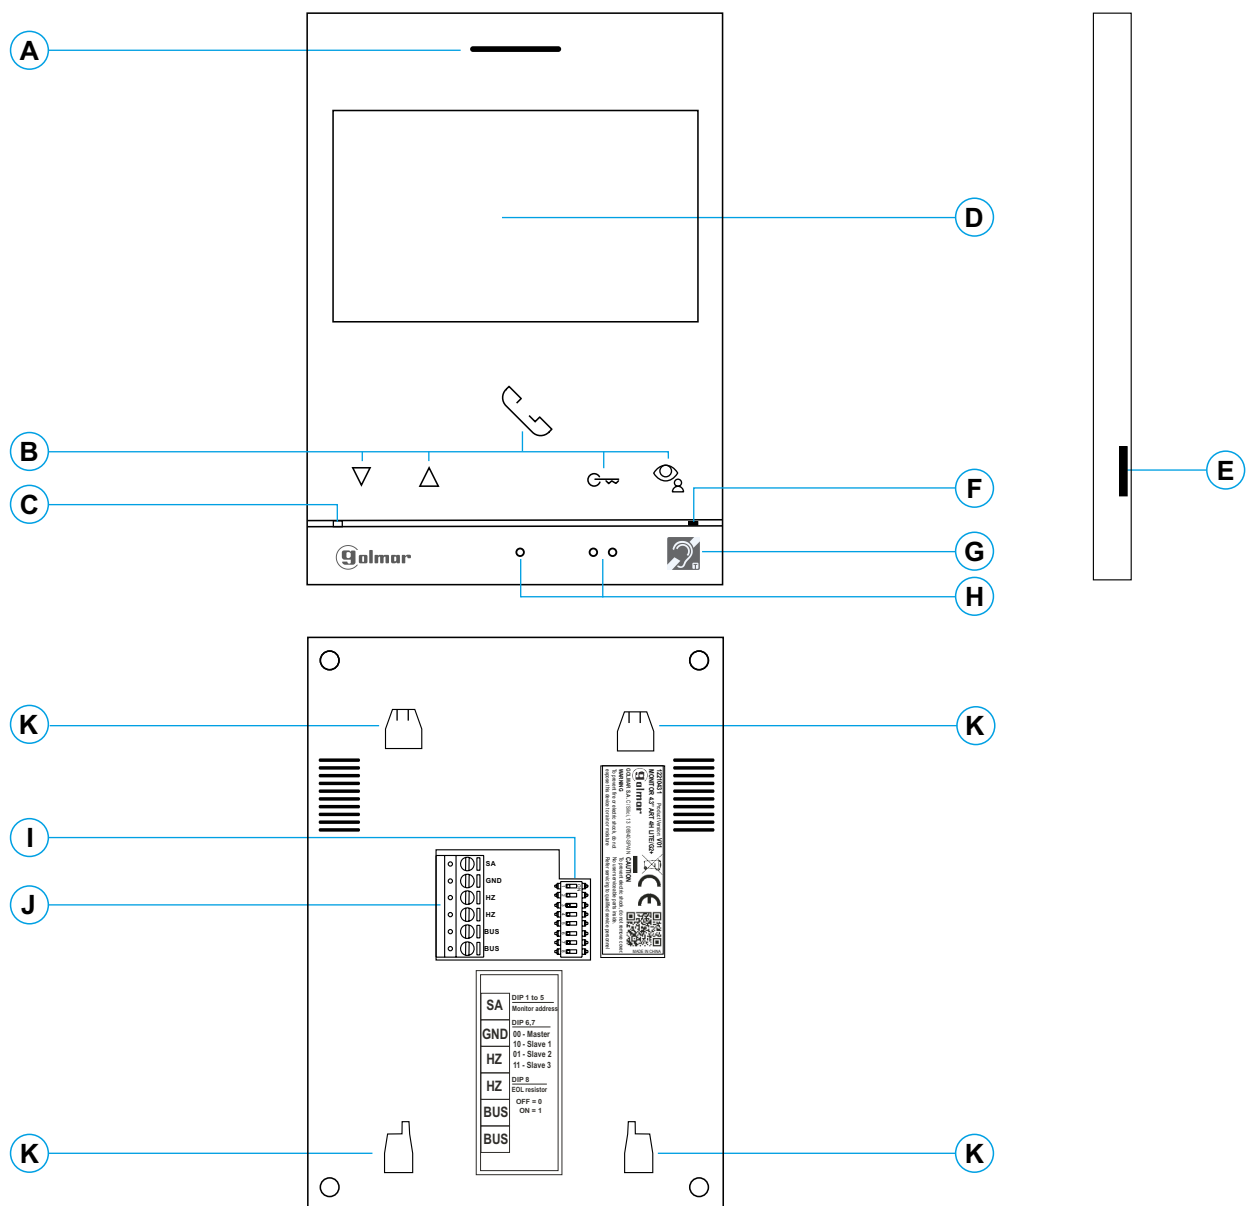

A. Speaker.

B. Function buttons, access and selection of menu functions.

The function of each button is shown on the monitor screen with an icon located just above each button (see pp. 6 to 20).

* **G** Press to access 'Doctor mode' function (standby monitor):

- With the special code '0441' (Doctor mode) already entered (see pp. 21 to 23), press the button for 1 sec. to activate/ deactivate the function.
- The push button led **G** will blink in white color if the function 'Doctor mode' is activated and it will turn off if the function is deactivated.

C. Monitor status LED:

Yellow ON: Standby without notification.

Red ON: "Do not disturb" Mode activated.

D. 4.3" TFT colour screen.

E. Golmar use.

F. Microphone.

G. Communication with hearing aids (ART 4H LITE/G2+). Set the hearing aid switch to the T position, see page 3.

H. Raised dots for the visually impaired people.

In call/ communication:

- Above this raised dot is the 'Start/End communication' button.
- Above these raised dots is the 'Door opening' button.

I. Configuration switches.

J. Installation terminals.

K. Wall mounting connector fixing (x4).

INSTALLATION


Avoid dusty or smoky environments or locations near sources of heat.

For proper installation, use the template supplied with the product.

1. Position the top of the template at a height of 1.65m.
2. If you are going to use an embedding box to pass the wiring through, make sure that it is in line with the holes corresponding to the box model chosen and fix the connector. If you prefer to fix the connector directly to the wall, make four 6mm holes at the points indicated (A), insert the wall plugs supplied and screw in the connector.
3. Pass the installation wires through the middle hole and connect them to the removable terminals as shown in the wiring diagrams. Before connecting the removable terminals to the monitor, configure the switch as indicated below.
4. Connect the removable terminals to the monitor and place the monitor in front of the connector, making sure the fixings line up. Move the monitor downwards to secure it.

INSTALLATION TERMINALS (J)

For ease of installation, the installation terminals are removable and supplied in a separate bag. Once the terminals are wired, place them in position.

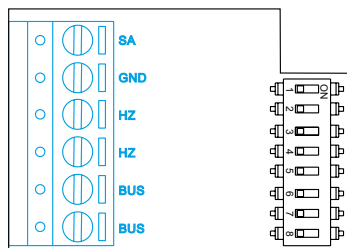

BUS, BUS: Communication BUS (non-polarised).

SA, GND: Auxiliary call repeater output (max 50mA/12V), relay SAR-12/24.

HZ, HZ: Apartment front door button input:

Connect only on the master monitor. The signal received is then transmitted to the slave monitors in the same apartment through the BUS.

Note: HZ push button function mode: When HZ push button is pressed will be call tone and activate the output of auxiliary call repeater with standby monitor, call process, communication process (HZ tone with lower audio level), intercom process and "Do not disturb" mode. **Important:** Up to 8 monitors/ apartments with push button "HZ" activated at the same time (with system and monitors in standby).

CONFIGURATION SWITCHES (I)

Building / Villa (Nexa Door Panel)

Switches 1 to 5: Sets the monitor address (addresses 1 to 32).

The switches set to OFF have a zero value. The values of the switches set to ON are shown in the table below. The monitor code is the sum of the values of the switches set to ON.

Important: Apartment 1 (Dip1 to ON & Dip2-Dip5 to OFF).

Table of values

Switch number:	1	2	3	4	5
Value when ON:	1	2	4	8	16



Example: $0 + 0 + 4 + 0 + 16 = 20$

Important: Apartment 32 (Dip1 - Dip5 to OFF)

Switches 6 and 7: These define whether the monitor is master or slave. Each apartment must have one master monitor, and only one.



Switch 8: This activates the end-of-line resistance in the ON position. Activate it in monitors where the bus cable ends. Deactivate it only in intermediate monitors.


* Villa (Soul Door Panel)

If you have the "S5110 ART 4 LITE" villa kit with Soul door panel, download "TS5110 ART 4 LITE (code 50122625)" user manual from the next QR or in the link Golmar web:
<https://doc.golmar.es/search/manual/50122625>



TS5110 ART 4 LITE
MANUAL

MAIN MENU

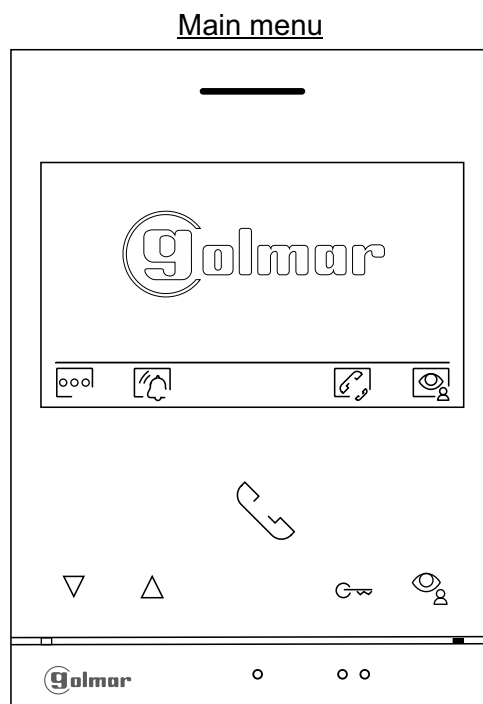

If the device is in standby (screen switched off), to access the main menu, press any of the buttons of the monitor. Then press the button located just below the corresponding icon. The device will return to standby mode after 20 seconds without activity.



Press the button below icon  to make changes to the system settings (see pp. 7 to 10).



Disabled



Enabled

Press the button below icon  for 3 seconds to enable and for 1 second to disable the 'Do not disturb' function: If the monitor is in 'Do not disturb' mode, the status LED will illuminate (red) and the ringtone on the monitor will not sound when a call (see note "HZ" page 5) is received.

To set a period of time for 'Do not disturb' mode (see p. 16 to 17).



Press the button below icon  to access the menu of the intercom between other monitors in the same apartment or other apartments (see p. 18 to 20).



Press the button below icon  to display the image from the master door panel. Note: This enables the door panel camera to be changed, the audio on the corresponding door panel to be activated and the door to be opened (see p. 11).

SETTINGS MENU




Returning to the main menu: Press the button below icon to return to the main menu.



No function.




Settings "automatic door opening" mode:
See pages 8 to 10.

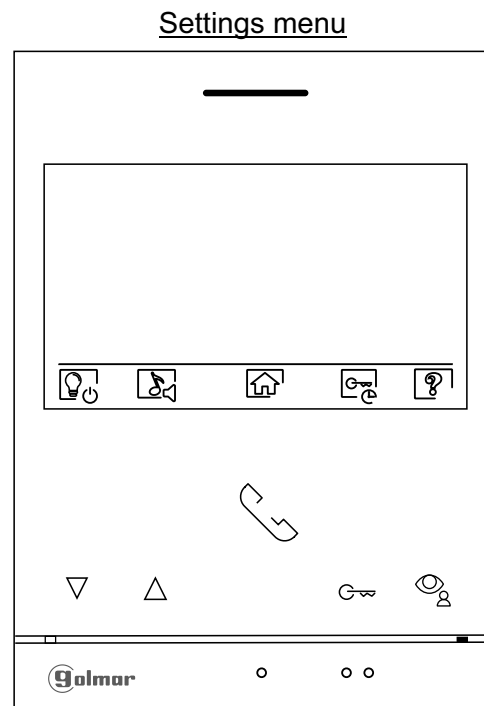


The 'About' screen provides information about the monitor, such as the software version, address and whether it is master or slave (M, S1, S2 or S3). It enables updated versions of the manual to be downloaded to a mobile or tablet, for which it is necessary to have a QR code scanner app installed. It enables the monitor to be restored to factory settings, such as melodies, call volume, etc. Press the button below icon to return to the settings menu.

Settings menu

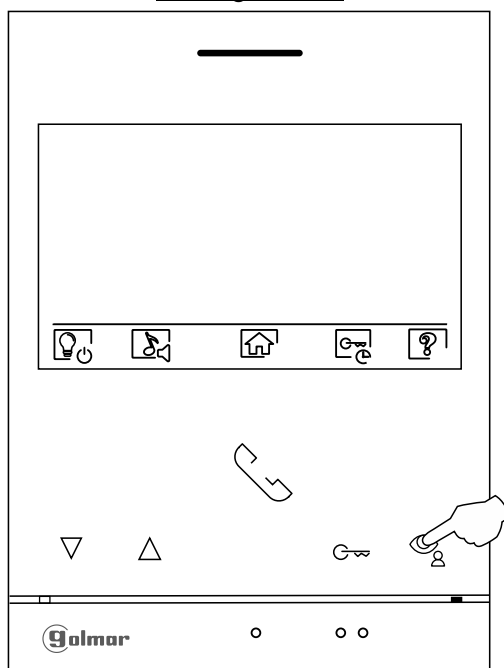

'About' screen

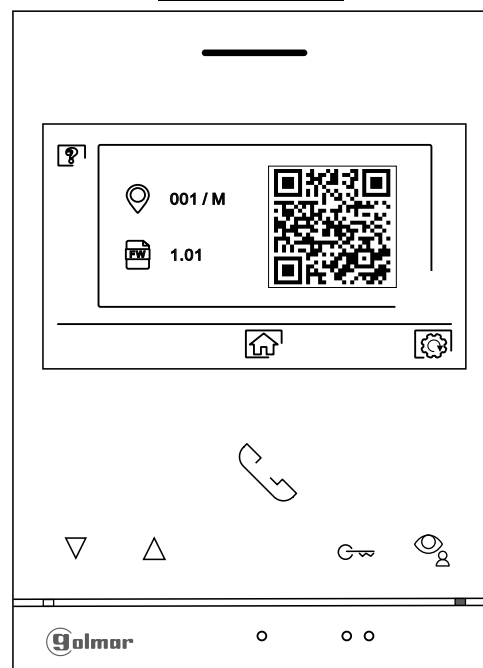

To restore the monitor to factory settings, press the button below icon to access the factory reset menu, then press the button below icon to perform this function. Press the button below icon to return to the 'About' screen.



Press the button below icon to return to the settings menu.

Continued overleaf


Continued from previous page.

SETTINGS MENU




Selecting the melody and call volume: Press the button below icon  to access the settings screen. In order to identify the origin of the calls when you are not in front of the monitor, select different melodies and the desired call volume. Go to the option to be modified by pressing the buttons below corresponding icons  / , then press the buttons below corresponding icons  /  to select the melodies and desired call volume. Press the button below icon  to return to the settings menu.

Settings menu

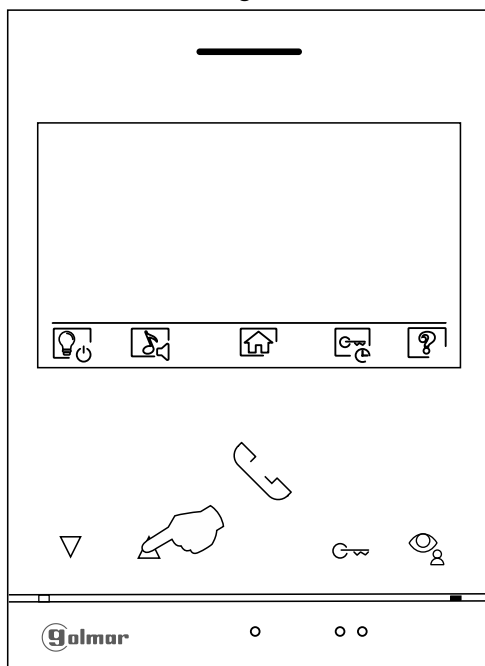


Option selection screen

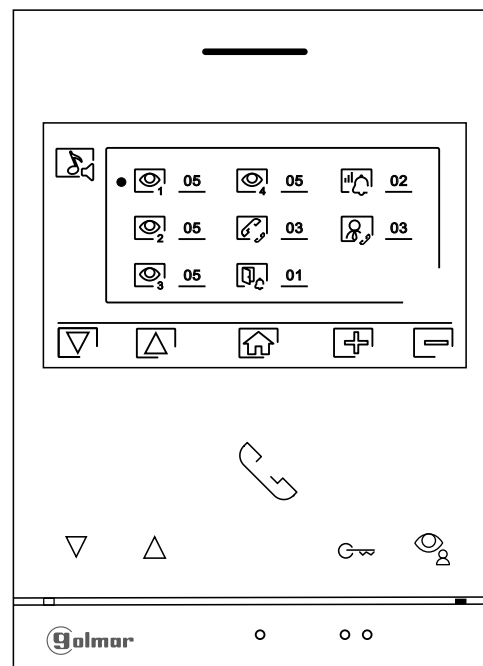


Settings "automatic door opening" mode: This selection is visible in the settings menu, with the special code '0441' (Doctor mode) already entered in the monitor for automatic door opening  (see special codes pp. 21 to 23). Then press the button below icon  to access the settings menu.

Settings menu

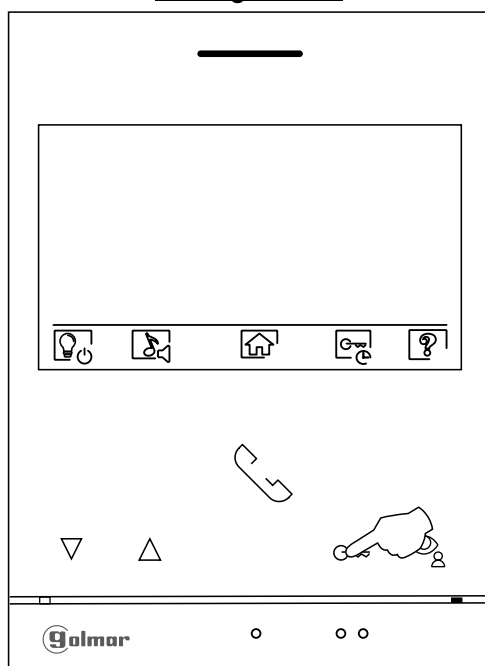

Option selection screen

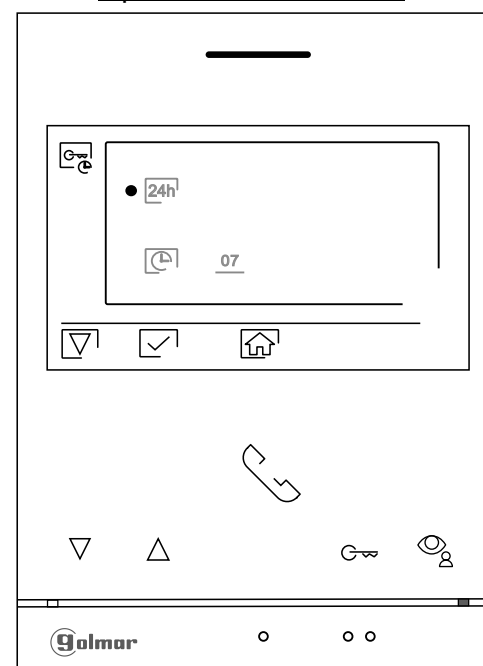

Continued overleaf

Continued from previous page.


SETTINGS MENU

 To enable the automatic door opening  (after 3 seconds of receiving a call from the door panel), go to the option with icon  by pressing the button below corresponding icon  and select the option by pressing the button below icon . Press the button below icon  to return to the settings menu.


If you wish disable the automatic door opening , go to the option with icon  by pressing the button below icon , deselect the option by pressing the button below icon . Press the button below icon  to return to the settings menu. **(This function is disabled by default. To enable it, see pp. 21 to 23).**

 To set a period of time for automatic door opening  (after 3 seconds of receiving a call from the door panel), go to the option with icon  by pressing the buttons below corresponding icon  and select the option by pressing the button below icon . Then you can set a period of time (from 1h to 24h) for 'opening the door' function mode, by pressing corresponding buttons  / , and validate the changes made by pressing the button below icon . Press the button below icon  to return to the settings menu. **(This function is disabled by default. To enable it, see pp. 21 to 23).**

Option selection screen

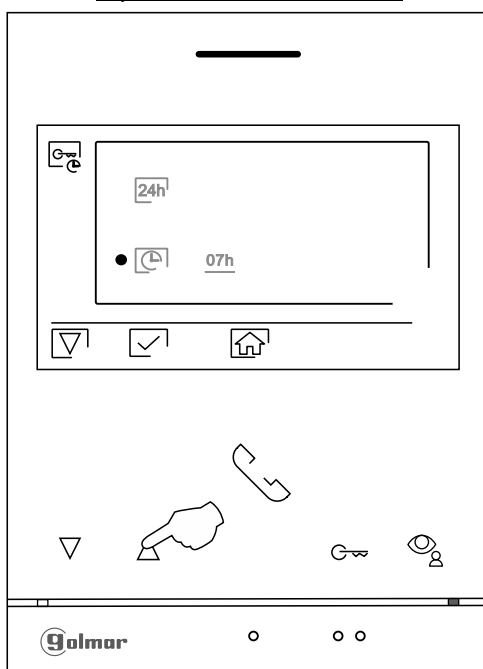

Time period setting screen

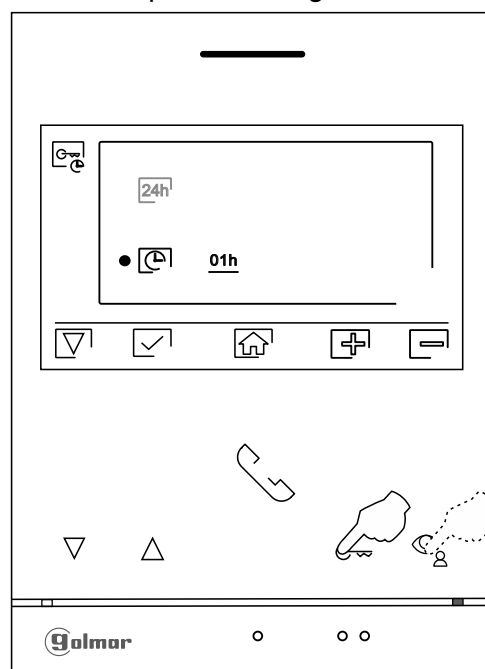



Continued from previous page.

SETTINGS MENU




Press the button below icon to return to the main menu. If the 'automatic door opening' mode is enable (see pages 8 to 9) in the top left of the screen the icon will be displayed in the main menu and the button led will blink white color with the monitor in standby (screen switched off).


Settings menu

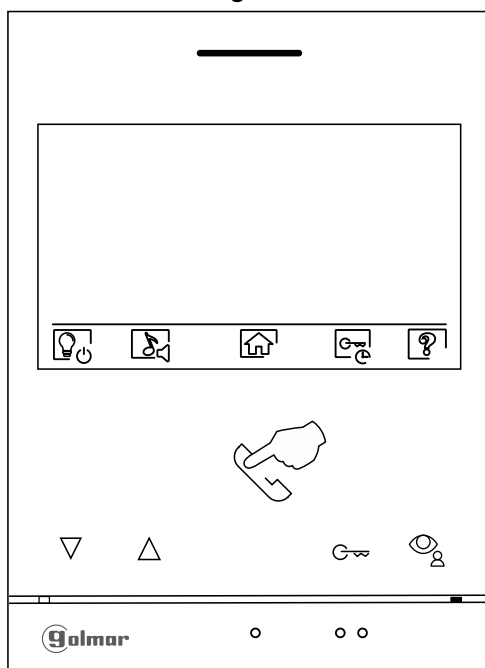

Main menu

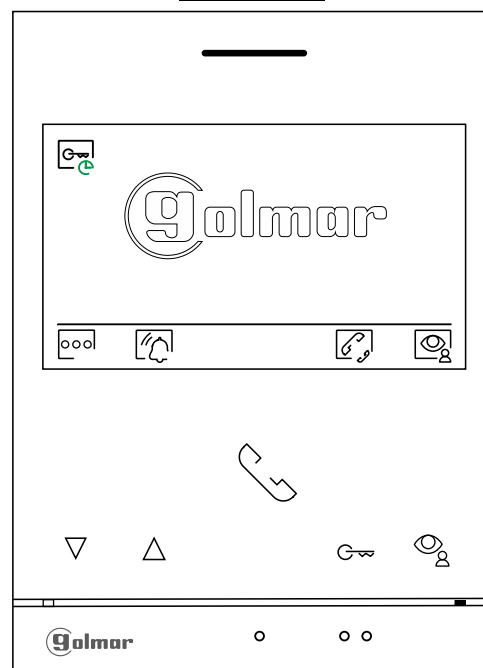

DOOR PANEL CALL SCREEN

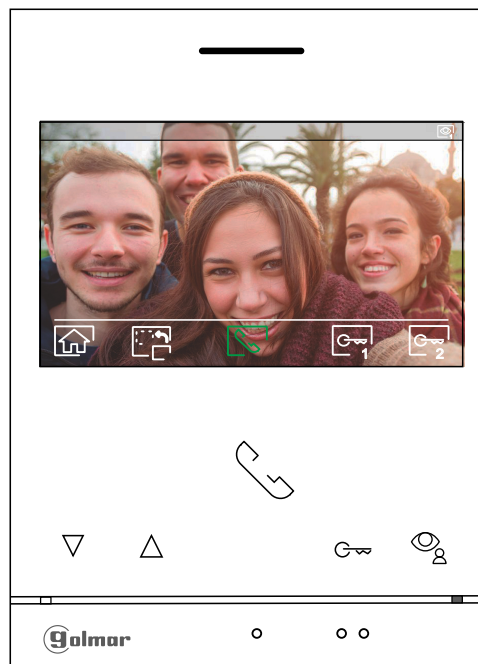

This screen is displayed when receiving a call or pressing the button below icon  of the main menu. During a call, icon  displayed on the screen will blink green (during the call process). In the top right of the screen, the source of the image is displayed. The call has a duration of 45 seconds.



Press the hidden button below icon  to cancel the current call or display and return to the main menu.



Press the button below icon  for 3 seconds to access the image and monitor in call tone volume settings menu. Select the option to be modified by pressing the buttons below corresponding icons  / , change to the desired level by pressing the buttons below corresponding icons  /  and validate the changes made by pressing the button below icon , (see pp. 13 - 15).



Press the button below icon  to change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see pp. 21 - 23). It is possible to make the change during display, call and communication processes.



Press the button below icon  /  to start or end audio communication with the door panel displayed respectively. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.




Press the hidden button below icon  to activate the lock release (or device connected to the relay 1 output of the door panel) for 3 seconds (factory setting, see pp. 21 to 23).



Press the hidden button below icon  to activate the lock release (or device connected to the relay 2 output of the door panel) for 3 seconds (factory setting, see pp. 21 to 23).

COMMUNICATION SCREEN

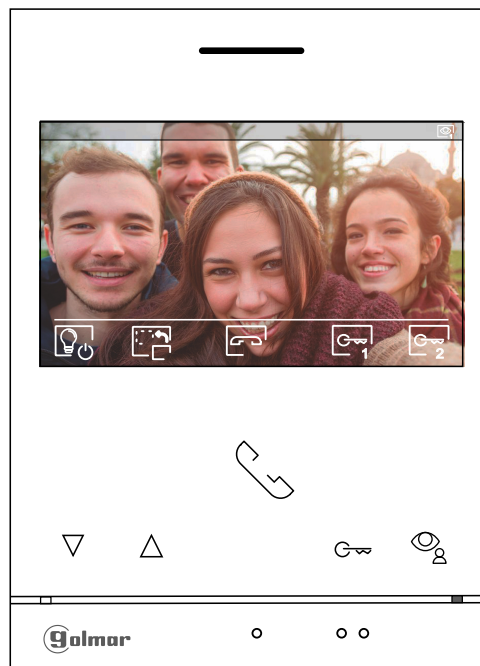

This screen is displayed during a communication process. In the top right of the screen, the source of the image is displayed.



No function.



Press the button below icon  for 3 seconds to access the image and monitor in communication volume settings menu. Select the option to be modified by pressing the buttons below corresponding icons  / , change to the desired level by pressing the buttons below corresponding icons  /  and validate the changes made by pressing the button below icon , (see pp. 13 to 15).



Press the button below icon  to change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see pp. 21 to 23). This enables the door panel camera to be changed, the audio of the corresponding door panel to be activated and the door to be opened.



Press the button below icon  /  to start or end audio communication with the door panel displayed respectively. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.



Press the hidden button below icon  to activate the lock release (or device connected to the relay 1 output of the door panel) for 3 seconds (factory setting, see pp. 21 to 23).



Press the hidden button below icon  to activate the lock release (or device connected to the relay 2 output of the door panel) for 3 seconds (factory setting, see pp. 21 to 23).

IMAGE AND COMMUNICATION SETTINGS

During a call process (**Screen A**) or during a communication process (**Screen B**), press the button below icon  for 3 seconds to access the image and monitor in call/communication volume settings menu.




Press for
3 seconds



Press for
3 seconds


The following brightness control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the contrast control, press the button below icon . To exit the image and communication settings menu, press the button below icon .

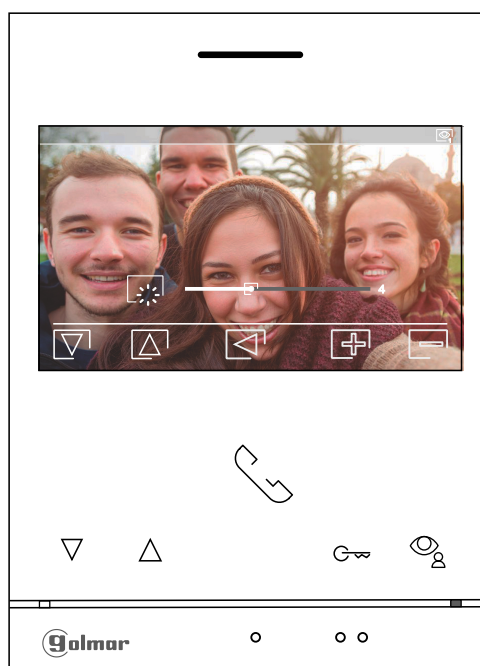


Continued from previous page.

IMAGE AND COMMUNICATION SETTINGS

The following contrast control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the colour control, press the button below icon . To exit the image and communication settings menu, press the button below icon .

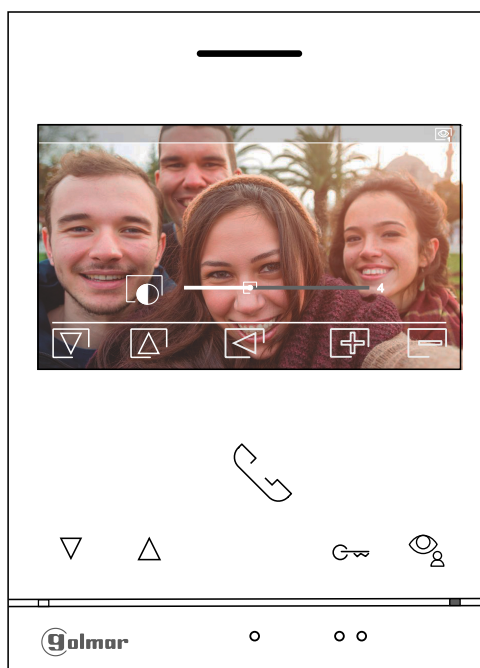

The following colour control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the monitor call tone / communication volume control, press the button below icon . To exit the image and communication settings menu, press the button below icon .

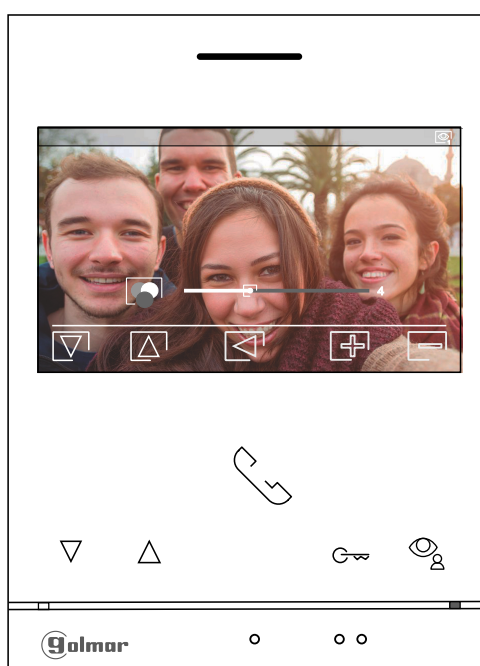

Continued overleaf


Continued from previous page.

IMAGE AND COMMUNICATION SETTINGS

The following call tone settings volume during a call process (**Screen A**) or communication settings volume during a communication process (**Screen B**) will then be displayed. Adjust to the desired level by pressing the buttons below icons / . To return to the brightness control (carousel mode), press the button below icon .


Screen A

Call tone settings volume

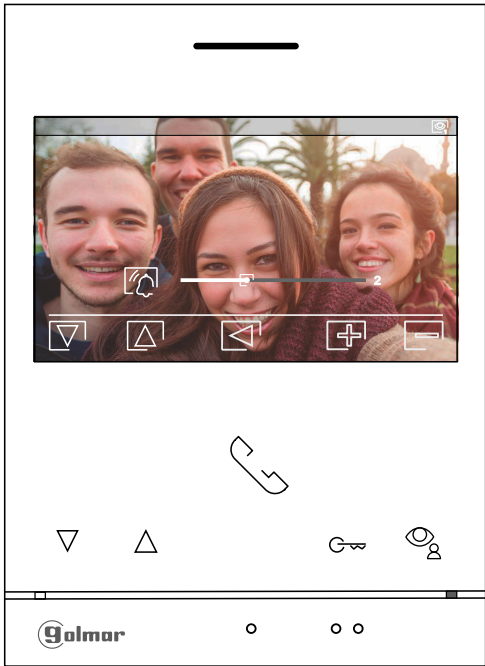

Screen B



Communication settings volume

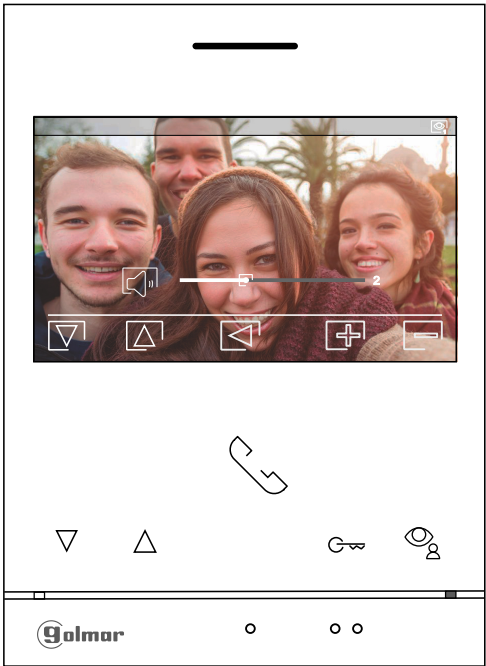


To exit the image and call / communication settings menu, press the button below icon .

Screen B

Communication settings volume

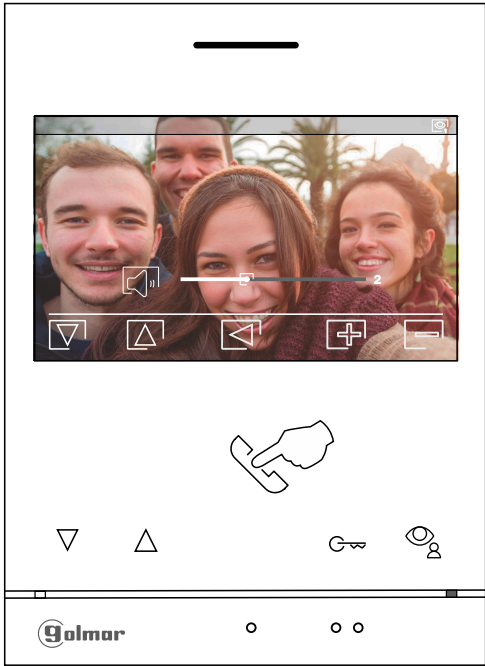


Communication screen

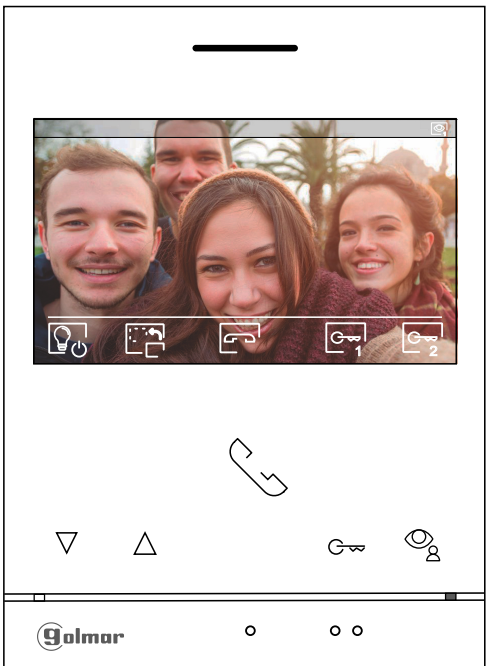

PERIOD OF TIME FOR 'DO NOT DISTURB' MODE MENÚ



'Do not disturb' mode settings: If the device is in standby (screen switched off), to access the main menu, press any of the buttons of the monitor. Then press the button below icon  to access the settings screen.

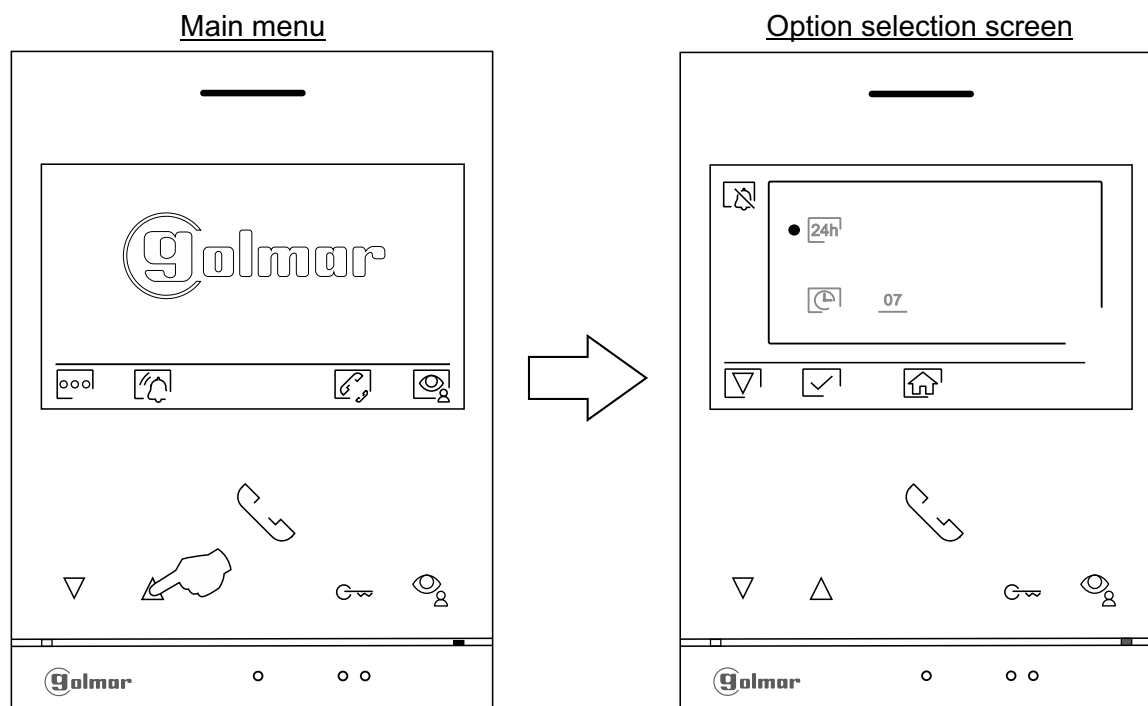

24h

To enable the 'Do not disturb' mode in which the monitor will not sound when receiving calls (see note "HZ" page 5), go to the option with icon  by pressing the button below icon  and select the option by pressing the button below icon . Press the button below icon  to return to the main menu.

If you wish disable the 'Do not disturb' mode, go to the option with icon  by pressing the button below icon , deselect the option by pressing the button below icon . Press the button below icon  to return to the main menu.




To set a period of time for "Do not disturb" mode in which the monitor will not sound when receiving calls (see note "HZ" page 5), go to the option with icon  pressing the button below icon  and select the option by pressing the button below icon . Then you can set a period of time (from 1h to 24h) for 'Do not disturb' mode, by pressing corresponding buttons /, and validate the changes made by pressing the button below icon . Press the button below icon  to return to main menu.


Continued from previous page.

PERIOD OF TIME FOR 'DO NOT DISTURB' MODE MENU

Option selection screen

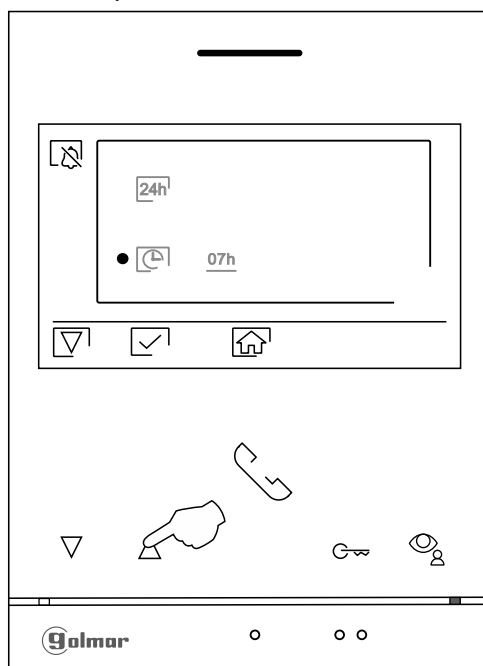


Time period setting screen

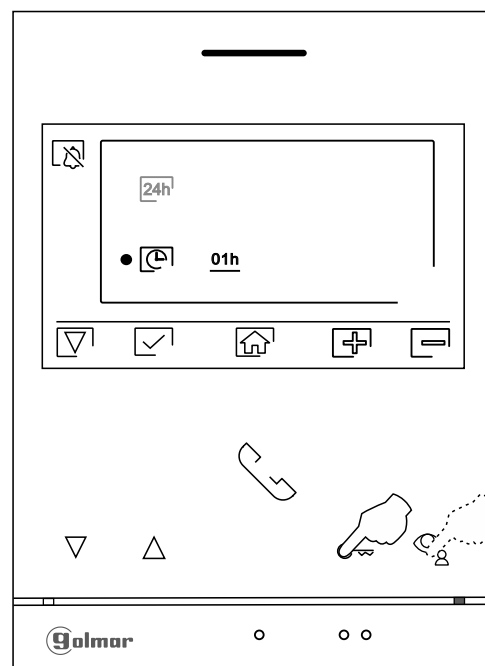


Press the button below icon  to return to the main menu. If the 'Do not disturb' mode is enable (see pages 16 to 17) will be shown the icon  in the main menu and the monitor status LED will turn on (red color).

Time period setting screen

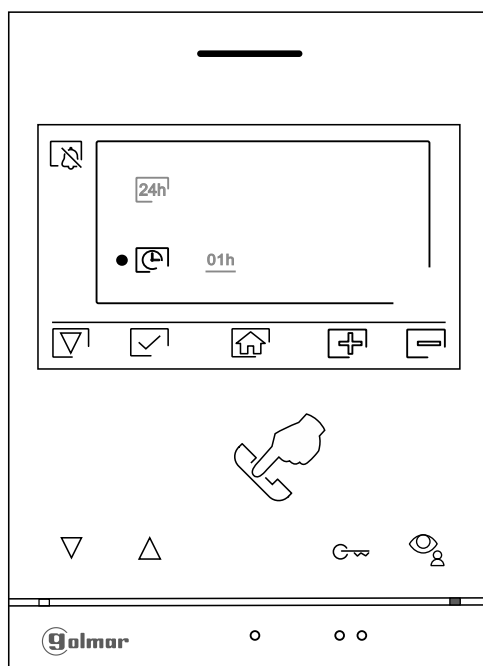

Main menu

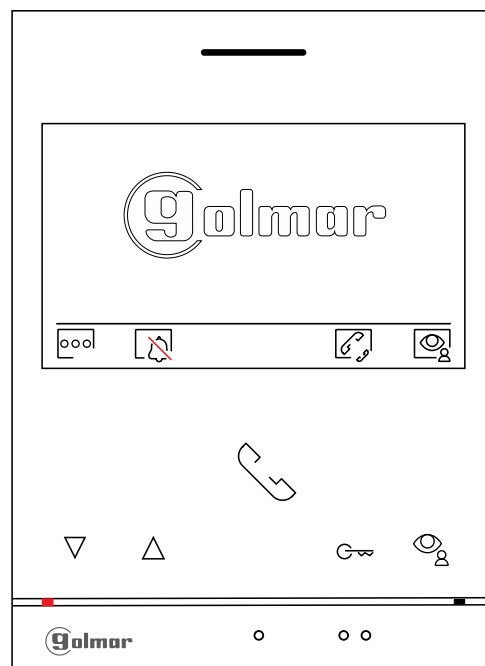

INTERCOM MENU

Access the intercom menu as described on p. 6. From this menu, you can contact another monitor(s) in your apartment (internal intercom) or other apartments (external intercom). For external intercom, the monitor(s) of the apartment that makes the call and the monitor(s) of the apartment that receives the call must have the intercom function enabled (see page 19).

Select option  or  to perform an internal or external intercom call.


If during an intercom process with another monitor a call is received from the door panel, the intercom process will be terminated, and the door panel call will be received on the corresponding monitor.

Press the button below icon  to return to the main menu.




To make an internal intercom call (to another monitor(s) in the same apartment), go to the option with icon  by pressing the buttons below corresponding icons / and press the button below icon  to access the monitor selection menu (in the same apartment). Note: You will find information about the monitor itself with the address, Master, Slave 1 to Slave 3 of the monitor in the 'About' menu, (see p. 7).

Option selection screen

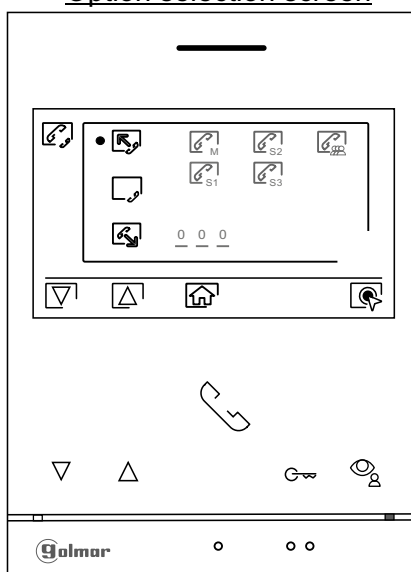

Then press the buttons below icons / to select the monitor to be called and press the button below icon  to make the call. The monitor making the call will play a confirmation melody and indicate with a blink the monitor called. To cancel the call, press the button below icon . Press the button below icon  to return to the intercom menu. The monitor receiving the call will play a confirmation melody showing on screen with a blink the monitor making the call. Press the button below icon  to establish communication and press the button below icon  to end communication.

Monitor selection screen

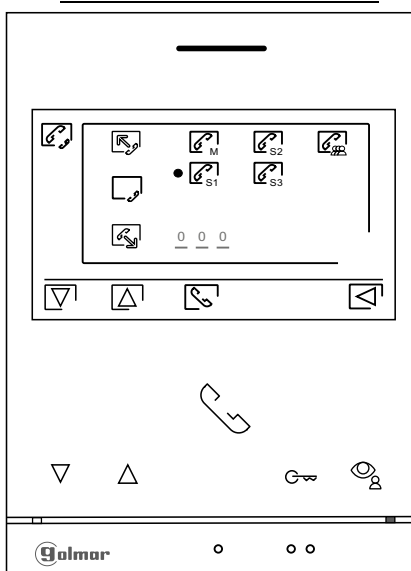

Continued overleaf

Continued from previous page.




INTERCOM MENU



For external intercom, the monitor(s) of the apartment that makes the call and the monitor(s) of the apartment that receives the call must have the intercom function enabled:



To enable/disable the intercom function between apartments, go to the option with icon by pressing the buttons below corresponding icons /. Then press the button below icon to enable / disable this function. **(This function is disabled by default).**

Option selection screen

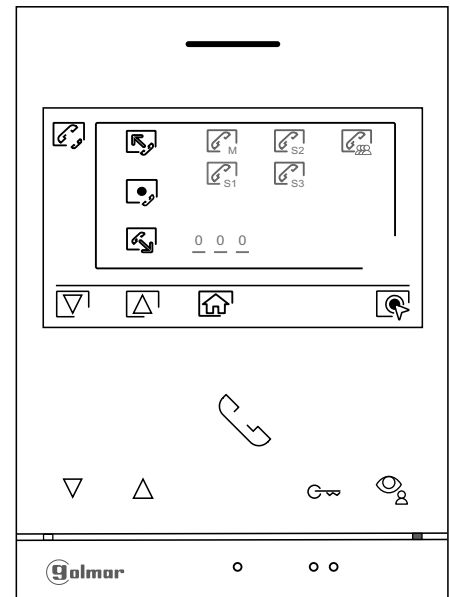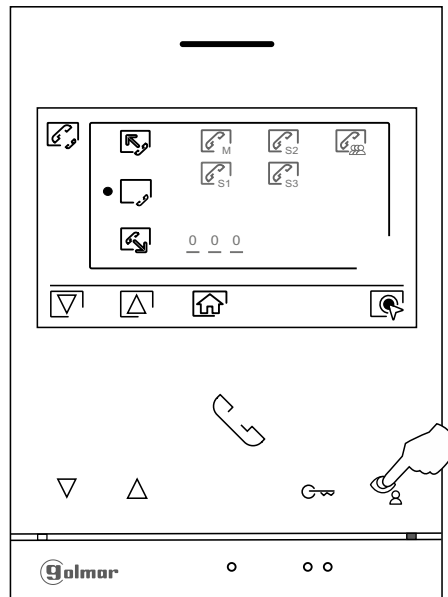


To make an external intercom call (to other apartments), go to the option with icon by pressing the buttons below corresponding icons / and press the button below icon to access the code selection menu of the apartment with which you wish to communicate.

Option selection screen

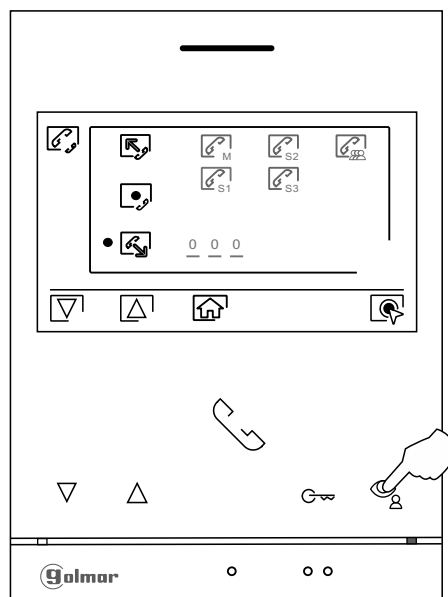

Apartment code selection screen

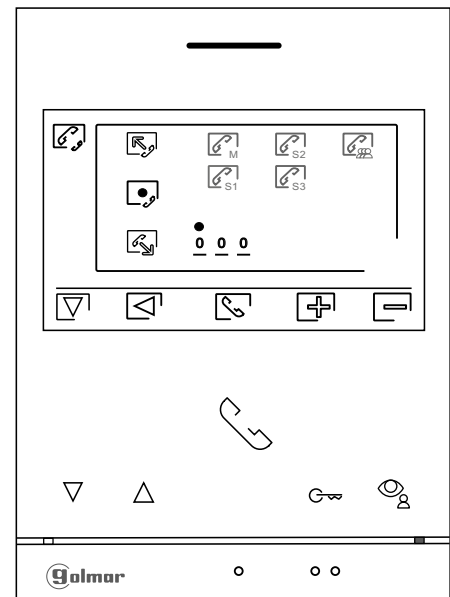

Continued overleaf


Continued from previous page.

INTERCOM MENU

Press the button below icon  to select the apartment code field to be modified, then press the buttons below icons  /  to modify with the apartment code to be called and press the button below icon  to make the call. The monitor making the call will play a confirmation melody and indicate with a blink the code of the apartment called. To cancel the call, press the button below icon . Press the button below icon  to return to the intercom menu. The apartment receiving the call will play a confirmation melody showing on master monitor screen with a blink the apartment making the call. Press the button below icon  to establish communication and press the button below icon  to end communication.

Note: Only the master monitor receives external intercom calls between apartments.


Apartment code selection screen

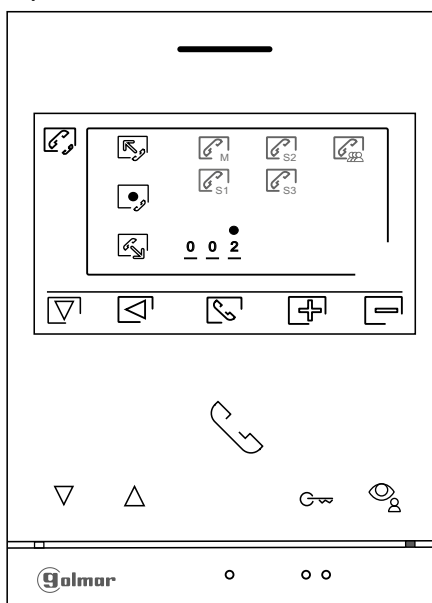

SPECIAL CODES

The enabling of some functions, as well as the modification of some factory parameters, can be carried out by entering special codes. To do so, the installer menu must be accessed from the monitor. Go to the 'About' screen in the Settings menu (p. 7) and press five times on button ▽ of the monitor.


'About' screen

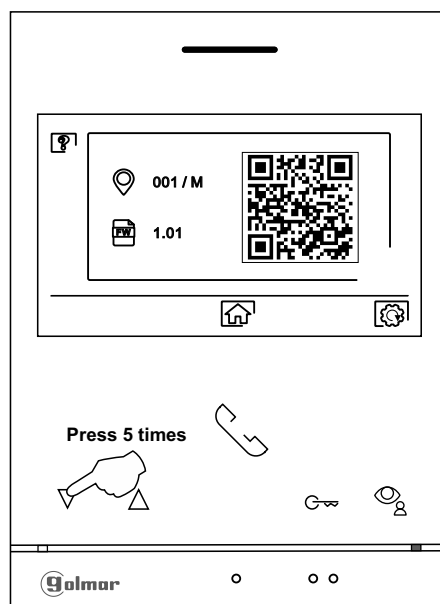

The 'special codes' screen will then be displayed. Press the button below icon ▽ to select the field to be modified and press the buttons below icons + / - to enter the desired code. Once the code has been entered, press the button below icon ✓ to validate it. If the code entered is valid, icon ✓ will be displayed; if it is not, icon ✗ will be shown.

Press the button below icon ? to return to the 'About' screen.

'Special codes' screen

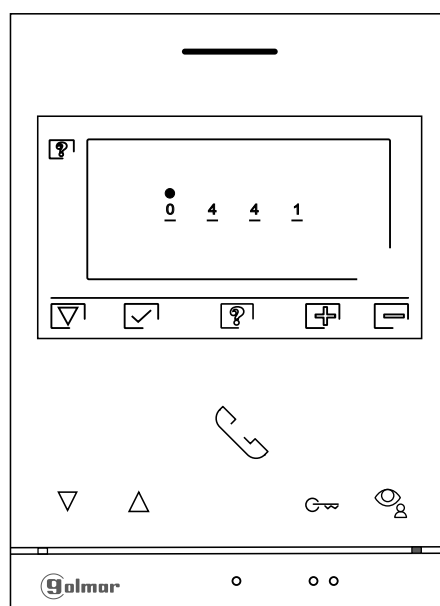

Continued from previous page.

SPECIAL CODES**Video sources available on a monitor (configure only on the master monitor).**

	<u>Visible</u>	<u>Not visible</u>	<u>Factory setting</u>
Door panel 1	0111	0110	0111
(*) Door panel 2	0121	0120	0120
(*) Door panel 3	0131	0130	0130
(*) Door panel 4	0151	0150	0150
Camera 1	0141	0140	0140
(*) Camera 2	0181	0180	0180
(*) Camera 3	0171	0170	0170
(*) Camera 4	0191	0190	0190

(*) Important: Only available with EL632-G2 + SE video module with 'V03' or later.

Automatic door opening upon reception of a call on a monitor (configure only on the master monitor).

<u>Activated</u>	<u>Deactivated</u>	<u>Factory setting</u>
0441	0440	0440

Do not show the image on the monitor when receiving a call from the door panel when the monitor is in 'Do not disturb' mode.

<u>Do not show</u>	<u>Show</u>	<u>Factory setting</u>
0481	0480	0480 (show image)

Enable/ disable the icon of the main menu in all monitors (building).

<u>Enable</u>	<u>Disable</u>	<u>Factory setting</u>
0541	0540	0541 (enable)

LED lights for night viewing (Door panel 1) during a call or communication process. (Configure only on the master monitor).

<u>Automatic</u>	<u>Always ON</u>	<u>Always OFF</u>	<u>Factory setting</u>
0450	0451	0452	0450 (automatic).

Activation times of the outputs (Door panel 1). (Configure only on the master monitor).

	<u>Factory setting</u>
Relay 1 From 0200 (0,5s) to 0219 (10s)	0205 (3s)
Relay 2 From 0300 (0,5s) to 0319 (10s)	0305 (3s)

Configuration of the remote activation button Relay1 (Door panel 1). (Configure only on the master monitor).

	<u>Factory setting</u>
Delay From 0400 (0,5s) to 0419 (10s)	0403 (2s)

Configuration of the remote activation button Relay2 (Door panel 1). (Configure only on the master monitor).

	<u>Factory setting</u>
Delay From 0500 (0,5s) to 0519 (10s)	0503 (2s)

(*) LED lights for night viewing (Door panel 2) during a call or communication process. (Configure only on the master monitor).

<u>Automatic</u>	<u>Always ON</u>	<u>Always OFF</u>	<u>Factory setting</u>
1450	1451	1452	1450 (automatic).

(*) Activation times of the outputs (Door panel 2). (Configure only on the master monitor).

	<u>Factory setting</u>
Relay 1 From 1200 (0,5s) to 1219 (10s)	1205 (3s)
Relay 2 From 1300 (0,5s) to 1319 (10s)	1305 (3s)

Continued overleaf

Continued from previous page.

SPECIAL CODES

(*) Configuration of the remote activation button Relay1 (Door panel 2). (Configure only on the master monitor).

		<u>Factory setting</u>
Delay	From 1400 (0,5s) to 1419 (10s)	1403 (2s)

(*) Configuration of the remote activation button Relay2 (Door panel 2). (Configure only on the master monitor).

		<u>Factory setting</u>
Delay	From 1500 (0,5s) to 1519 (10s)	1503 (2s)

(*) LED lights for night viewing (Door panel 3) during a call or communication process. (Configure only on the master monitor).

<u>Automatic</u>	<u>Always ON</u>	<u>Always OFF</u>	<u>Factory setting</u>
2450	2451	2452	2450 (automatic).

(*) Activation times of the outputs (Door panel 3). (Configure only on the master monitor).

		<u>Factory setting</u>
Relay 1	From 2200 (0,5s) to 2219 (10s)	2205 (3s)
Relay 2	From 2300 (0,5s) to 2319 (10s)	2305 (3s)

(*) Configuration of the remote activation button Relay1 (Door panel 3). (Configure only on the master monitor).

		<u>Factory setting</u>
Delay	From 2400 (0,5s) to 2419 (10s)	2403 (2s)

(*) Configuration of the remote activation button Relay2 (Door panel 3). (Configure only on the master monitor).

		<u>Factory setting</u>
Delay	From 2500 (0,5s) to 2519 (10s)	2503 (2s)

(*) LED lights for night viewing (Door panel 4) during a call or communication process. (Configure only on the master monitor).

<u>Automatic</u>	<u>Always ON</u>	<u>Always OFF</u>	<u>Factory setting</u>
3450	3451	3452	3450 (automatic).

(*) Activation times of the outputs (Door panel 4). (Configure only on the master monitor).

		<u>Factory setting</u>
Relay 1	From 3200 (0,5s) to 3219 (10s)	3205 (3s)
Relay 2	From 3300 (0,5s) to 3319 (10s)	3305 (3s)

(*) Configuration of the remote activation button Relay1 (Door panel 4). (Configure only on the master monitor).


		<u>Factory setting</u>
Delay	From 3400 (0,5s) to 3419 (10s)	3403 (2s)

(*) Configuration of the remote activation button Relay2 (Door panel 4). (Configure only on the master monitor).

		<u>Factory setting</u>
Delay	From 3500 (0,5s) to 3519 (10s)	3503 (2s)

CLEANING THE MONITOR

- Do not use solvents, detergents or cleaning products that contain acids, vinegar or abrasive components.
- Use a soft damp lint-free cloth with water.
- Always wipe the monitor in the same direction, from top to bottom.
- After cleaning the monitor, remove any moisture with a soft dry lint-free cloth.

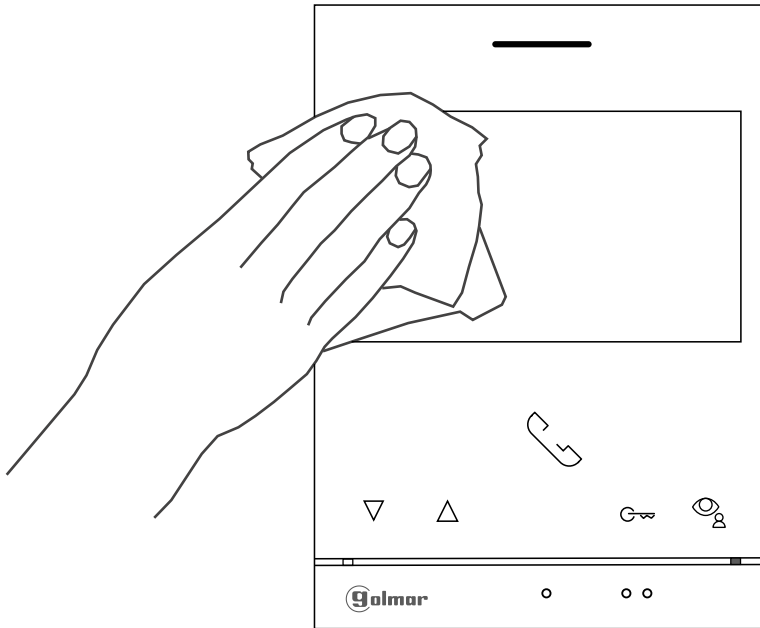

NOTES

This image shows a full page of a worksheet designed for handwriting practice. It features approximately 20 horizontal rows. Each row is defined by two parallel dashed lines, creating a series of uniform gaps for letter height. The entire page is otherwise blank, with no margins, text, or other markings.

COMPLIANCE:

Este producto es conforme con las disposiciones de las Directivas Europeas aplicables respecto a la Seguridad Eléctrica **2014/35/CEE** y la Compatibilidad Electromagnética **2014/30/CEE**.

*This product meets the essentials requirements of applicable European Directives regarding Electrical Safety **2014/35/ECC** and Electromagnetic Compatibility **2014/30/ECC**.*



NOTA: El funcionamiento de este equipo está sujeto a las siguientes condiciones:

(1) Este dispositivo no puede provocar interferencias dañinas, y (2) debe aceptar cualquier interferencia recibida, incluyendo las que pueden provocar un funcionamiento no deseado.

NOTE: Operation is subject to the following conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any received interference, including the ones that may cause undesired operation.



golmar@golmar.es
www.golmar.es

GOLMAR S.A.
C/ Silici, 13
08940- Cornellá de Llobregat
SPAIN



Golmar se reserva el derecho a cualquier modificación sin previo aviso.
Golmar se réserve le droit de toute modification sans préavis.
Golmar reserves the right to make any modifications without prior notice.