

Standard Installation

POWER PIPE SYSTEM

POWER PIPE STAKE AND ADJUSTBLE STEM



Flammable



Warning



Low Voltage



Hot Surface

TOOLS NEEDED:

- 5/64" Allen Wrench
- Waterproof Wire Connectors
- Phillips Screwdriver

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT!

WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

SAVE THESE INSTRUCTIONS


IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS

- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens. Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

IMPORTANT LISTINGS AND CERTIFICATIONS

- Suitable for wet locations

Please refer to the low voltage design guide at "<https://www.bklighting.com/resources/>" before installation for proper wire selection.

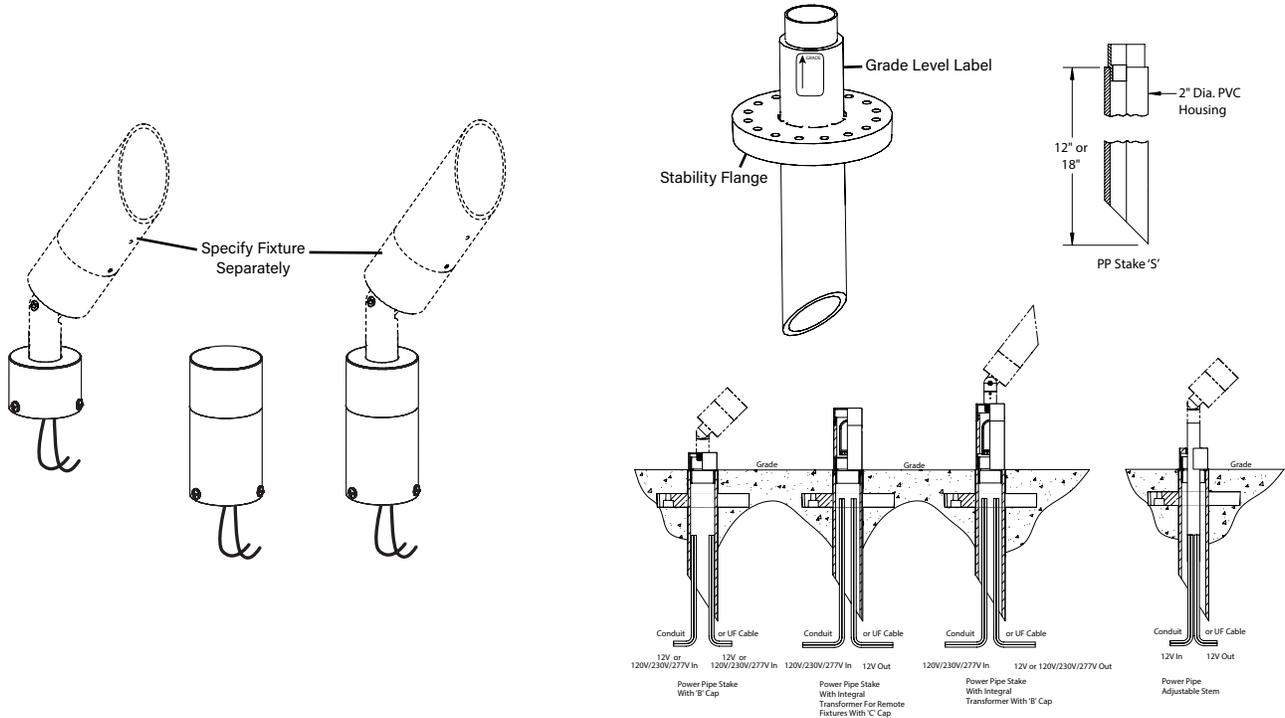

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS


B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA
 559.438.5800 • FAX 559.438.5900
www.bklighting.com • info@bklighting.com

RELEASE DATE
 06/19/2024

REFERENCE NUMBER
 INS001284

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF B-K LIGHTING, INC. AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF B-K LIGHTING, INC. IS STRICTLY FORBIDDEN.

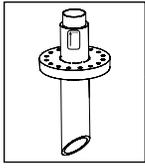



POWER PIPE SYSTEM

POWER PIPE STAKE AND ADJUSTBLE STEM

Standard Installation

TRANSFORMER HOUSING MUST BE INSTALLED ABOVE GRADE. POWER PIPE™ IS LABELED AT GRADE LEVEL. TRANSFORMER HOUSING INSTALLED BELOW GRADE WILL VOID WARRANTY

Soil Prep


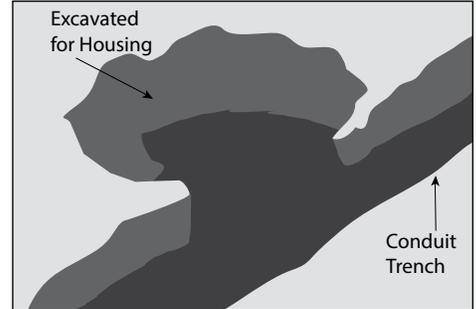
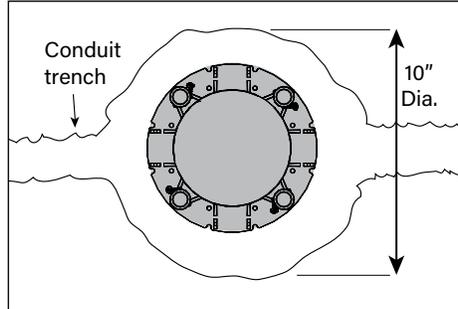


A. Determine Soil Type by referencing DIG-IT Guide. Prep soil according to DIG-IT Guide.

B. Dig hole 10" wide and 24" deep.

C. Prep soil according to DIG-IT Guide.

Installation of Power Pipe Stake

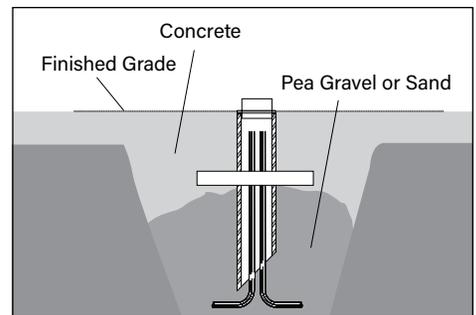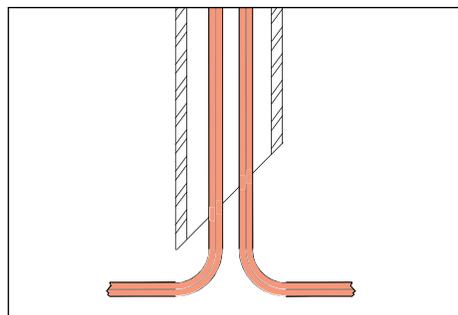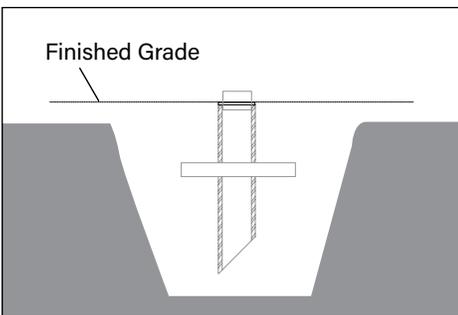




1. Excavate trench according to designed lighting plan. Dig hole a minimum of 24" deep and 10" wide to accommodate power pipe at desired fixture locations. **Do not cut PVC.**

2. Route the necessary UL approved under ground branch circuit or low voltage wiring to power pipe necessary for appropriate installation. Leave enough length to make connections to fixture leads.

3. Back fill hole with soil and/or prep for concrete.

4. Pull branch circuit or low voltage wiring necessary for appropriate installation.

Stake with "B" Cap

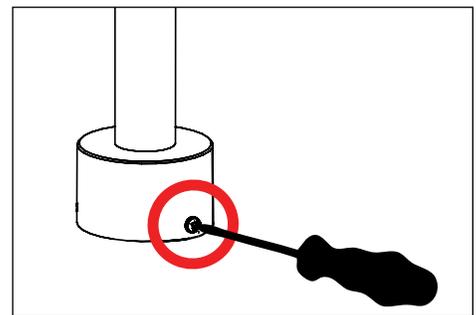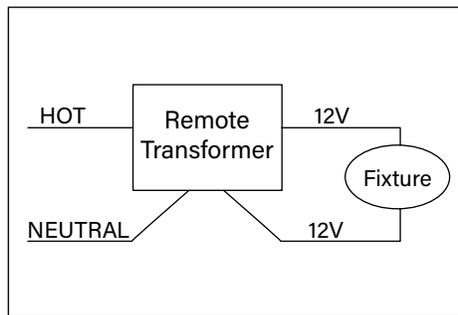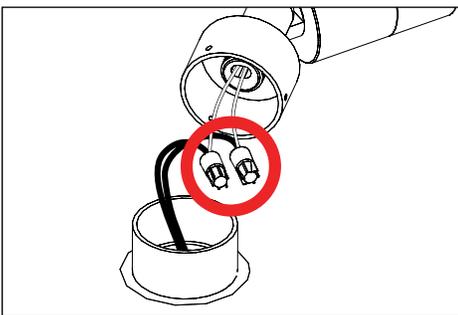

1. Make watertight connections from remote 12V transformer to fixture leads using waterproof wire connectors (not included).


WIRING DIAGRAM

2. Attach B cap to power pipe with three (3) #8-32 round head phillips stainless steel screws at base to secure to power pipe with phillips screwdriver.

⚠ Failure to use waterproof wire connectors will cause fixture to fail and VOID PRODUCT WARRANTY.

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**





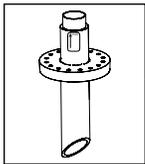


Standard Installation

POWER PIPE SYSTEM

POWER PIPE STAKE AND ADJUSTBLE STEM




Stake with Integral Transformer T-Housing with "C" Cap

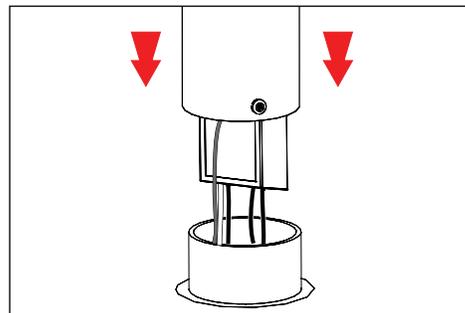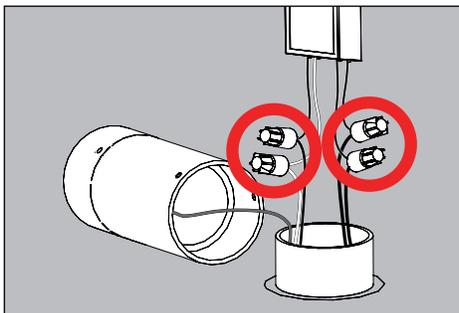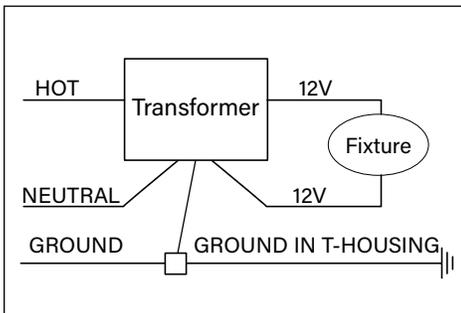

1. Make watertight connections from primary branch circuit to primary side of transformer using waterproof wire connectors (not included). Attach secondary leads from transformer to low voltage cable using waterproof wire connectors. (not included).
2. Attach ground from branch circuit to screw in transformer T-housing. Place transformer and connectors into T-housing.
3. Attach C cap and transformer T-housing to power pipe™ with three (3) #8-32 round head Phillips stainless steel screws at base of housing to secure to power pipe™ with phillips screwdriver.



⚠ Failure to use waterproof wire connectors will cause fixture to fail and VOID PRODUCT WARRANTY.

Stake with Integral Transformer and "B" Cap

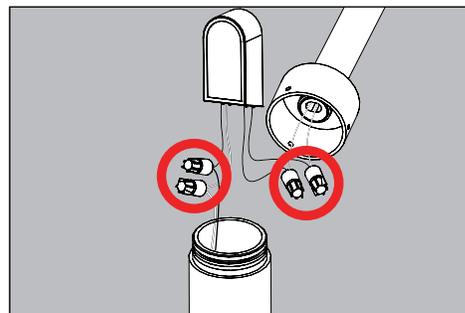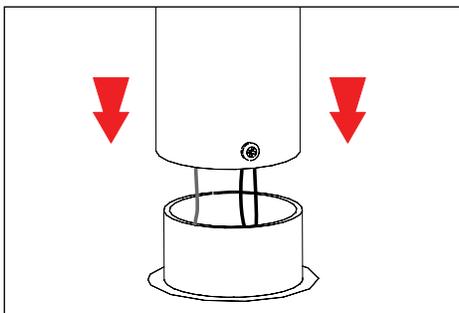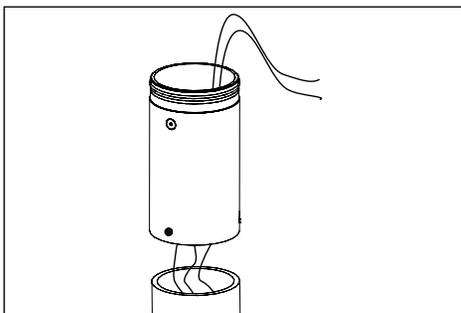

1. Pull primary branch circuit through transformer T-housing. Attach ground from branch circuit to screw in transformer T-housing.
2. Attach transformer T-housing to power pipe with three (3) #8-32 round head Phillips stainless steel screws at base of housing to secure to power pipe™ with phillips screwdriver.
3. Make watertight connections from primary branch circuit to primary side of transformer using waterproof wire connectors (not included). Attach secondary leads from transformer to fixture leads using waterproof wire connectors. (not included). See wiring diagram.

⚠ Failure to use waterproof wire connectors will cause fixture to fail and VOID PRODUCT WARRANTY.

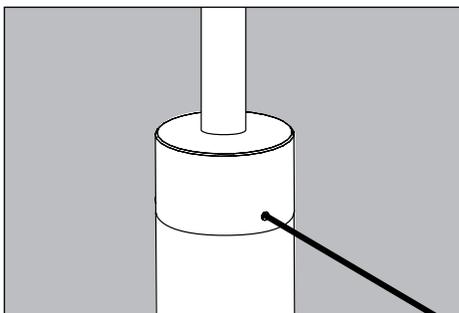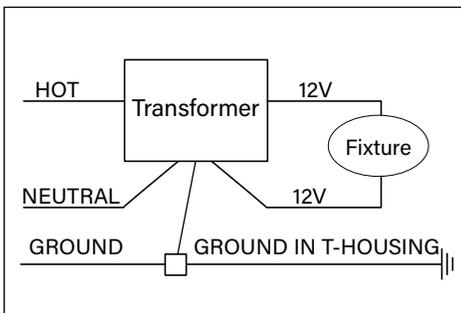


WIRING DIAGRAM

4. Place transformer and connectors into T-housing. Attach B cap to T-housing with three (3) #8-32 stainless steel set screws using a 5/64" allen wrench.

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**





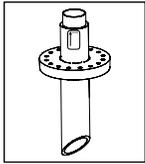


Standard Installation

POWER PIPE SYSTEM

POWER PIPE STAKE AND ADJUSTBLE STEM

Adjustable Stem Fixture Installation

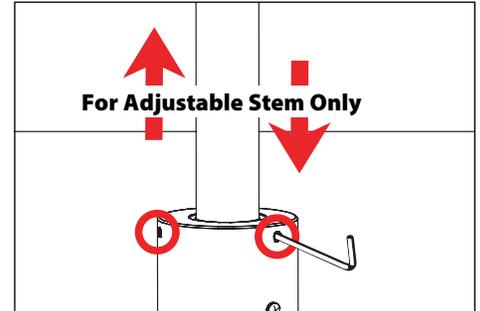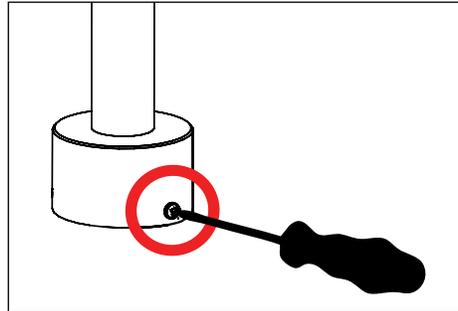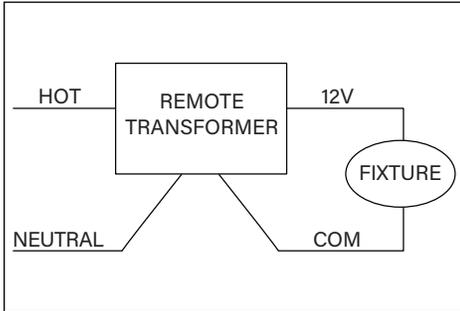

1. Make watertight connections from remote transformer to fixture leads using waterproof wire connectors (not included).
 2. Insert additional wires and connectors into power pipe . Place fixture on power pipe.
 3. Tighten three (3) #8-32 round head phillips stainless steel screws at base to secure to power pipe™ with phillips screwdriver.
 4. Slide stem up or down to desired height. Delrin bushing holds stem in position. Tighten three (3) #8-32 stainless steel set screws using a 5/64" allen wrench to lock mounting height in place. Unused stem length remains hidden inside power pipe to accommodate future landscape growth.
- ⚠ **Adjustable stem includes 60" of additional 18/2 direct burial low voltage cable.**
- ⚠ **Failure to use waterproof wire connectors will cause fixture to fail and VOID PRODUCT WARRANTY.**

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**



B-K LIGHTING	40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com	RELEASE DATE 06/19/2024	REFERENCE NUMBER INS001284
---------------------	---	----------------------------	-------------------------------